

(GB) Radio touch

## WK350, WK352, WK353 kallysta




### WK352 et WK353

Scope of delivery : Radio and speakers with design parts and fixing screws.

### Structure of the device

- ① Frame kallysta
- ② Radio touch cover WK663x
- ③ Speakers cover WK664x
- ④ Speakers insert
- ⑤ Radio touch insert.

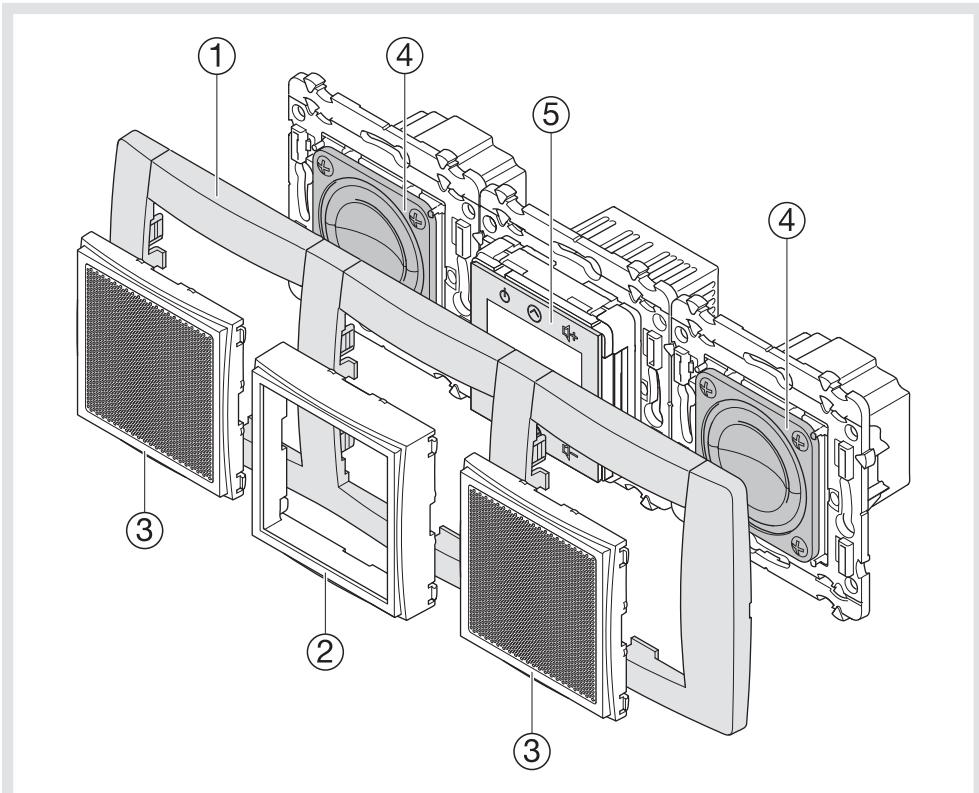

### Function

The radio receives FM stations and plays them back by attached speakers.

Additional functions :

- Capacitive touch display.
- Manual and automatic station search.
- 8 storage places.
- Display of receiving frequency and RDS information.
- Display of time and date in standby mode.
- Automatic setting of time and date with RDS reception.
- Awake with radio station or acoustic signal.
- Timer with acoustic signal after defined time (also during radio reception).
- Sleep-Mode with automatic switch off.
- Display brightness adjustable in 8 steps and 10 times.
- AUX-IN for external audio sources e.g. docking station or MP3-Player on multimedia socket outlet.

### Operation

Operation is exclusively done by touch control surfaces.



#### Operator control concept

The 6 symbolic operating elements arranged in the upper and lower display represent fixed push-buttons for frequent operating procedures.

- ⑨ Decrease volume
- ⑩ Increase volume
- ⑪ Scroll up/increase value
- ⑫ Touch Display with variable display/control panels

On the display, either a 3 to 5 lines menu is displayed.

**!** Longer lines of text are displayed continuously with a one-second delay.

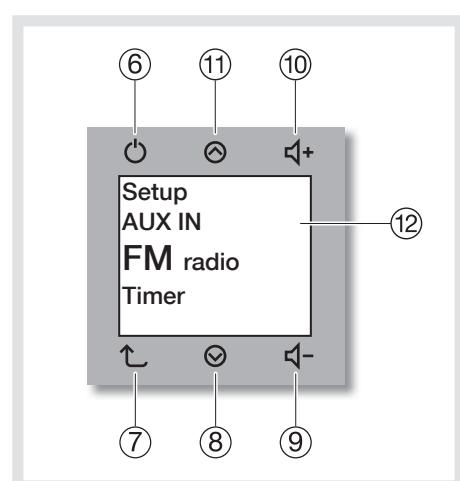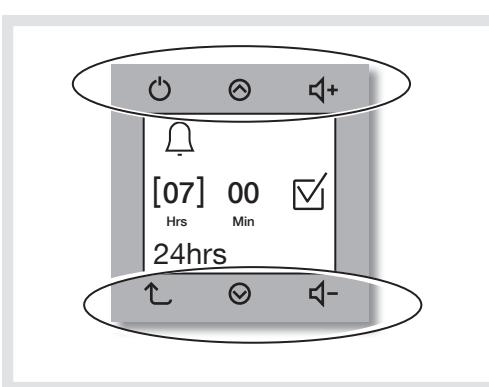

- ⑥ Switch-on/switch-off
- ⑦ Return to the superordinate operating level
- ⑧ Scroll down/decrease value



#### Proper use:

- Only suitable for use in indoors.
- Flush-mounting in conform wall box.

## Switching on the radio

The radio is in standby mode, the time and date are displayed.

- Touch display or push-button .

The radio plays back the station that was last set.

**!** Details such as station type, station name, transmitter frequency, song name, storage place and reproduction mode are displayed with RDS reception.

## Selecting a menu

The radio is switched on.

- Press button  until main menu.
- Press button  /  of the display.

The active display in the middle control panel - displayed in bold - changes.

- Touch the active display with the desired menu.

A new menu will open.

**!** It might be necessary to make a further selection in the menu before the settings are possible.

## Adjusting volume

The radio is switched on.

- Press the button  / .

The sound will be played back louder/quieter.

**!** During setting of volume pressing on  mute sound.


- Reactivate sound by double pressing on  or .

**!** Pressing the volume bar at the bottom in the middle or at the top - when adjusting the volume - adjusts the volume to 30, 60 or 100%.

## Setting the time and date manually

The radio is switched on.

- Press button  until main menu.
- Select control panel **Timer** with the buttons  /  and press.
- Select **Time/Date** with  /  and press.
- Select **Manual** with  /  and press.
- With  /  select the date format EU/US and apply with another control panel e.g. year.
- With  /  select the year and accept with month.
- With  /  select the month and apply with day.
- With  /  select the day and apply with hours.
- With  /  select the hours and apply with min.
- With  /  select the minutes and with  save all settings.

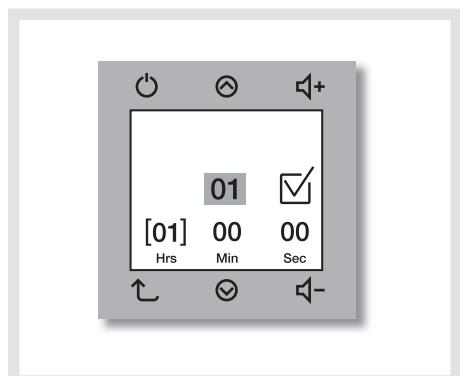

## Setting FM stations with automatic search

The radio is switched on.

- Press button  until main menu.

- Select control panel **FM radio** with  /  and press.
- Select control panel **Automatic Scan** with  /  and press.

The first station found will be played back and displayed.

- With  continue the automatic search without saving
- or
- Save the station (see **Saving station**).

## Setting FM stations with manual search

The radio is switched on.

- Press button  until main menu.
- Select control panel **FM Radio** with  /  and press.
- Select control panel **Manual Seek** with  /  and press.
- Set the reception frequency with  /  increase/decrease in 0.1 MHz increments until a station is received noise-free.
- With  continue the manual search without saving
- or
- Save the station (see **Saving station**).

## Saving a station

The station searched for is played back.

- Press the tuning indicator in the control panel.
- Press **Save**.
- Select **New Station** with  /  and press to save
- or
- Select saved radio station with  /  and press.

## Calling up a saved station

The radio is switched on.

- Press button  until main menu.
- Select control panel **FM Radio** with  /  and press.
- With  /  select the saved station and press.

**!** If a storage place is called up, it is possible with  /  to skip to the next or previous storage place.


## Deleting a station

- Press button  until main menu.
- Select station to delete with  /  and press.
- Press again the station.
- Select **Delete** with  /  and press.

## Setting the wake up

The radio is switched on.

- Press button  until main menu.
- Select menu **Timer** with the  /  and press.
- Select **Wake Up** with  /  and press.
- Select **On** with  /  and press.
- Switch over the display **24/AM/PM** if necessary.
- Press the time to be set (hours or minutes). With  / , set the time.
- Press  and with  / , select a radio station or electronic wake up signal and press.
- With  apply the settings.

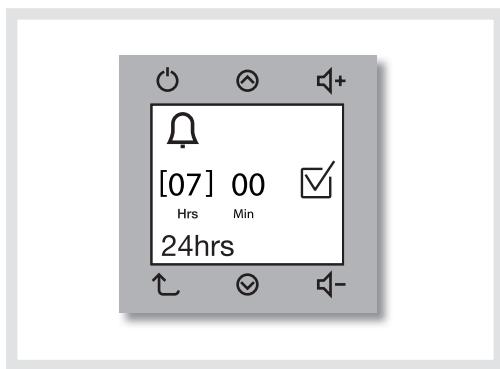

## Setting to external audio device

The radio is switched on.

- Press button  until main menu.

**!** If the Wake Up is activated and the radio is switched off, the Wake Up symbol  will be displayed.

**!** Wake Up procedures can be ended with  or delayed by 5 minutes respectively (**Snooze**) by pressing another control panel.

## Setting up countdown

The radio is switched on.

- Press button  until main menu.
- Select control panel **Timer** with  /  and press.
- Select **Countdown** with  /  and press.
- Press the time to be set (hours, minutes or seconds). With  / , set the time displayed in brackets.
- Accept the time setting with  and activate the countdown.

**!** Once the time has elapsed - also during radio reception - an acoustic signal will sound.

**!** The **Sleep Mode** function can be set accordingly.

## Setting the language

- Press button  until main menu.
- Select control panel **Setup** with  /  and press.
- Select **Language** with  /  and press.
- Select the corresponding language with  /  and press.

**!** **Reset to Defaults** and **Sound** functions can be set accordingly.

## Setting background display color

- Press button  until main menu.
- Select control panel **Setup** with  /  and press.
- Select control panel **Display** with  /  and press.
- Define background display color (white or black) with  /  and press .

**!** The change of background display color is taken into account and the menu of setting backlight displays.

## Setting backlight

- Press button  until main menu.
- Select control panel **Setup** with  /  and press.
- Select control panel **Display** with  /  and press.
- Define operation and time of backlight : On - 60 mn - 45 mn - 20 mn - 10 mn - 5 mn - 60 sec - 30 sec with  /  and press.
- Define luminosity : 0 to 100 % with  /  and press.


**!** The **Reset to Defaults** and **Sound** functions can be set accordingly.

## Setting to external audio device

- Press button  until main menu.
- Set control panel **AUX In** with  /  and press.

## Information for electricians

### Installation and electrical connections

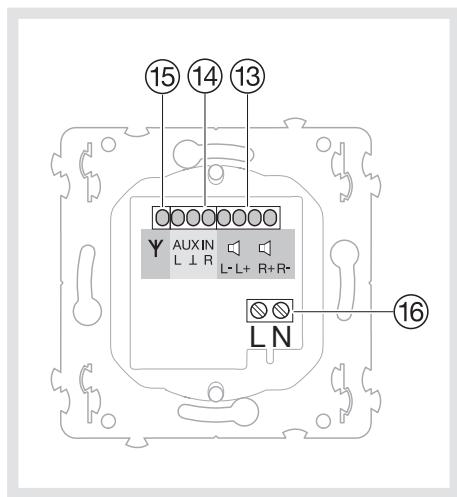

#### Connections on the radio insert

- ⑬ Speakers (L, R)
- ⑭ External audio devices AUX IN
- ⑮ Antenna
- ⑯ Lead 230 V~

#### Connecting radio to lead

The lead is protected by means of a circuit breaker (max 16 A).

- Connect lead 230 V~ to the terminals L and N.

#### Connecting speakers and auxiliary equipment




If the speakers are connected to the operating voltage in a shared cable, this can reach the speaker cables. Electric shock is possible if the speaker cables are touched.

An electric shock can lead to death.

! Connect at least one speaker for using the radio.

- Attach the speaker to the terminals  $\triangleleft+$  (brown),  $\triangleleft-$  (blue).

- Connect additional extension units if necessary.

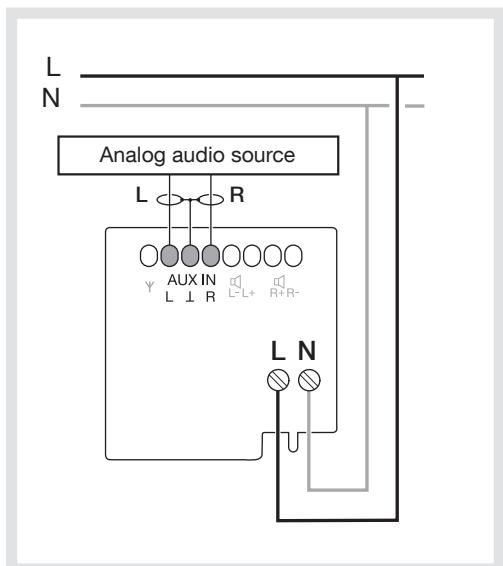

! In stereo mode with 2 speakers, it is possible to change to mono mode manually via the control panel with the tuning indicator.

! Use shielded cables for interference-free signal transmission. Attach the shield  $\perp$  to the terminal according to the terminal labelling.

! In combinations or in the immediate vicinity of electronic devices (e.g. ballasts) the radio reception can be disturbed. Before installation at the assembly location, put the radio into operation and test it for interferences. In case of interferences, increase the distance to the source of interference.

! When using a wire as an external aerial, make sure that the aerial does not come into contact with 230 V or is insulated.

#### Assembling the devices

The inserts are connected.

- Place the inserts ④ ⑤ into the wall box in the correct position and fasten with the screws provided.
- Position the frame kallysta ① over the inserts and attach radio touch ② and speakers covers ③.
- Guide the contact pins on the radio cover carefully.

! Radio Touch and speakers must also be assembled separately from one another with 3 frame 1gang or in combinations.

#### Commissioning the radio

The radio is assembled.

- Switch on operating voltage.

The display shows Enter Time/Date.

- Press control panel Enter Time/Date. The control panels Time Setup Manual Seek and Automatic appear.

- Press Automatic.

- The time and date are set automatically as soon as a station with RDS reception is saved (see **Setting FM station with automatic search**).

! If no RDS signal is received Manual must be selected (see **Setting time and date manually**).

! When using 2 speakers, it is necessary to activate both speakers under **Setup, Sound**.

! When using an antenna, it is necessary to activate the antenna under **Setup, FM Antenna**.

## Specification

### Radio touch

Operating voltage:	230 V~, 50/60 Hz
Rated current:	0,2 A
Power consumption at rated output power:	7 W
Stand-by:	1,3 W
Music rated output power (Sinus) per channel:	1,5 W
Speaker impedance:	4 ... 8 $\Omega$ / channel
Input impedance AUX IN:	10 k $\Omega$
Frequency range:	87,5 ... 108 MHz
Operating temperature:	5 ... 40 °C
Isolation class:	II
Protection class:	IP21
Schock resistance:	IK03
Connection terminals:	screw terminals
Lead connection:	1 to 2,5 mm $^2$
Speaker/AUX connection:	0,5 to 1 mm $^2$
Cable length:	
- Speakers:	max. 20 m
- AUX-IN:	max. 3 m
- Extension units:	max. 50 m
Installation depth:	33 mm

### Speaker

Speaker impedance :	8 $\Omega$
Sinus output/music output:	4/8 W
Frequency range:	170 Hz ... 20 kHz
Prefabricated cable length approx.:	env. 30 cm

### Accessories

Loudspeaker	WK351
Ceiling speaker	WUZ671
Ceiling speaker 2"	WUZ672

## Troubleshooting

### Poor FM radio reception

**Cause:** Internal FM antenna is not sufficient for reception.

- Attach an additional antenna.

**Cause:** Stereo playback is selected.

- Switch to Mono.


### Poor audio signal when using with external audio device

**Cause:** An insufficiently shielded cable was used for the connection.

- Replace the connecting cable for the external audio device.

**Cause:** Shield of the cable is not connected correctly to the terminal of the AUX IN connection.

- Check the connection of the shield and rectify if necessary.

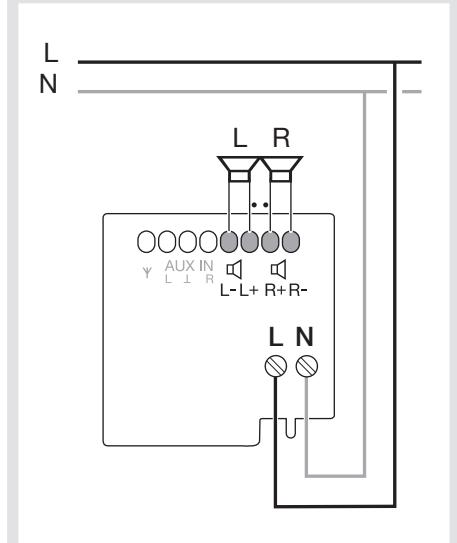



The device is at the end of its serviceable life never throw it away in the household waste under any circumstances.

When used as intended, this device complies with the requirements of the RTTE Directive (1999/5/EC).

A complete declaration of conformity can be found on the Internet at [www.hager.com](http://www.hager.com)