

WYA47xF User guide

GB Control for electric blinds and Shutters





This device must be installed only by a qualified electrician according to the installation standards in force in the country. Not for outdoor use.

Usable in all Europe and in Switzerland

Hereby, hager Controls, declares that this shutter controller output is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The CE declaration can be consulted on the site: www.hagergroup.net

Standards

NF EN 60669-2-1
EN 301 489-1 V1.8.1
EN 301 489-3 V1.8.1
EN 300 220-2 V2.3.1

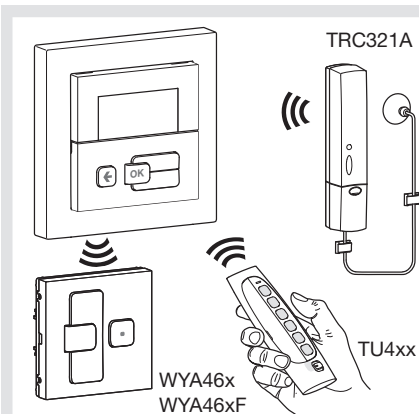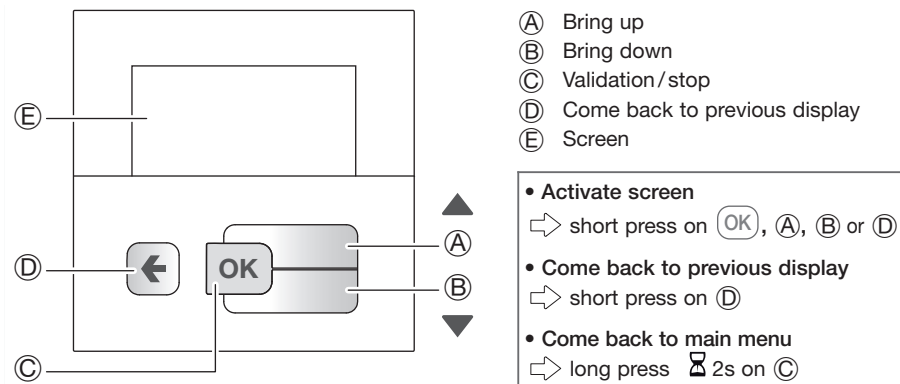


Settings

Langage



Time settings

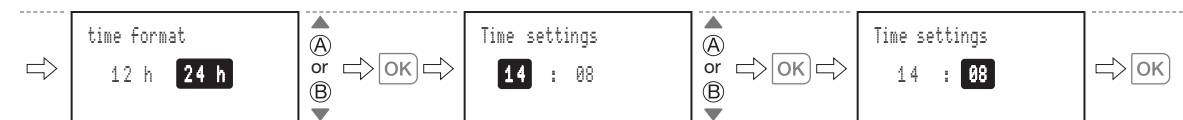


Date settings



Manual mode




Keyboard lock

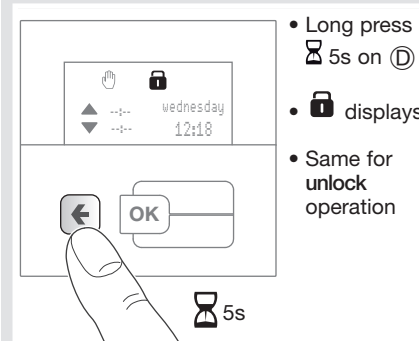


Main menu

From manual mode

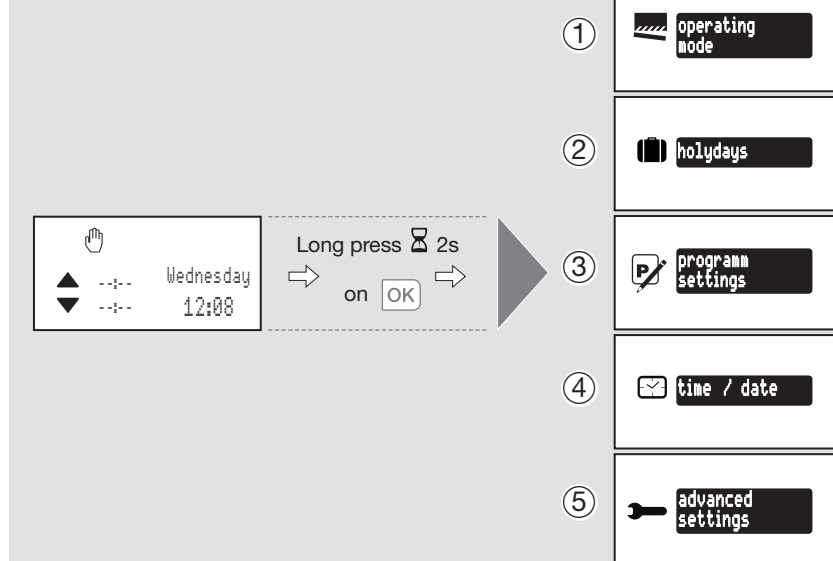


1 Operating mode

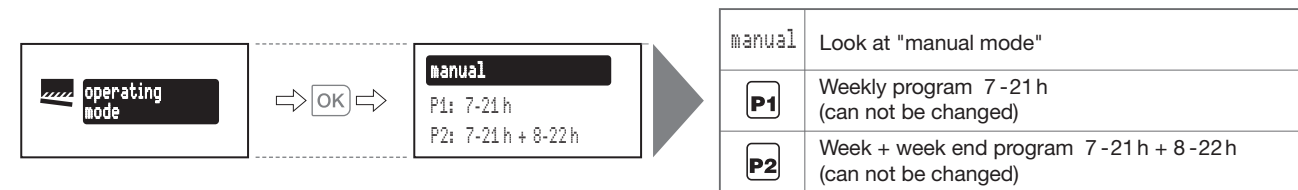


2 Holidays


To activate the holiday mode, set **P1** ... **P4** or (holiday mode not available in manual mode).

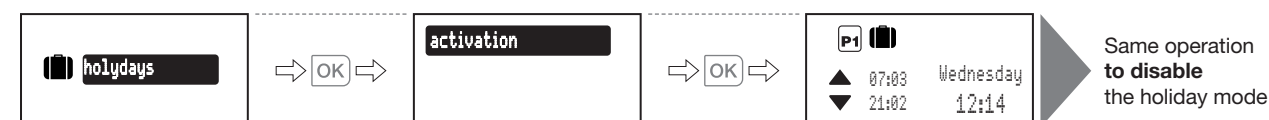


3 a Program settings **P3** and **P4** (can be changed)

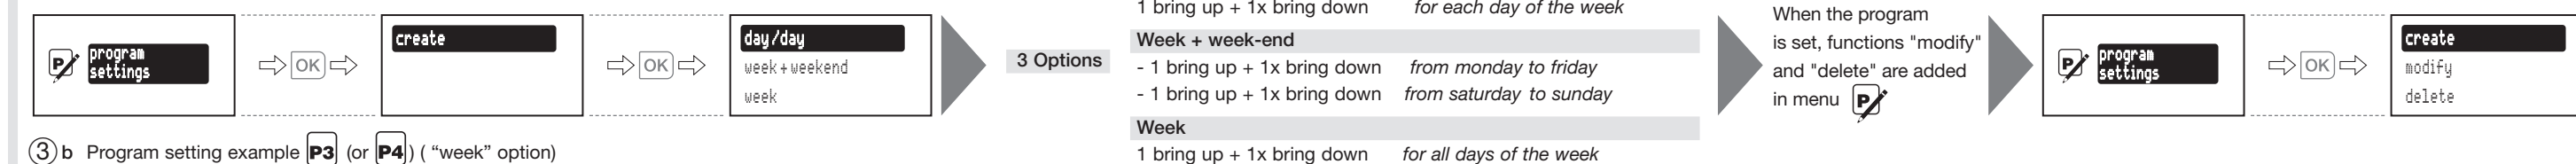


3 b Program setting example **P3** (or **P4**) ("week" option)

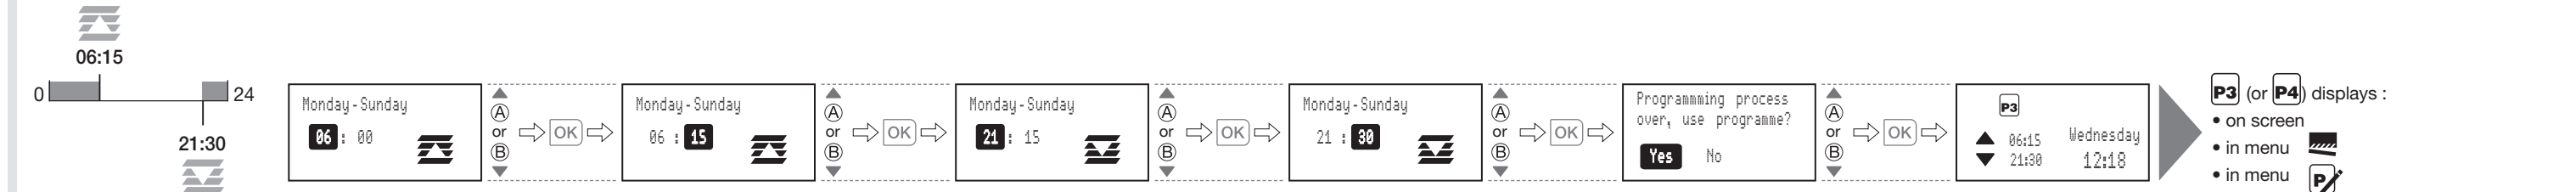

3 c Program change **P3** (or **P4**)

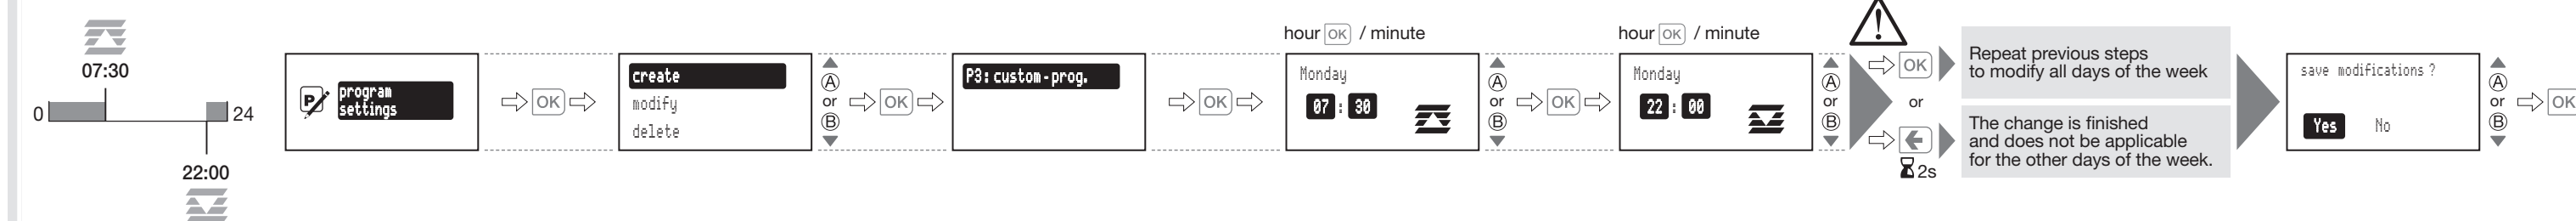

3 d Add 1 bring up/bring down in program **P3** (or **P4**)

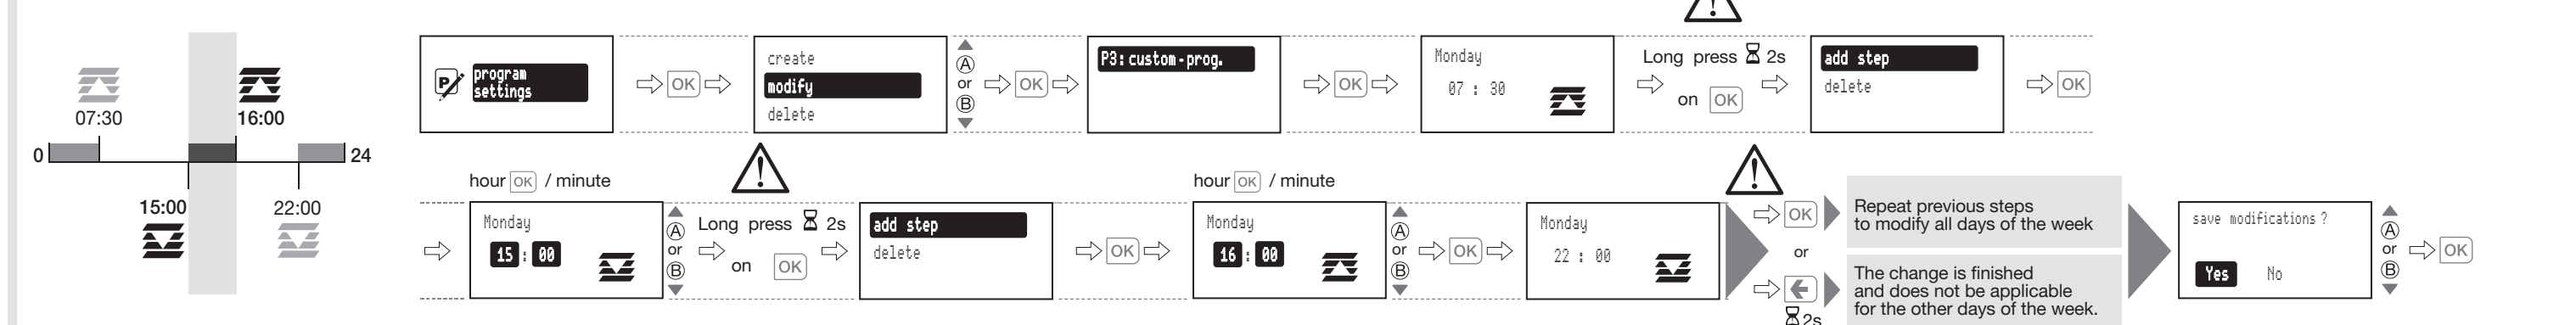

Advanced settings guide

