



ⓁⒹ	Montageanleitung	ⓁⒹ	Upute za montažu
ⓁⒻ	Notice d'instructions	ⓁⒻ	Szerelési útmutató
ⓁⒼ	Mounting instructions	ⓁⒼ	Montavimo instrukcija
ⓁⒽ	Montage instructie	ⓁⒽ	Montāžas instrukcija
ⓁⒿ	Monteringsvejledning	ⓁⒿ	Instrukcja montażowa
ⓁⓁ	Asennusohje	ⓁⓁ	Intruțiuni de montare
ⓁⓃ	Montasjeanvisning	ⓁⓃ	Návod na montáž
ⓁⓄ	Monterings instruktioner	ⓁⓄ	Указания по установке
ⓁⓅ	Istruzioni di montaggio	ⓁⓅ	Инструкции за монтаж
ⓁⓆ	Instrucciones de montaje	ⓁⓆ	Οδηγίες χώνευσης
ⓁⓇ	Instruções de montagem	ⓁⓇ	Navodilo za montažo
ⓁⓈ	Montážní návod	ⓁⓈ	Paigaldusjuhised
ⓁⓉ	Uputstvo za montažu	ⓁⓉ	Leiðbeiningar
ⓁⓊ	Инструкції з установки	ⓁⓊ	دليل التركيب

**ⓁⒹ SGIM mit Steckdosen**


**Vor dem Ein- und Ausstecken des SGIM ist der 4 polige FI-LS auszuschalten**

**ⓁⒻ SGIM avec prises**

**Avant de brancher et de débrancher le SGIM, le RCBO à 4 pôles doit être éteint**

**ⓁⒼ SGIM with socket**

**Before plugging in and unplugging the SGIM, the 4 pol RCBO must be switched off**

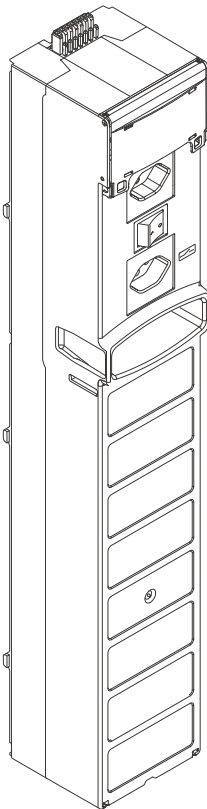

714-330-000

