

Safety instructions

Electrical equipment must only be installed and assembled by a qualified electrician in accordance with the relevant installation standards, regulations, directives and safety and accident prevention directives of the country.

Failure to comply with these installation instructions may result in damage to the device, fire or other hazards.

Function

The TV outlets are used for supplying digital or analogue TV signals.

Version	Connector	Area of application
TV outlet	IEC-jack	For use as single socket

Correct use

- For the flush-mounted installation in standard wall boxes (wall box depth ≥ 47 mm).
- Only suitable for use in indoor areas with no drip and no spray water.

Technical data

Frequency range:


5 ... 1000 MHz

Information for electricians

Installation and electrical connection

Preparing the device for installation

1

 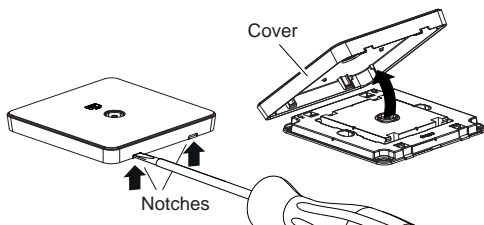


- Carefully loosen the cover on the notches with a flat-blade screwdriver (1).
- Lift up and remove the cover.



Connecting the TV outlet

- Shorten and route coaxial transmission line in the wall box. When doing so, do not bend coaxial transmission line too far.

2A




- Strip coaxial transmission line and attach supplied F-plug (2A).

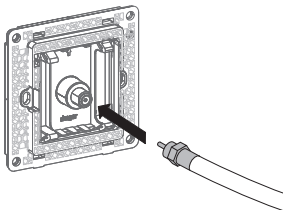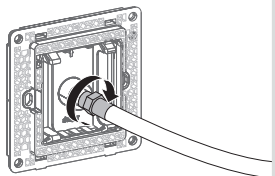2B**2C**

- Connect and screw the assembled line to the F-jack on the rear of the TV outlet (2B/2C).


Installing the device into the wall box

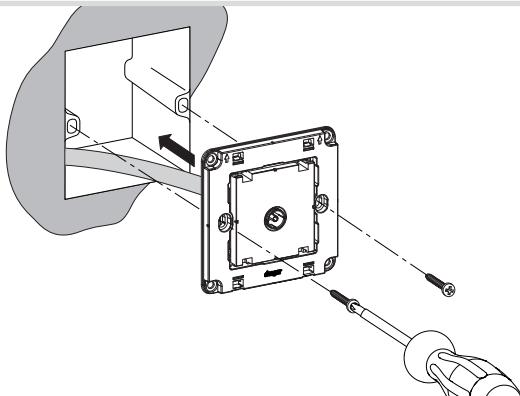3

- After wiring, fix the device with the two screws attached into the wall box (3).

Assembling the cover

4

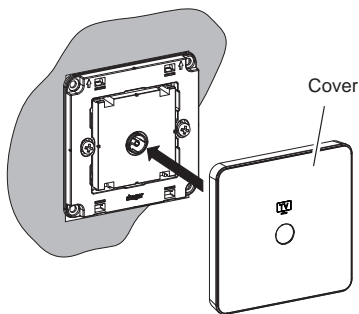

- Place the cover in the correct position and snap it onto the device (4).

i 2-5gang frames are available for multiple combinations.