









- (DE)
- (NL)
- (SE)
- (ES)
- (EN)
- (FR)


Schalter 1-fach Wago WINSTA®
 Schakelaar 1-voudig Wago WINSTA®
 1-vägs brytare Wago WINSTA®
 Interruptor de 1 elemento Wago WINSTA®
 Switch 1-gang Wago WINSTA®
 Interrupteur 1poste Wago WINSTA®





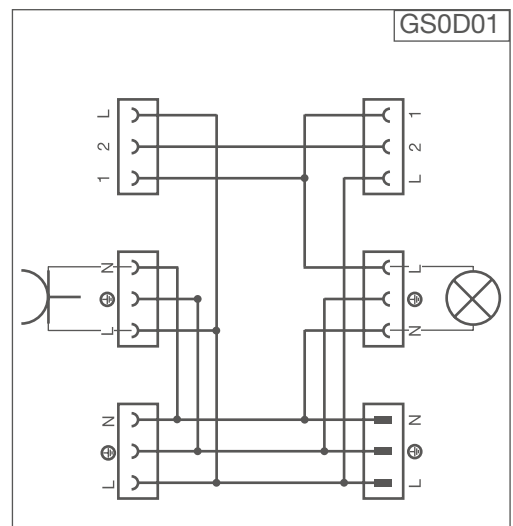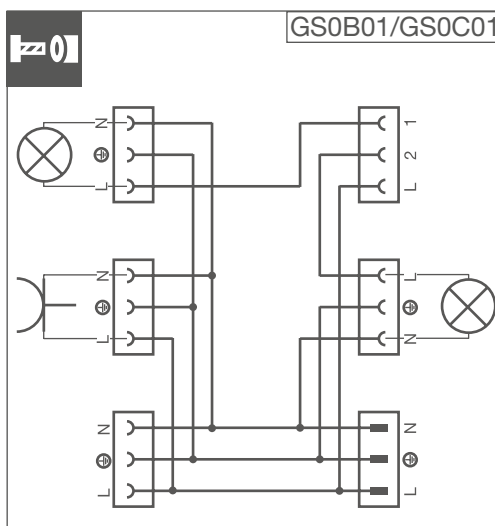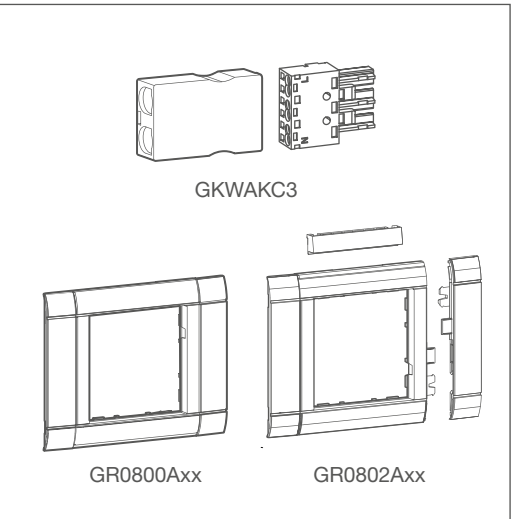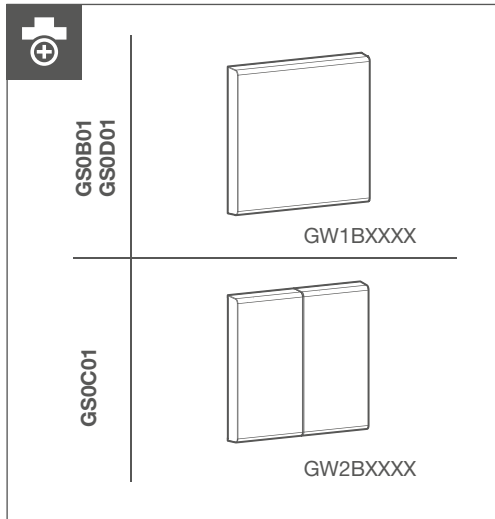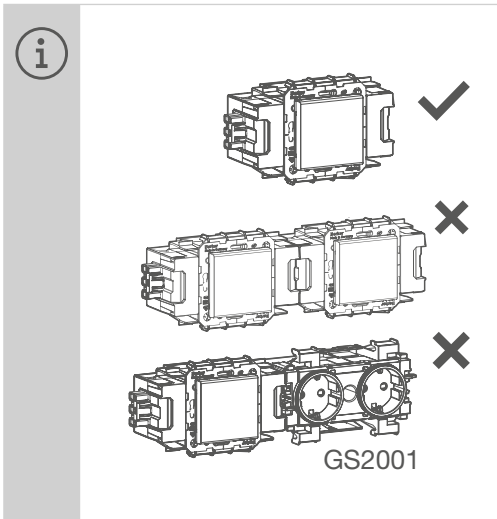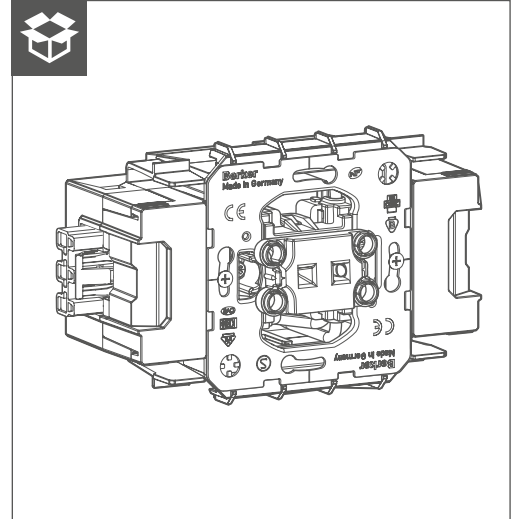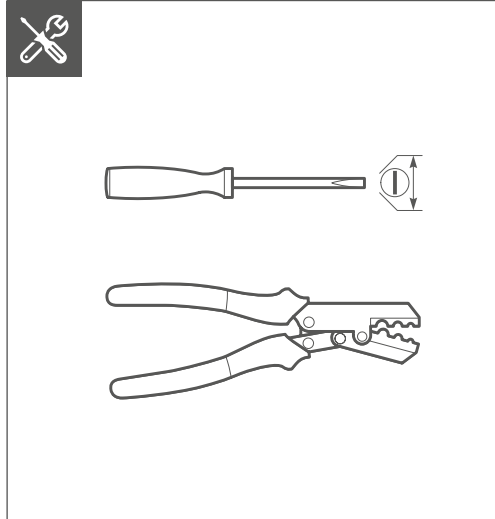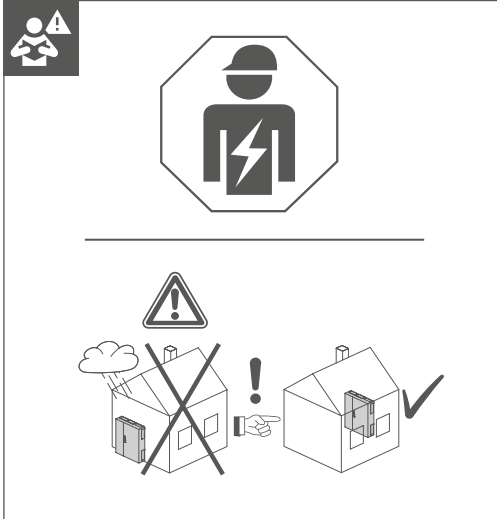


(DE) Montageanleitung
 (NL) Montage instructie
 (SE) Montageanvisning
 (ES) Instrucciones de montaje
 (EN) Mounting instructions
 (FR) Notice d'instructions

GS0XXX












Switch 1-gang Wago WINSTA®






 	GKWAD03006 GKWAD03015 GKWAD03025 GKWAD03050	G4713 + 
	GKWAD03006 GKWAD03015 GKWAD03025 GKWAD03050	G4703 + 
	GKWAD23006 GKWAD23015 GKWAD23025 GKWAD23050	GKWAKC3 + GKWAJC3 + 

GS0B01
GS0C01
GS0D01

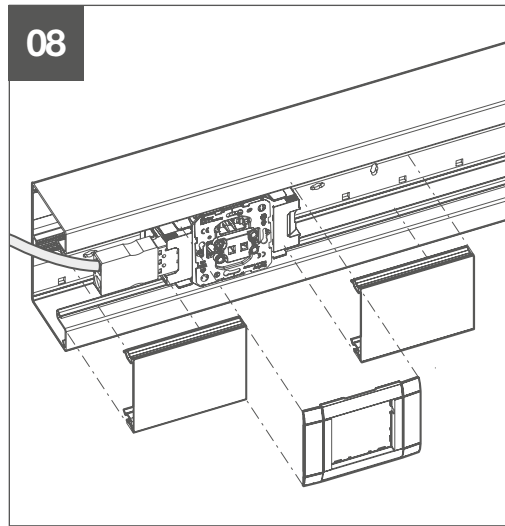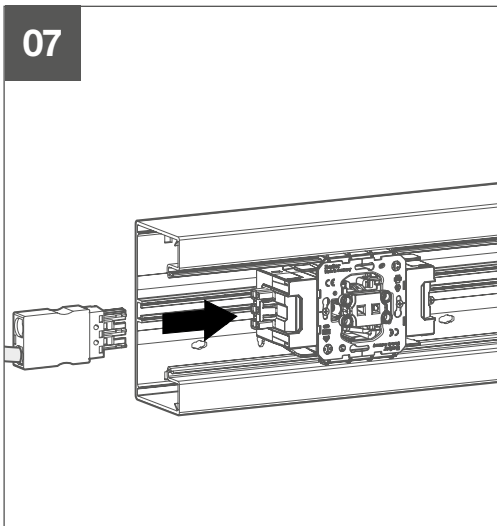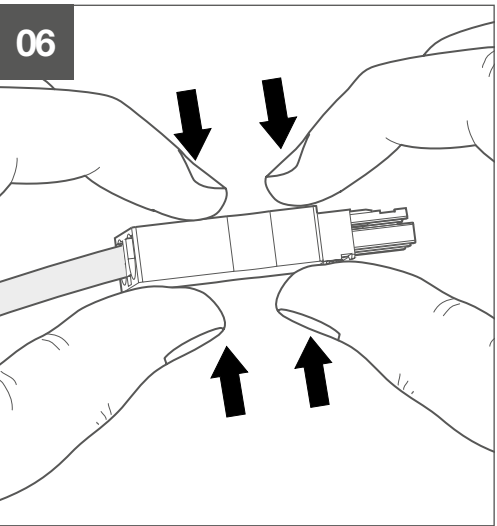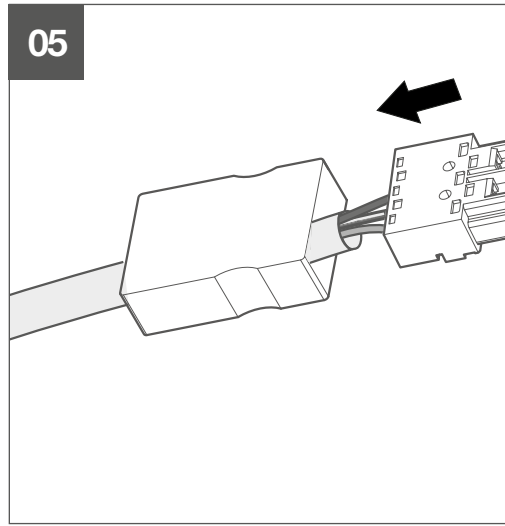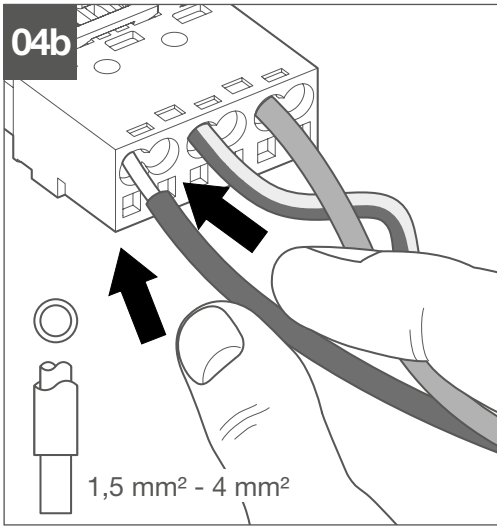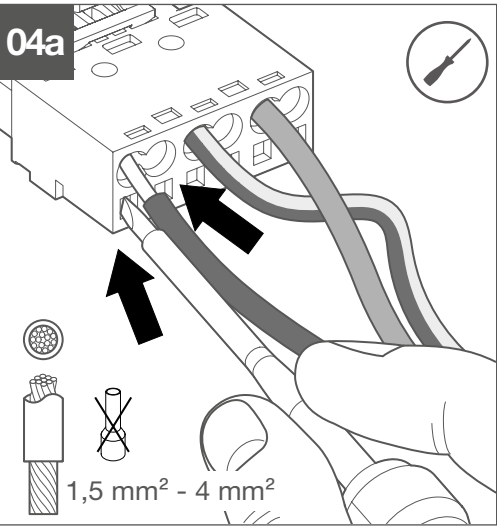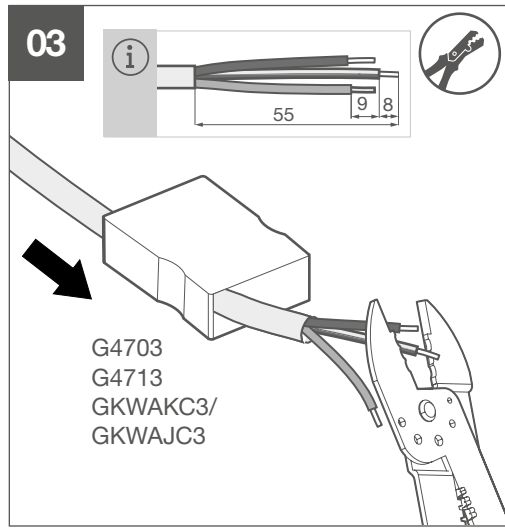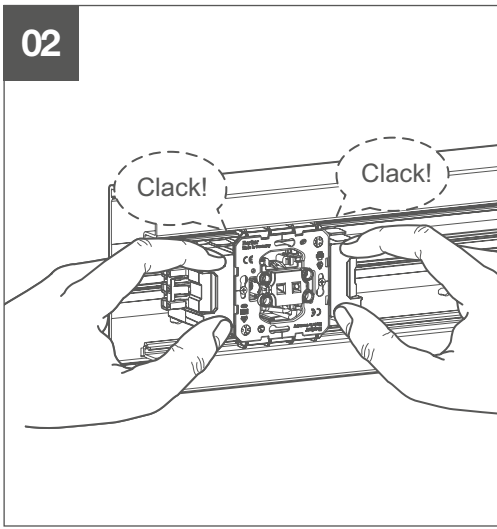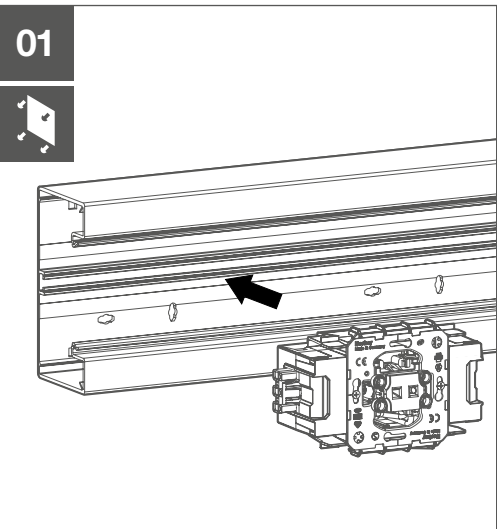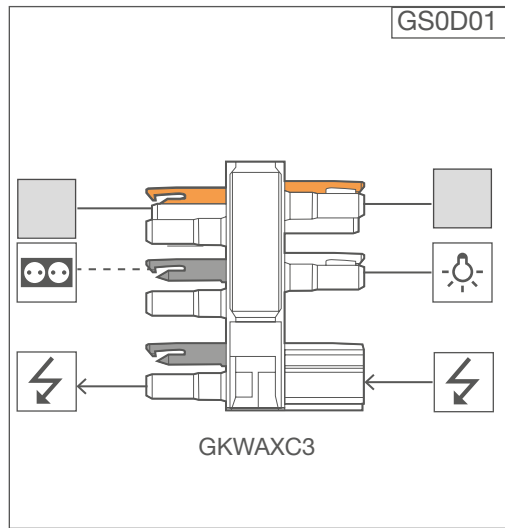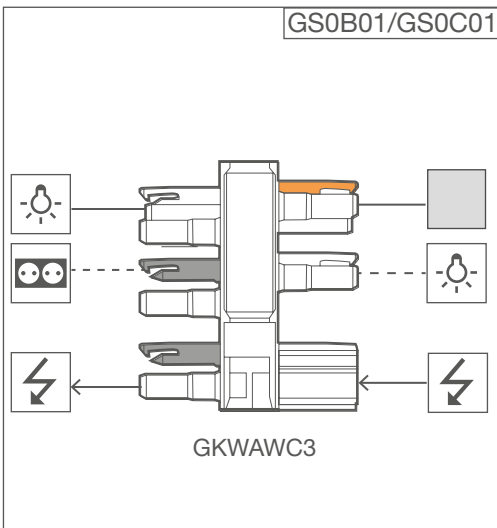


09


Clack!

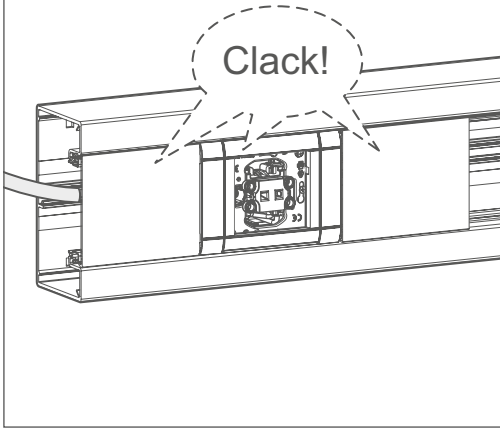


10

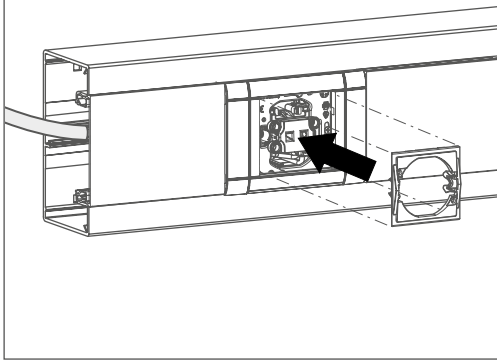


11

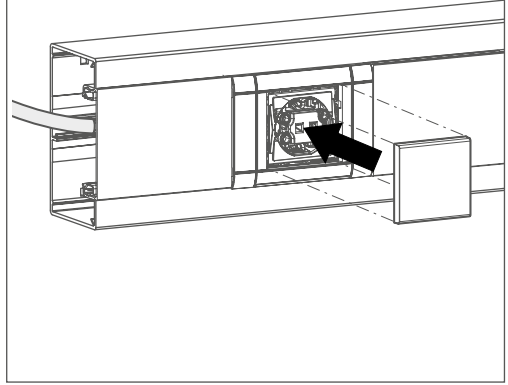


12

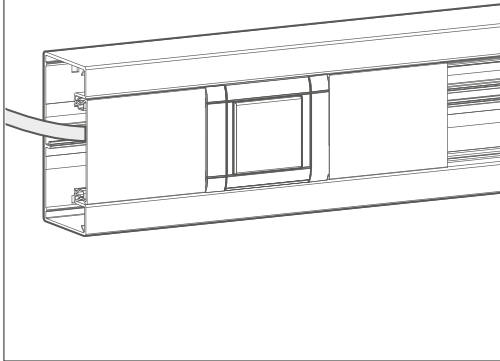


01

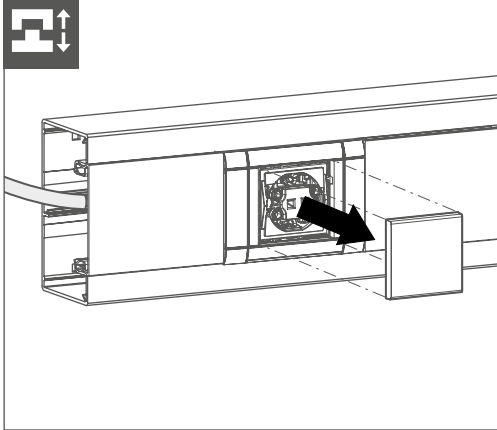

02

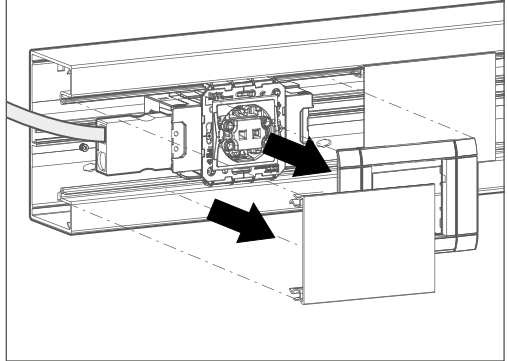

03

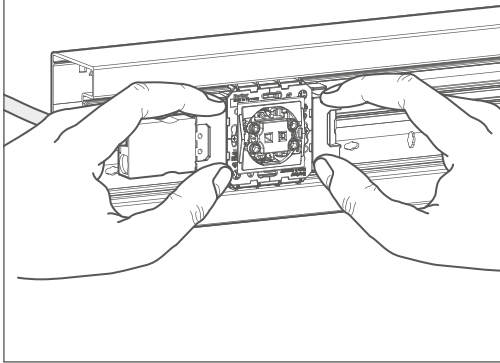

04

