

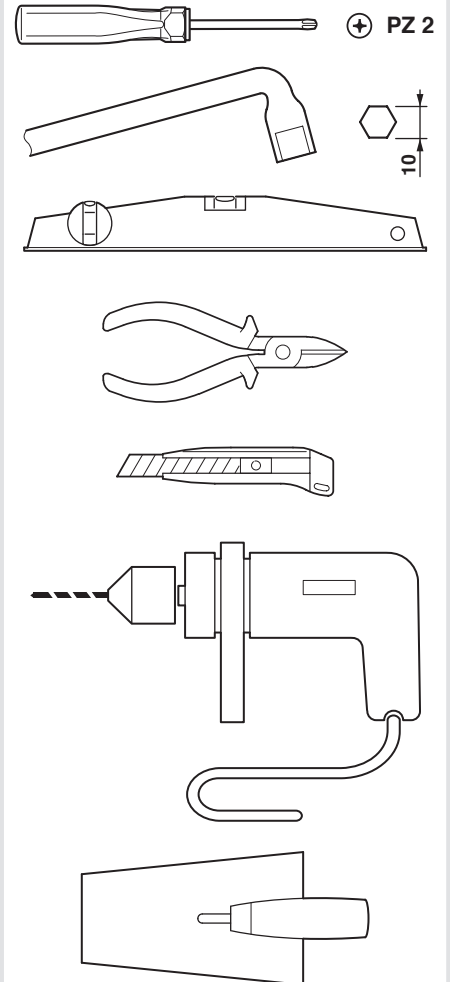
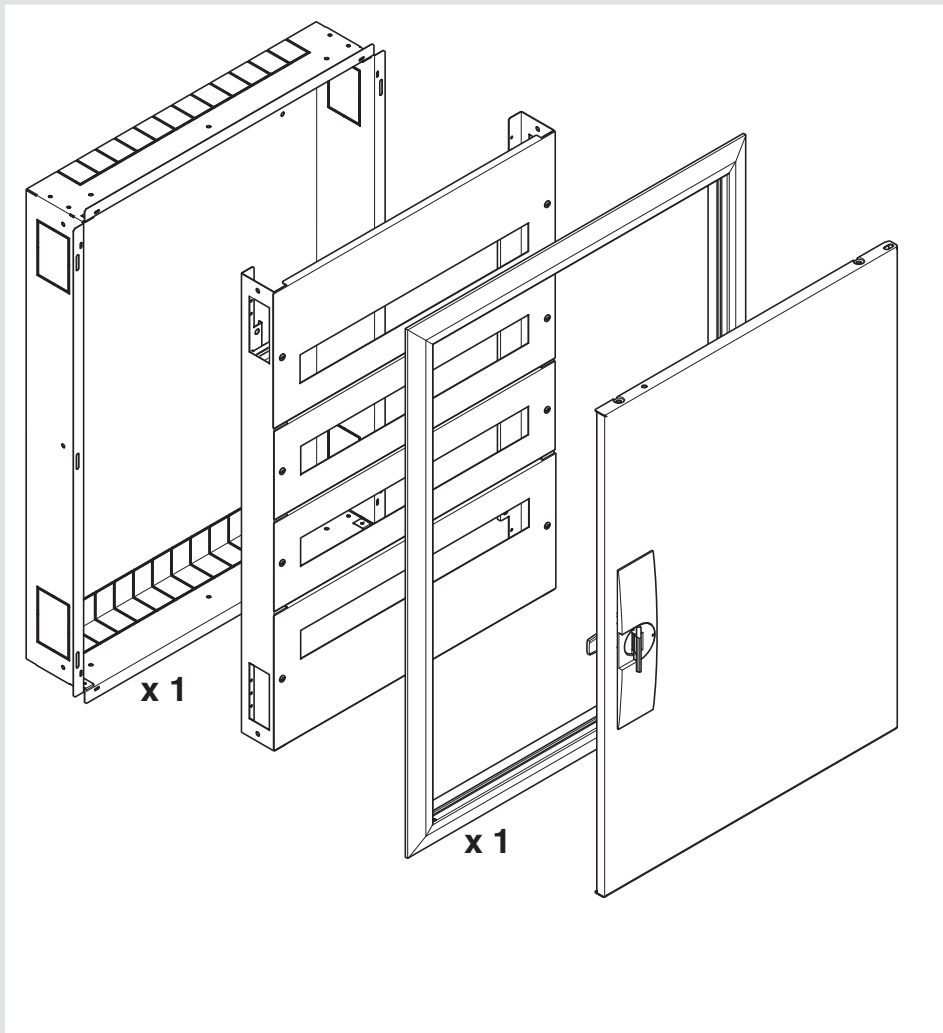


fw2


- (DE) Montageanleitung
- (FR) Notice d'instructions
- (GR) Mounting instructions
- (NL) Montage instructie
- (DK) Monteringsvejledning
- (FI) Asennusohje
- (NO) Montasjeanvisning
- (SE) Monteringsinstruktioner
- (IT) Istruzioni di montaggio
- (ES) Instrucciones de montaje
- (PT) Instruções de montagem
- (CZ) Montážní návod
- (BA) Uputstvo za montažu
- (HR) Upute za montažu
- (HU) Szerelési útmutató
- (LT) Montavimo instrukcija
- (LV) Montāžas instrukcija
- (PL) Instrukcja montażowa
- (RO) Instrucțiuni de montare
- (SK) Návod na montáž
- (RU) Инструкция по монтажу
- (BG) Инструкции за монтаж
- (GR) Οδηγίες χώνευσης
- (SI) Navodilo za montažo
- (EE) Paigaldusjuhised
- (IS) Leiðbeiningar

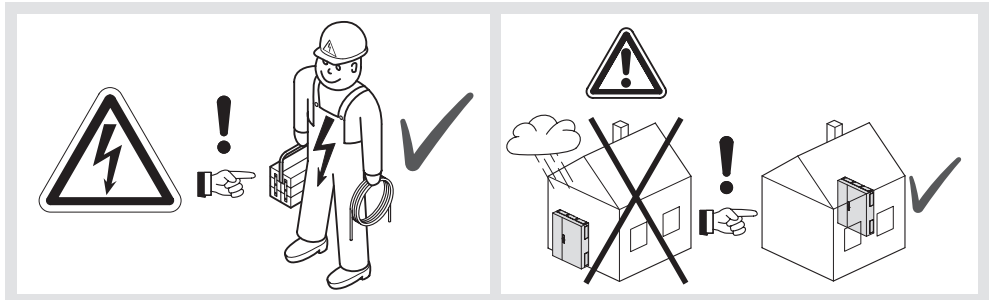

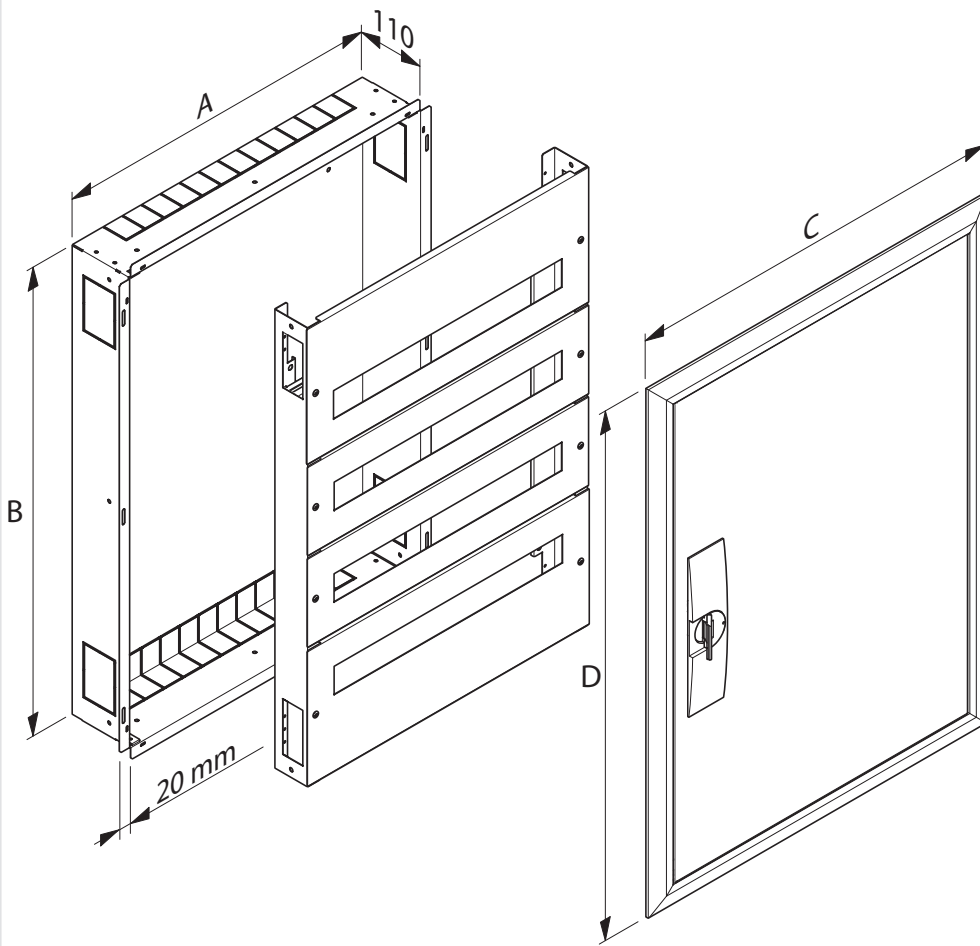


	A (mm)	B (mm)	C (mm)	D (mm)
FW312F	334	620	406	692
FW412F	334	770	406	842
FW512F	334	920	406	992
FW612F	334	1070	406	1142
FW324F	550	620	622	692
FW424F	550	770	622	842
FW524F	550	920	622	992
FW624F	550	1070	622	1142
FW436F	766	770	838	842
FW536F	766	920	838	992
FW636F	766	1070	838	1142
FW736F	766	1220	838	1292

FW---FD

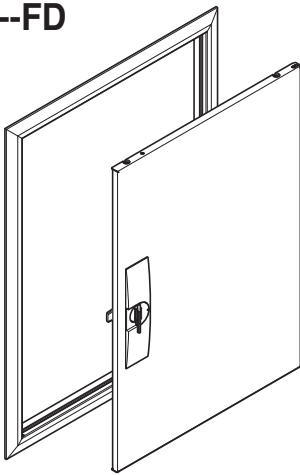

FW---FB

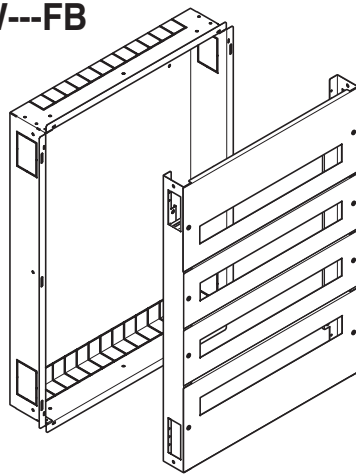

FW---F

