

Switches & Sockets



Care and cleaning instructions

When cleaning the surfaces of our sockets and switches, always use a damp non-abrasive cloth.

Ensure to:

- Never use rough cloths or materials that can scratch the plates
- Never use harsh chemical cleaners as these deteriorate and weaken the PC material, leading to future cracking.
- Never put cover plates in a dishwasher
- Never use water over 60°C for covers plates or over 40°C for painted covers

Cleaning

Using a non-abrasive damp cloth, simply wipe over the switches or sockets until clean. If no change occurs, there is a possibility the stain or marks are permanent and may not be removeable.

Under no circumstances should any abrasive chemicals or solvents of either powder or liquid type be used. For example, Ajax®, Windex® or similar cleaners.

Specific for Matt Products

Our matt products are finished with a high quality UV stabilised paint finish and care should be taken when inserting plugs into sockets to avoid 'drawing' on the painted surface by the pins of the appliance plug.

However, if marking appears - use a white or clear gum pencil eraser to remove any visible marks where possible.



:hager