
Operating instructions

Door communication system

IP via 2-wire

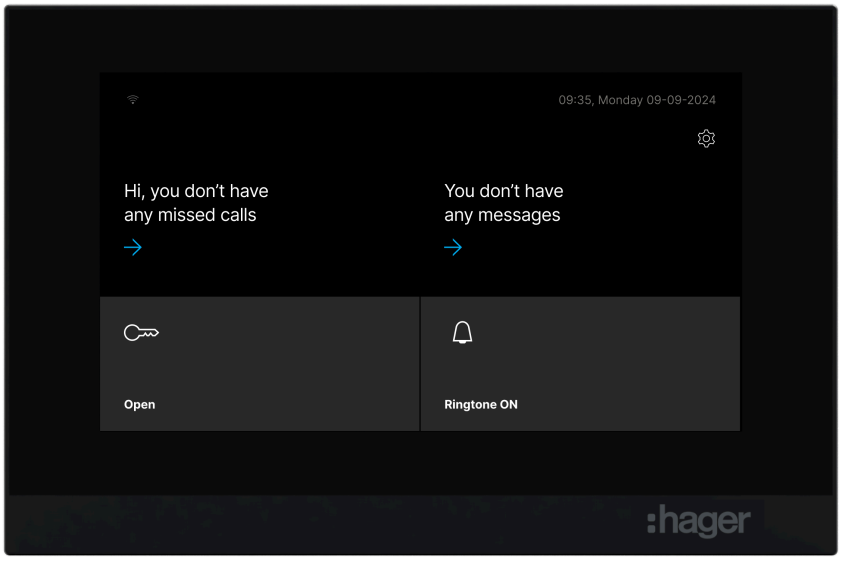

intercom view indoor station

RTQ60xX

CE

:hager

EN

1 Functional description

The intercom view is a device for the Hager intercom door communication system. The intercom view is an indoor station that communicates with outdoor stations, unlocks door openers, forwards calls and performs special functions.

The intercom view is compatible with the Hager intercom app, which can be used to connect smartphones.


Intended use

- For installation into a wall box according to DIN 49073
- Only suitable for use in indoor areas with no drip and no spray of water
- Not compatible with door communication systems of other manufacturers

Product characteristics


- 7" touchscreen display
- Hands-free
- Ajustable ring tone volume and call volume
- 5 ring tone melodies, individually assignable
- Connection for storey bell push-button
- Call forwarding
- Parallel operation of several indoor stations with the same address
- Automatic door release function
- App compatibility by connecting to the tenant network via WiFi
- Independent commissioning of the app by residents using a QR code
- Message receipt
- Automatic image storage
- Different languages can be configured

2 Homepage

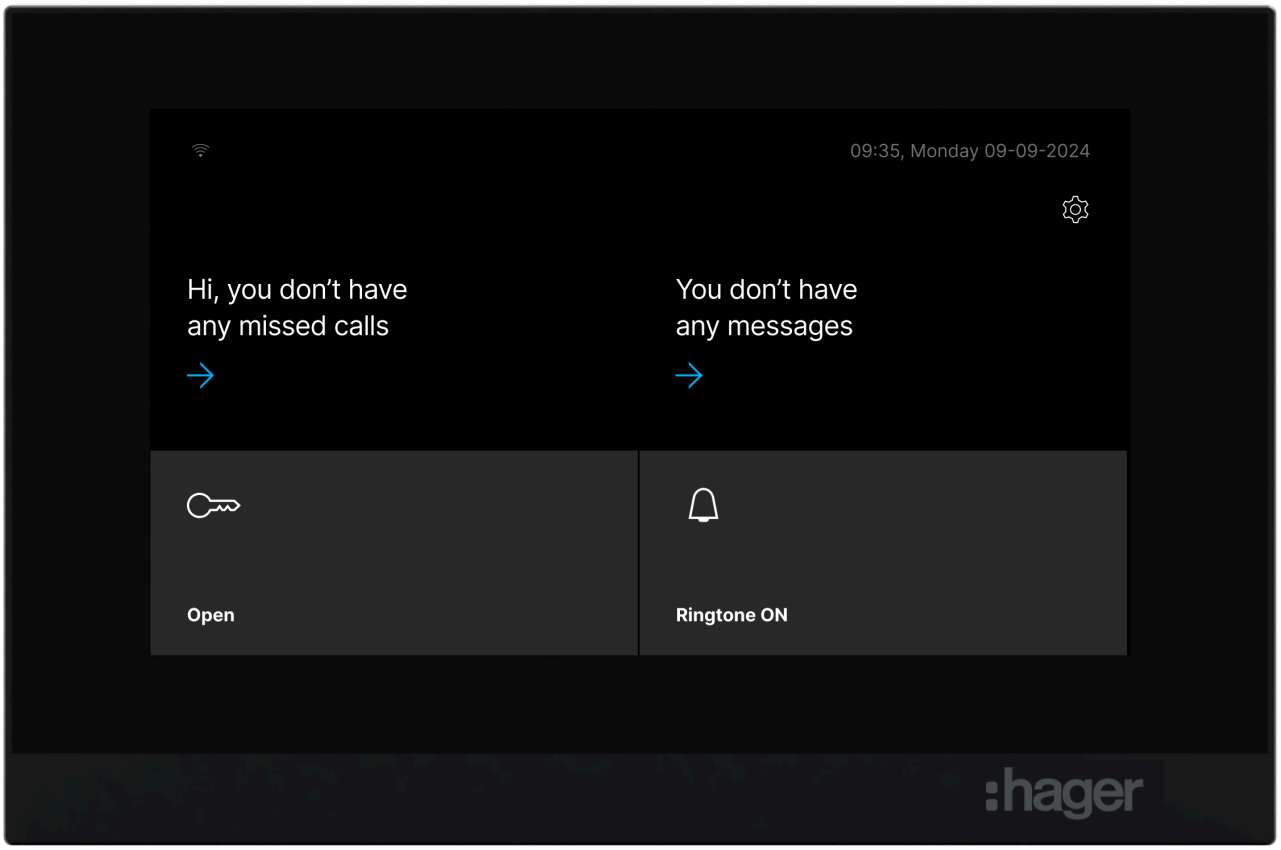

Button	Function
	Opens the **Settings** menu.
	Opens the configured relay 1 of the calling outdoor station **Note:** When configured in the intercom manager, further actions can be taken via a pop-up menu when the function is selected. Alternatively, the home page can contain additional functions, each with its own button, if configured in the intercom manager. An additional function can be, for example, additional access to the garage door.
	Mutes the ring tone. There is no sound when a call is received.
Call list	Displays the number of missed calls. When the function is selected, the list of the call history appears with a preview image. Selecting the preview image will display it in full screen mode. The list can contain up to 100 entries before old entries are automatically deleted. The **Delete** button can also be used to manually delete individual entries or the entire list.
Messages	Displays the number of unread messages. By selecting the function, the list of incoming messages to the building management appears. When the message is selected, the content of the message is displayed. The **Delete** button can be used to manually delete individual messages or the entire list.

3 Incoming call

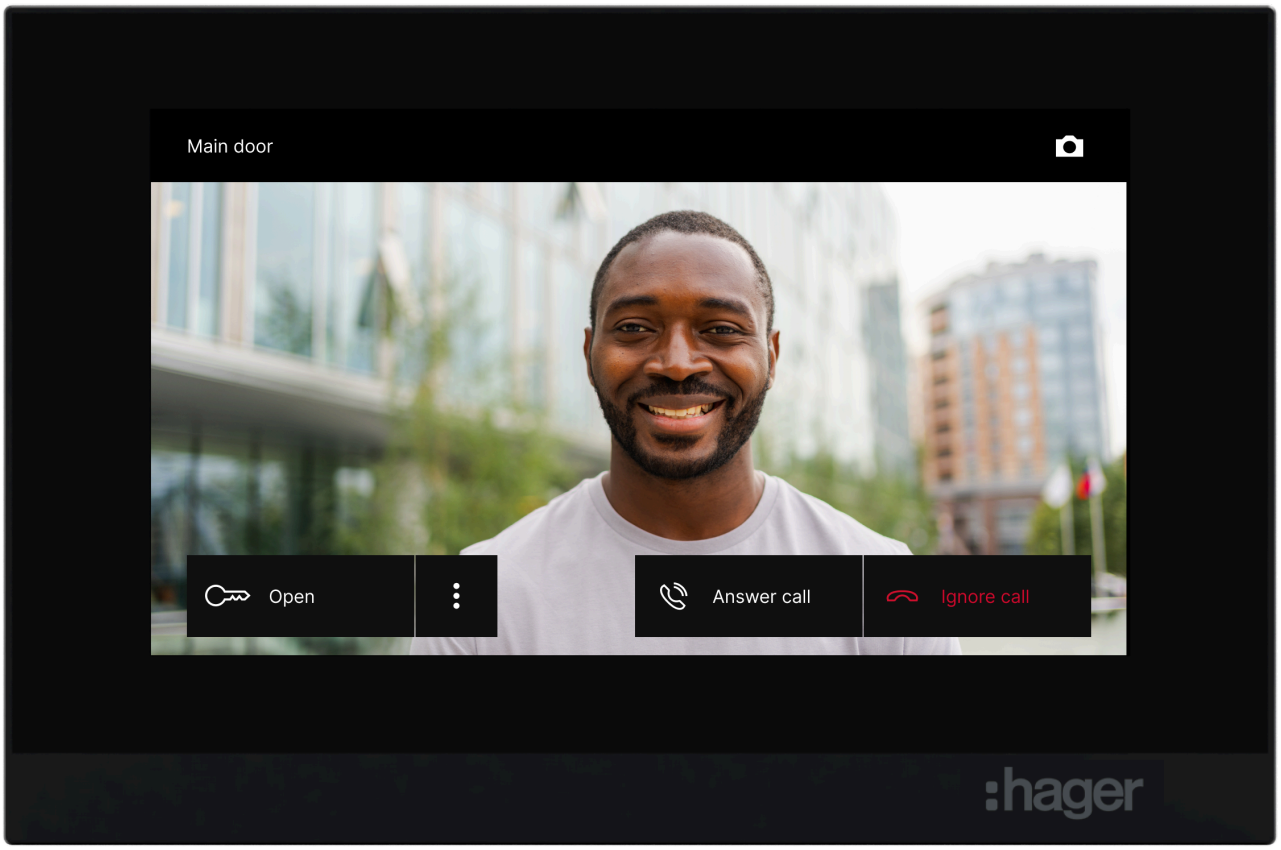


Button	Function
	Opens the configured relay 1 of the calling outdoor station **Note:** When configured in the intercom manager, further actions can be activated via the ⋮ menu; for example, opening the garage door.
	Accepts the incoming call and starts a conversation with the visitor.
	Ends the call without holding a conversation. The incoming call ends automatically after 90 seconds if nothing is pressed on the screen, unless further actions are taken by the visitor at the outdoor station.
	If additional external cameras are connected to the outdoor station, a different camera can be selected in the video preview using the arrow buttons on the left and right of the video image or the selection list next to the camera button.

Incoming storey call


When a storey call is received, a message appears on the screen in addition to the ring tone playing, indicating that someone is standing in front of the apartment door. Click **OK** to confirm the message.

4 Active call

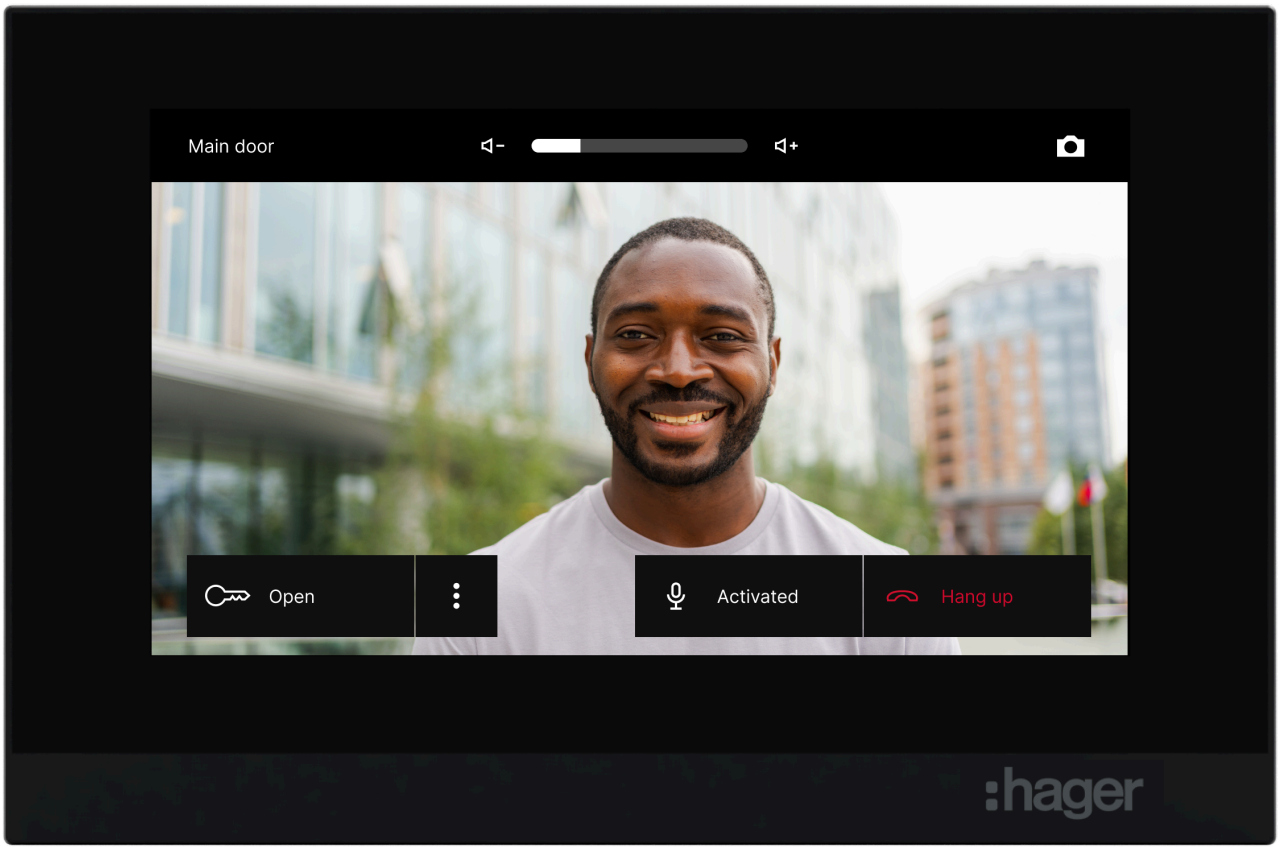

Button	Function
	Opens the configured relay 1 of the calling outdoor station The conversation then ends. **Note:** When configured in the intercom manager, further actions can be activated via the ⋮ menu; for example, opening the garage door.
	Adjusts the volume of the indoor station's speaker.
	Mutes the indoor station's microphone so that the visitor does not hear anything. When active, the button appears in blue.
	Ends the call. The incoming call ends automatically after 120 seconds if nothing is pressed on the screen, unless further actions are taken by the visitor at the outdoor station.
	If additional external cameras are connected to the outdoor station, a different camera can be selected in the video preview using the arrow buttons on the left and right of the video image or the selection list next to the camera button.

5 Settings

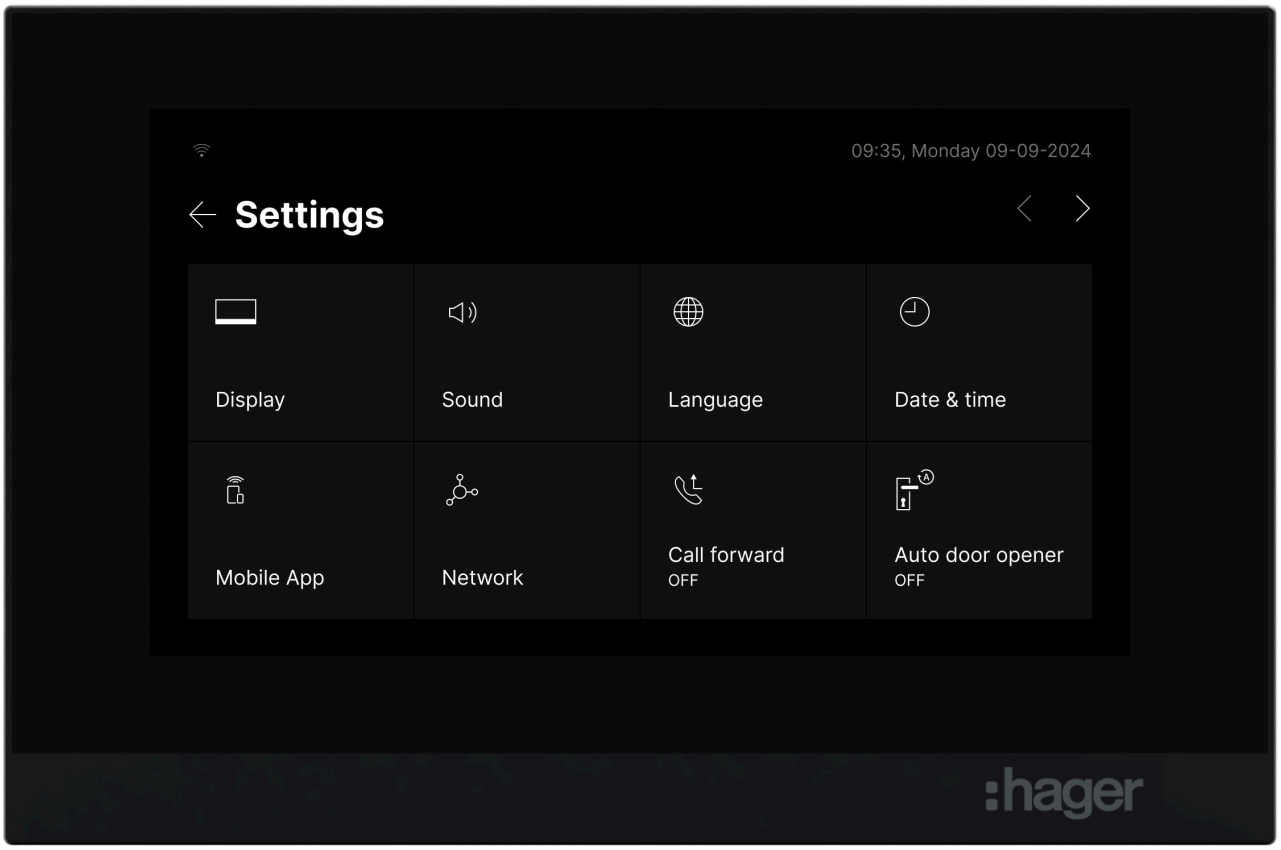

Button	Setting	Function
	Display	– Adjust the brightness using the **–** and **+** buttons and the slider – Set a value for the screen timeout from the selection list
	Sounds	– Set the ring tone and the storey call ring tone via the selection list There are five different ring tones. The default call tone for a storey call is **Home**. – Set the duration of the call tone using the selection list – Set the volume of the call tone and speakers, as well as the microphone sensitivity, using the **–** and **+** buttons and the slider – Set the button sound using the tick box
	Language	– Set the display language Available languages: German, English, French, Italian.
	Date, time	– Choose between automatic and manual date and time display – Manual: Set date and time – Automatic: Select the time zone from the selection list – Select the time and date format from the selection lists

Button	Setting	Function
	App	To connect to the app, the indoor station must be connected to the WiFi. – Network settings: Connect the indoor station to the WiFi – QR code when WiFi connection is active: Follow the instructions in the app.
	Network	Activate/deactivate the WiFi connection via the tick box – Select the network from the network list – Enter the password
	Call forwarding	Activate/deactivate call forwarding When call forwarding is activated, the call is forwarded to the configured indoor station until this function is manually deactivated again. **Note:** The installer must configure this feature in the intercom manager or in the **advanced settings of** the indoor station.
	Automatic door release	Activate or deactivate the automatic door opener and specify the time until which the function remains active. When automatic door release is activated, the door opens automatically after a visitor rings the bell. The function is automatically deactivated after the set time has elapsed. This setting prevents automatic door opening from remaining active at night.
	Cleaning the screen	Start the screen lock The screen is locked for 30 seconds, allowing you to clean the touch display.
	Data privacy	Display information about data protection
	Restart	Restart the device after confirmation The configuration is retained.
	Reset	Reset to factory settings All stored data and configurations will be deleted. Basic functions such as ringing the doorbell and opening the door are then no longer possible.  **Attention** A reset should only be carried out by qualified personnel. The device must then be reconfigured
	Advanced settings	This area is reserved for qualified personnel only and is protected by a PIN.

Hager Electro GmbH & Co. KG
Zum Gunterstal

66440 Blieskastel
Germany

+49 6842 945 0
+49 6842 945 4625
info@hager.com
hager.com

2026-10

6LE089740A