

GB

ECM140D

One phase energy meter,
direct connection 40 A
with MID declaration of conformity
and M-Bus communication
MID certification concerns active energy only.
User instructions
EU declaration of conformity:
M-Bus table:
Download from: <http://hgr.io/r/ecm140d>




Safety instructions

- This device must be installed indoor only by a professional electrician fitter according to local applicable installation standards.
- Do not plug in or unplug this product when the power supplying is ON. Its use is only permitted within the limits shown and stated in the installation instructions. The device and the equipment connected can be destroyed by loads exceeding the values stated.
- Any type of intervention on the products, including cases in which they cease to function or present defects, can be dangerous for the operator's safety and relieves the Manufacturer from all civil and criminal liability.

Function


This M-Bus meter measures the active energy used in an electrical installation. This device can manage 2 tariffs controlled via communication. Only the total active energy register can be used for billing purposes according to measuring instrument directive (MID).
- Active Energy Class B (according to EN 50470-3:2022 and IEC 61557-12:2018)
- Active Power Class 1 (according to IEC 62053-21:2020 and IEC 61557-12:2018)
This device has a backlit LCD and 3 push-button keys to read Energies, V, I, PF, F, P, Q and to configure some parameters. The design and manufacture of this meter comply with Standard EN 50470-3:2022 requirements.

Power factor Convention according to IEC 62053-23:2020

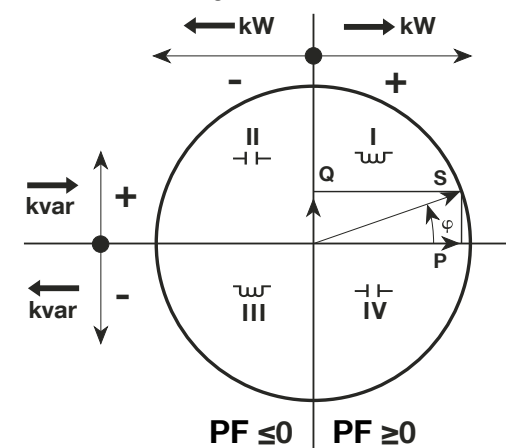

Presentation of device


LCD display:

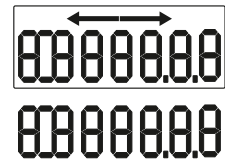

Energy register (kWh), not resettable
Energy import (consumption →)
Energy export (production ←)


Commands

Command button:
Short press: Push briefly (<1 sec.) the button and then release it.
Used to scroll pages or during parameter's modification.
Long Press: Keep the button pushed for at least 3 seconds.
Used to start and to confirm parameter's modifications.



Note:
If no button is pushed for at least 20 seconds the display goes back to the Main Page and the backlight is switched off again.

MID certified

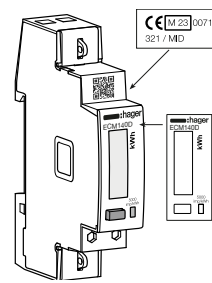


Symbols


- One phase
- Protected by double insulation (Class II)
- Backstop: Reversal preventing device

Dimensions

Sealable terminal cover

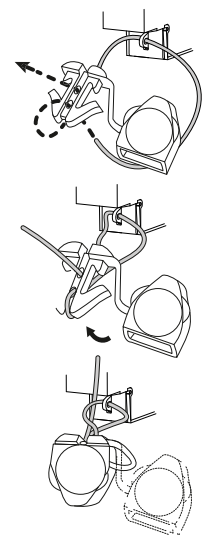

Dimension

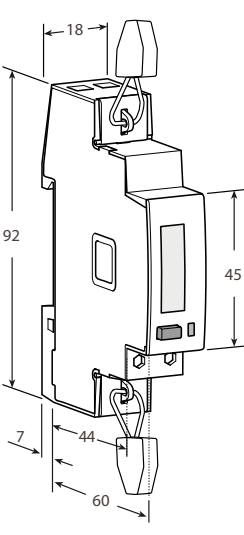

Wiring


Operating M-Bus Communication

M-Bus Media:
In a standard configuration, a M-Bus connection can be used to link up to 250* products with a PC or PLC, over a range of 1000 meters**.
* depending on the M-Bus master.
** depending on the number of products and the communication speed.

Recommendations
The use of a JYSTY Nx2x0.8 mm (0.5 mm²) unshielded twisted pair is recommended. If the range of 1000 m and/or the limit of 250 products are exceeded, a repeater will need to be connected. If the 250 limit is exceeded: only use the secondary address.

M-Bus protocol:
The M-Bus protocol operates using a master/slave structure. ECM140D (slave) units are compatible with both primary and secondary addressing modes. Primary addressing can be configured via the product interface. Secondary addressing uses a fixed, unique address shown on the product. M-Bus ECM140D units also have the "Wildcard addressing" function which allows products to be searched.

Intended use
The Energy Meter is suitable for use on both impedance grounded networks and not grounded networks.

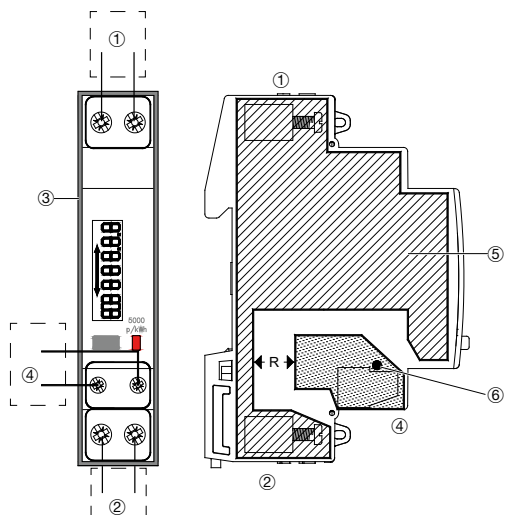


There are no accessible parts

- Legend:
B = Basic Insulation
D = Double Insulation
R = Reinforced Insulation
F = Functional Insulation
- HLV TERMINAL, 2 terminals for neutral
 - HLV TERMINAL, 2 terminals for line
 - PLASTIC CASE (NOT EARTHED)
 - SELV TERMINAL, 2 terminals for M-Bus
 - HLV CIRCUIT, (mains) working voltage = 300 Vac
 - SELV CIRCUIT, (M-Bus) working voltage < 25 Vac, < 60 Vdc

Wiring diagram

Important
Cables must therefore comply with IEC 60332-1-2:2004 or have a flammability rate UL 2556 WW-1.

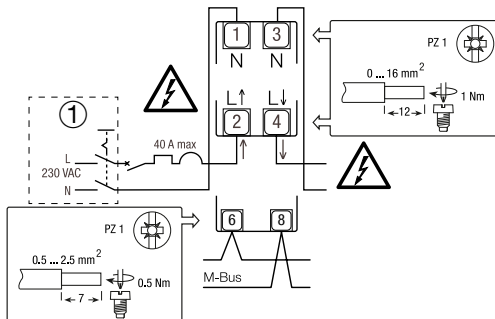

In-installation

The four-pole disconnector (reference ① in the wiring diagrams) must be easy to identify and to operate and must be close to the Meter. They both must be in "OFF" position (open circuits) from the beginning to the end of the installation or of the uninstallation. The Energy Meter, the disconnectors and the overload current protection devices must be easily identifiable. They must be installed in an adequate cabinet (IP51 and V1) and it must be easy to intervene on them if necessary. Inside the cabinet, do not install any other device with a flammability class worse than V1.

Commissioning

Recommendations
Check the following before putting it into service:
• Make sure that no dangerous voltages are connected to the SELV terminals.
• Make sure that a phase has not been connected to the Neutral terminal (this would cause the internal protections to intervene and will damage the Meter).
• Check that the main page appears on the display (see menu description) and not the Phase Sequence Error page.

Maintenance

• Make sure that no voltage is applied to the instrument.
• Only dry cleaning is allowed with a natural fiber cloth (for example cotton or linen) or synthetic fabric that does not leave residual fibers that can remain on the surface of the Energy Meter or that can penetrate into the Energy Meter.

For this Energy meter, no maintenance, repair or replacement of parts is foreseen. Such interventions are to be considered prohibited. In case of malfunction, it must be replaced.

Help in case of problems

Error condition
When partial energy blinks, reset partial energy (maximum partial energy register). When the display shows the message **ERROR N02** or **ERROR N03**, the meter has got a malfunction and must be replaced.

Diagnostic message

The cabling sequence (L1-L2-L3) is wrong. L1, L2 and L3 icons blink. Invert the voltage wires of 2 phases (phase 1 < phase 2 or phase 2 < phase 3). Otherwise, by pressing the "OK" button for at least 5 seconds, the message disappears until the next restart.

Technical data

Data in compliance with EN 62052-11:2021+A11:2022, EN 62052-31:2016-06, IEC 62052-31, EN 62059-32-1:2012

General characteristics			
Housing	DIN 43880	DIN	1
Mounting	EN 60715	DIN rail	35 mm
Depth		mm	60
Weight		g	60
Operating features			
Connection	to single-phase network - number of wires	-	2
Storage of energy values and configuration	Internal flash non volatile memory	-	☑
Approval (EN 62052-31:2016-06 EN 50470-3:2022)			
Reference Voltage (Un)	VAC	230	
Reference Current (In)	A	5	
Minimum Current (Imin)	A	0.25	
Maximum Current (Imax)	A	40	
Starting Current (Ist)	A	0.015	
Transitional Current (Itr)	A	0.05	
Reference Frequency (fn)	Hz	50	
Number of phases / number of wires	-	1 / 2	
Certified Measures	kWh	→ kWh ← kWh	
Accuracy			
- Active Energies (accord. to EN 50470-3:2022)	classe	B	
- Active Powers (accord. to IEC 62053-21:2020 and IEC 61557-12:2018)	classe	1	
Supply Voltage and Power Consumption			
Operating Supply Voltage range	V	92 ... 276	
Maximum Power Consumption (Voltage circuit)	VA / W	≤2 / ≤1	
Maximum VA burden (Current circuit) @ Imax	VA	≤1	
Voltage Input Waveform	-	AC	
Voltage impedance	MΩ	1	
Current impedance	mΩ	≤20	
Overload capability			
Voltage	continuous	VAC	276
	temporary (1 s)	VAC	300
Current	continuous	A	40
	temporary (10 ms)	A	1200
Measuring Features			
Voltage range	VAC	92 ... 276	
Current range	A	0.25 ... 40	
Frequency range	Hz	45 ... 65	
Measured Quantities	-	V, A, kWh, PF, Hz, kW	
Display features			
Display type	LCD	-	7.0 / 5.2
Active Energy	5 digits + 2 decimal digits	kWh	0.01 ... 99999.99
Voltage	3 digits + 2 decimal digits	V	92.00 ... 276.00
Current	2 digits + 2 decimal digits	A	0.00 ... 40.00
Power factor	1 digit + 2 decimal digits with sign + capac./induc. indic.	-	-1.00 ... 1.00
Frequency	2 digits + 2 decimal digits	Hz	45.00 ... 65.00
Active Power	2 digits + 2 decimal digits with sign	kW	0.00 ... 11.04
Display refresh period	s	1	
Optical metrological LED			
Front mounted red LED (meter constant)	proportional to active imp/exp Energy	imp/kWh	5000
Safety			
Utilization category	-	UC2	
Overvoltage category	-	3	
Protective class	-	classe II	
AC voltage test (EN 50470-3:2022)	-	kV	4
Degree of pollution	-	2	
Operational voltage	V	300	
Impulse voltage test (Uimp)	-	1.2/50 µs-kV	6.4
Housing material flame resistance	UL 94	classe	V0
Ultrasonic safety welding between upper and lower housing part	-	☑	
Printed circuit board flammability class	-	V1	
Material Group	-	IIIa	
Embedded M-Bus communication			
Baud rate	bps	300 ... 9600	
Unit load	-	1	
Address	adjustable	-	0 ... 250
Isolation class	SELV	-	☑
Environmental conditions			
Storage temperature range	°C	-25 ... +70	
Operating temperature range	°C	-25 ... +55	
Mechanical environment	-	M1	
Electromagnetic environment	-	E2	
Installation	indoor only	-	☑
Altitude (max.)	m	≤2000	
Humidity	yearly average, without condensation	-	≤75%
	on 30 days per year, without condensation	-	≤95%
IP rating	in built-in condition (front part)	-	IP51
	terminal block	-	IP20
Emission class compatibility CISPR 32		classe	B
Durability Certification	according to EN 62059-32-1		