

ETS3







4 ETS

- ▲ Manufacturers
- ▲ Berker
- ▲ Lighting
- Dimmer

Application software

1-fold dimmer, 3-fold dimmer

Electrical / Mechanical characteristics: see product user manual

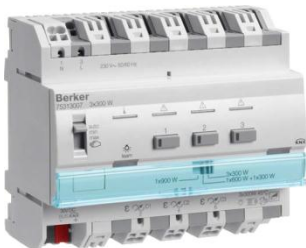	Product reference	Product designation	Application software ref.	TP device  RF device 
	7531 10 11 7531 10 12	1-fold dimming actuator 300W, universal 1-fold dimming actuator 600W, universal	S75311011-2 Version 1.x	
	7531 30 07	3-fold dimming actuator 600W, universal	S75313007 Version 1.x	

CONTENTS

1	GENERAL	4
1.1	ABOUT THIS GUIDE.....	4
1.2	ABOUT THE PROGRAM.....	4
1.2.1	ETS compatibility.....	4
1.2.2	Application descriptions.....	4
2	GENERAL DESCRIPTION	5
2.1	INSTALLATION OF THE DEVICE.....	5
2.1.1	Overview presentation.....	5
2.1.2	Connection.....	6
2.1.3	Physical addressing.....	7
2.2	FUNCTION MODULES OF THE APPLICATION.....	7
2.2.1	Primary functions.....	8
2.2.2	Additional functions.....	9
3	PARAMETER	11
3.1	DEFINITION OF THE GENERAL PARAMETERS.....	11
3.1.1	Manual mode.....	11
3.1.2	Activation of the Status indication.....	12
3.1.3	Activation of the logic blocks.....	12
3.1.4	Activation of the Device diagnosis object.....	12
3.1.5	Restore ETS-Parameters.....	13
3.1.6	Status during bus power cut or download.....	14
3.1.7	LED display.....	16
3.2	MANUAL MODE.....	17
3.2.1	Duration of manual mode activation.....	17
3.2.2	Manual mode: Deactivating.....	18
3.2.3	Manual mode status indication.....	18
3.2.4	Status after manual mode.....	19
3.3	STATUS INDICATION.....	21
3.4	LOGIC BLOCK.....	24
3.4.1	Configuration of the logic function.....	25
3.4.2	Logic block authorization.....	26
3.4.3	Logic result.....	28
3.5	DEVICE DIAGNOSIS.....	32
3.6	FUNCTION SELECTION.....	34
3.6.1	Definition - Dimmer and switch principle.....	35
3.6.2	ON/OFF object timings.....	43
3.6.3	Timer.....	47
3.6.4	Scene.....	53
3.6.5	Preset.....	59
3.6.6	Lock-up.....	65
3.6.7	Priority.....	70
3.6.8	Hours counter.....	73
3.6.9	Notification.....	76
4	COMMUNICATION OBJECTS	81
4.1	GENERAL COMMUNICATION OBJECTS.....	81
4.1.1	Manual mode.....	81
4.1.2	Logic block.....	82
4.1.3	Behaviour of the device.....	83
4.1.4	Device diagnosis.....	84
4.2	COMMUNICATION OBJECTS FOR EACH OUTPUT.....	85
4.2.1	ON/OFF.....	88
4.2.2	Dimming.....	88
4.2.3	Load memorisation.....	89

4.2.4	ON/OFF object timings	90
4.2.5	Status indication	91
4.2.6	Timer.....	91
4.2.7	Scene.....	92
4.2.8	Preset	93
4.2.9	Lock-up.....	94
4.2.10	Priority.....	95
4.2.11	Hours counter	96
4.2.12	Notifications	97
5	APPENDIX	99
5.1	SPECIFICATIONS	99
5.1.1	7531 10 11 / 12.....	99
5.1.2	7531 30 07	100
5.2	TABLE OF LOGICAL OPERATIONS	101
5.3	CHARACTERISTICS.....	101

1 General

1.1 About this guide

The purpose of this manual is to describe the operation and configuration of the KNX-devices using the ETS program. It consists of four parts:

- General information
- Parameter description
- Overview of KNX objects
- Technical characteristics

1.2 About the program

1.2.1 ETS compatibility

The application programs are compatible with ETS4 and ETS3.
They can be downloaded from our website under the product reference.

ETS version	File extension of compatible files
ETS4	*.knxprod or *.vd5
ETS3 (V3.0f)	*.vd5


1.2.2 Application descriptions

Application	Order number
S75311011-2	7531 10 11 / 12
S75313007	7531 30 07

2 General Description


2.1 Installation of the device

2.1.1 Overview presentation

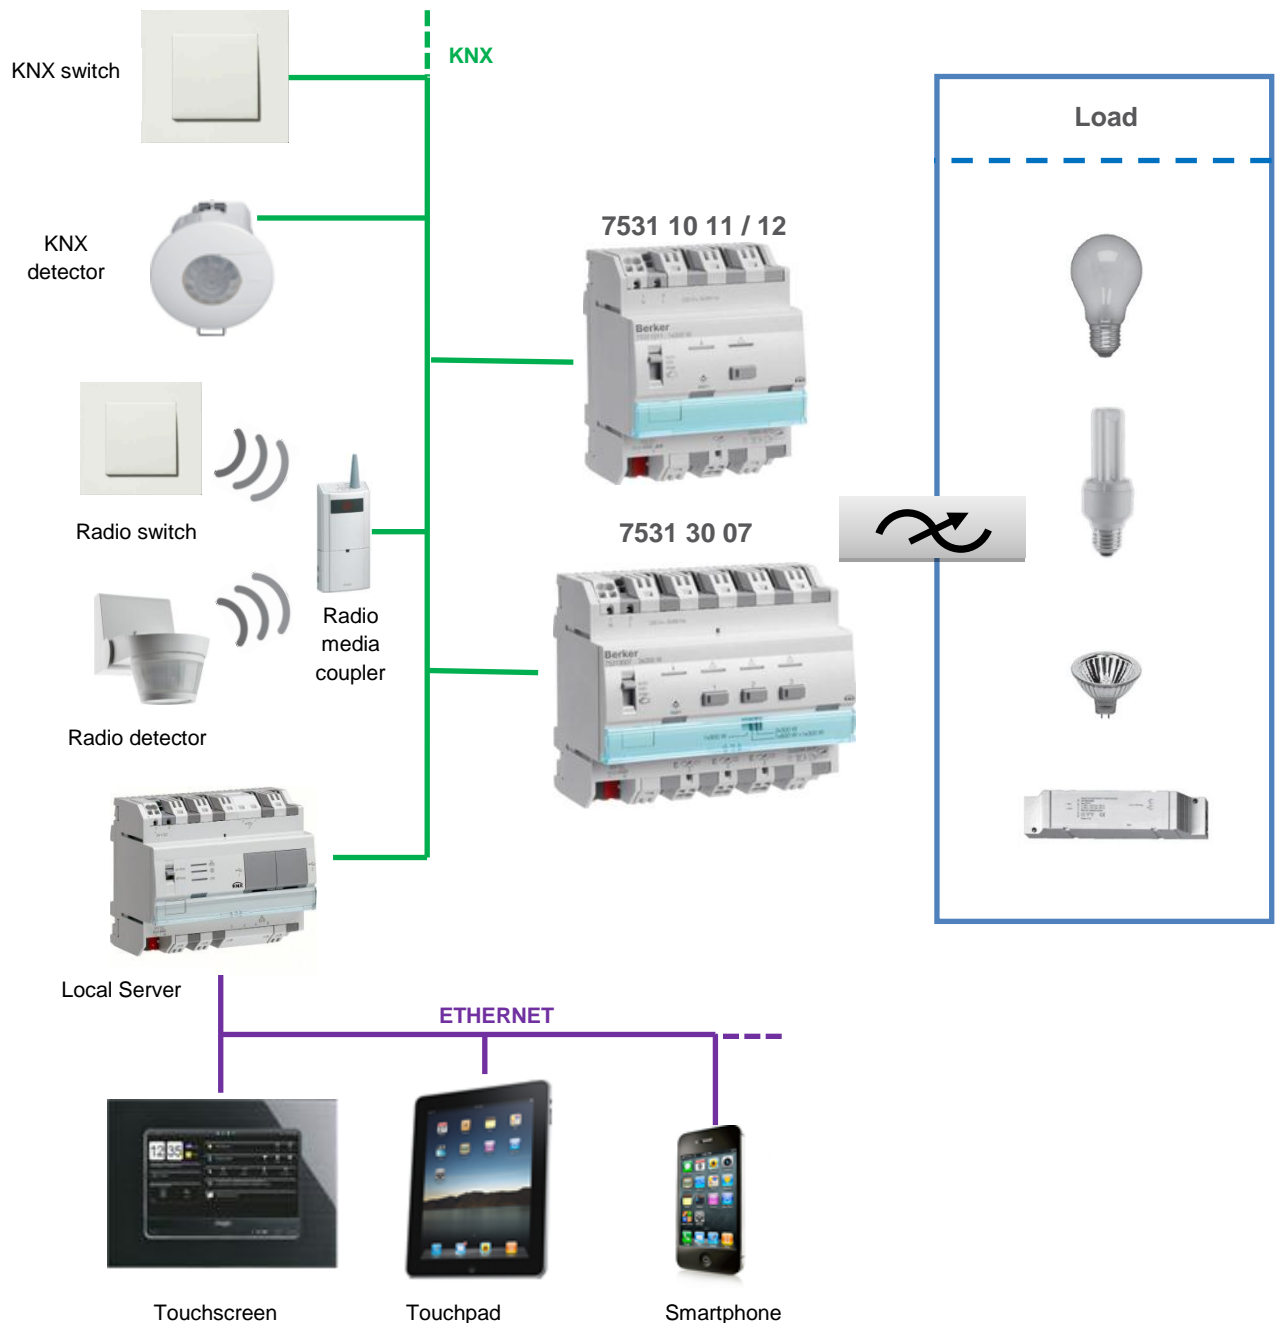


2.1.2 Connection

7531 10 11 / 12

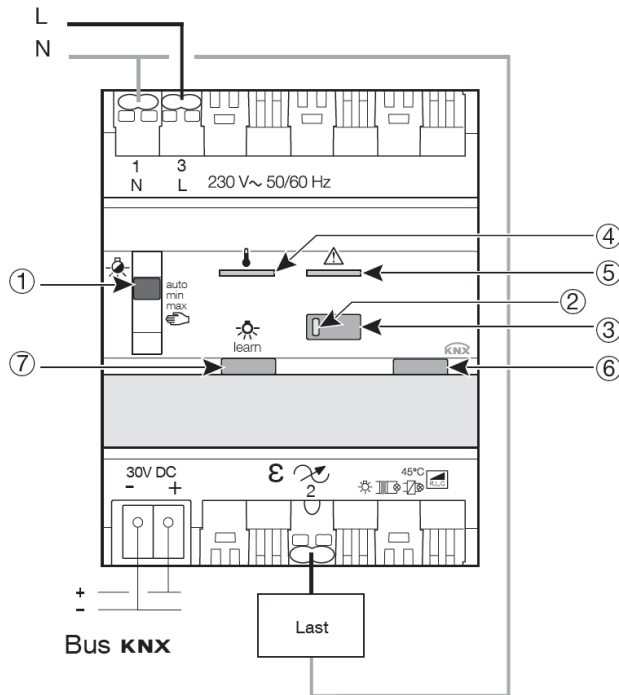


- ① • auto/min/max/manu switch
- ② • Indicator state
- ③ • Local command pushbutton
- ④ • Overheating indicator
- ⑤ • Short circuit and overload indicator
- ⑥ • Physical addressing lighted push button
- ⑦ • Dimming mode override push button

7531 30 07

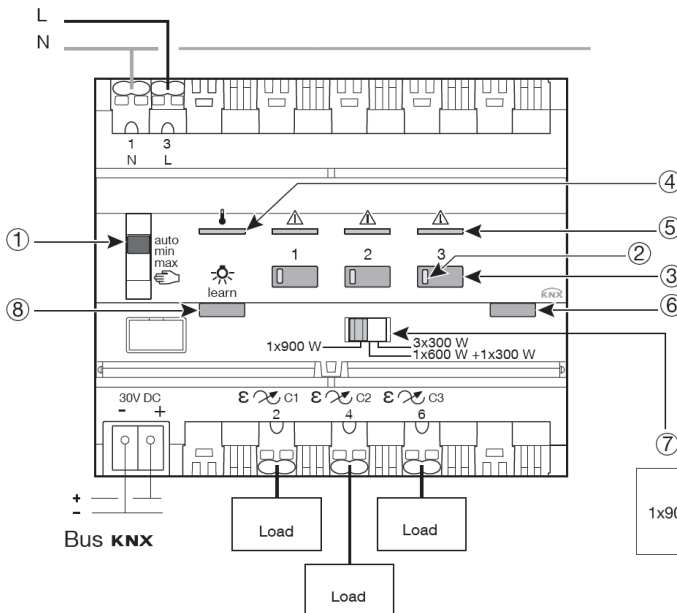

- ① • auto/min/max/manu switch
- ② • Indicator state
- ③ • Local command pushbuttons
- ④ • Overheating indicator
- ⑤ • Short circuit and overload indicator
- ⑥ • Physical addressing lighted push button
- ⑦ • Selection of the number of outputs
- ⑧ • Dimming mode override push button

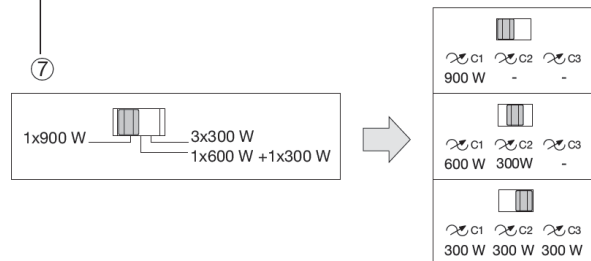

Note: The Min and Max settings are used to set the lowest and highest lighting levels for the outputs. These settings are achieved by storing the current output values through a long press on the relevant buttons next to the output on the front of the device.

2.1.3 Physical addressing


In order to perform the physical addressing or to check whether or not the bus is connected, press the lighted push button (6) on the right-hand side above the identification plates on the front of the device.

Light on = bus connected and ready for physical addressing.

The device's programming mode is activated until the physical address is transferred from ETS. Pressing the button again, exits programming mode.

Physical addressing can be carried out in automatic or manual mode.

2.2 Function modules of the application

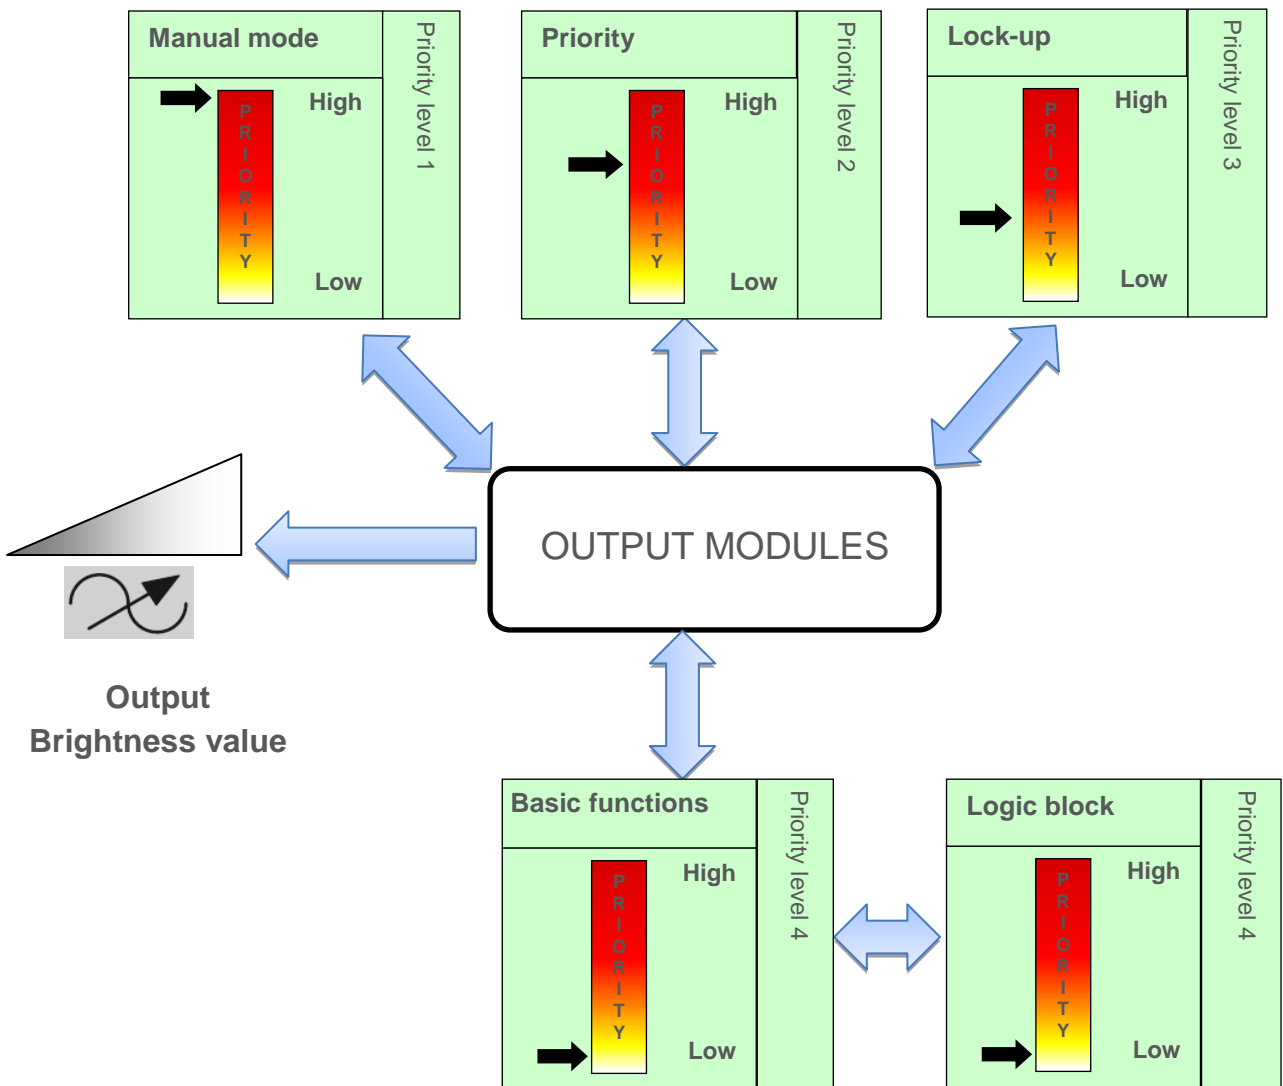

2.2.1 Primary functions

The applications allow individual configuration of the device outputs.

The most important functions are:

■ ON/OFF

An output can be switched on or off using the ON/OFF function. The command can come from switches, buttons or other control inputs.

■ Relative or absolute dimming (Brightness value)

With relative dimming, the brightness value is raised or lowered with respect to the current brightness value. This is achieved, for example, by a long press on a sensor button.

The dimming speed is configurable.

With absolute dimming, the brightness value to be achieved is set on the dimmer as a % value.

■ Timer

The timer function is used to switch an output on or off for a programmable period.

The output can be switched to a desired brightness level for a specified period. The timer may be interrupted before expiry of the delay time. A programmable Cut-OFF pre-warning announces the end of the delay time by halving the present brightness value of the output.

■ Time-limited OFF

The Time-limited OFF function is a switching function that automatically switches off after a configurable delay time.

Application: Lighting of store rooms, cellars, sheds etc.

■ Priority

The priority function is used to force the output into a defined state. The Priority function is controlled with a 2-bit command.

Priority: Manual mode > **Priority** > Lock-up > basic functions. .

Only a Priority OFF command authorizes the output for control.

Application: Keeping lighting on for security reasons.

■ Lock-up

The lock-up function is used to lock the output in a predefined state.

Priority: Manual mode > Priority > **Lock-up** > basic functions.

The Lock-up prevents actuation until an unlock command has been received.

The Lock-up duration can be set.

■ Scene

The Scene function is used to switch groups of outputs into a configurable pre-defined state.

A scene is activated by receipt of a 1-byte command. Each output can be included in 64 different scenes.

■ Preset

The Preset function is used to switch an output into various predefined states.

The preset function is activated via 1-bit format objects.

Each output can be controlled by two Preset objects.

■ Delay

The delay functions are used to activate the outputs with a switching or tripping delay, or with a switching and tripping delay.

■ Timer/toggle switch changeover

The Timer/toggle switch changeover function is used to switch between a timer and a toggle switch function applied to the ON/OFF communication object.

■ Hours counter

The Hours Counter function is used to count the overall operating time of an output in the ON or OFF state.

The counter setpoint can be programmed and altered via an object.

■ Setting of the minimum and maximum brightness value

This function is used to set the minimum and maximum values for relative dimming for each output. These limits can be set using ETS parameter setting or locally on the front of the device.

■ Selection of the number of outputs used (Reference 7531 30 07 only)

One, two or three lighting circuits can be controlled using this device.

The maximum available power per output depends on the number of outputs used.

The total power output is limited to 900 W:

- 1 output uses C1: 900 W
- 2 outputs use: C1 = 600 W and C2 = 300 W
- 3 outputs use: C1-C3 with 300 W per output

2.2.2 Additional functions

The applications configure the general functions of the devices.

The following functions apply to the entire device:

■ Manual mode

Manual mode allows the device to be disconnected from the bus.

In this mode, each output can be priority controlled locally.

This command has the highest priority. No other command is considered when manual mode is active. Only after ending manual mode are other types of control again permitted.

The duration of the manual control can be configured.

Manual mode can be locked-up via the KNX bus.

■ Status indication

The behaviour of the status indication of each switching channel can be configured for the entire device. The Status indication ON/OFF sends the switching status of the individual output contact on the KNX bus.

■ Logic Block

The Logic function is used to control the status of an output depending on the result of a logic operation. This command has the lowest priority.

The result of the function can be output on the KNX bus and can directly control one or more outputs.

There are two logic blocks available per device with up to 4 inputs.

■ Devise diagnosis

The Device diagnosis function allows notifications about the operating state of the device to be sent via the KNX bus.

This object is sent periodically and/or on status change.


■ Selecting expert mode or dimming mode

The dimming mode for each dimming output can be specified as Expert mode using the controls on the front of the device or via the ETS dimming mode parameter.

3 Parameter

3.1 Definition of the general parameters

This configuration window is used for general configuration of the device.

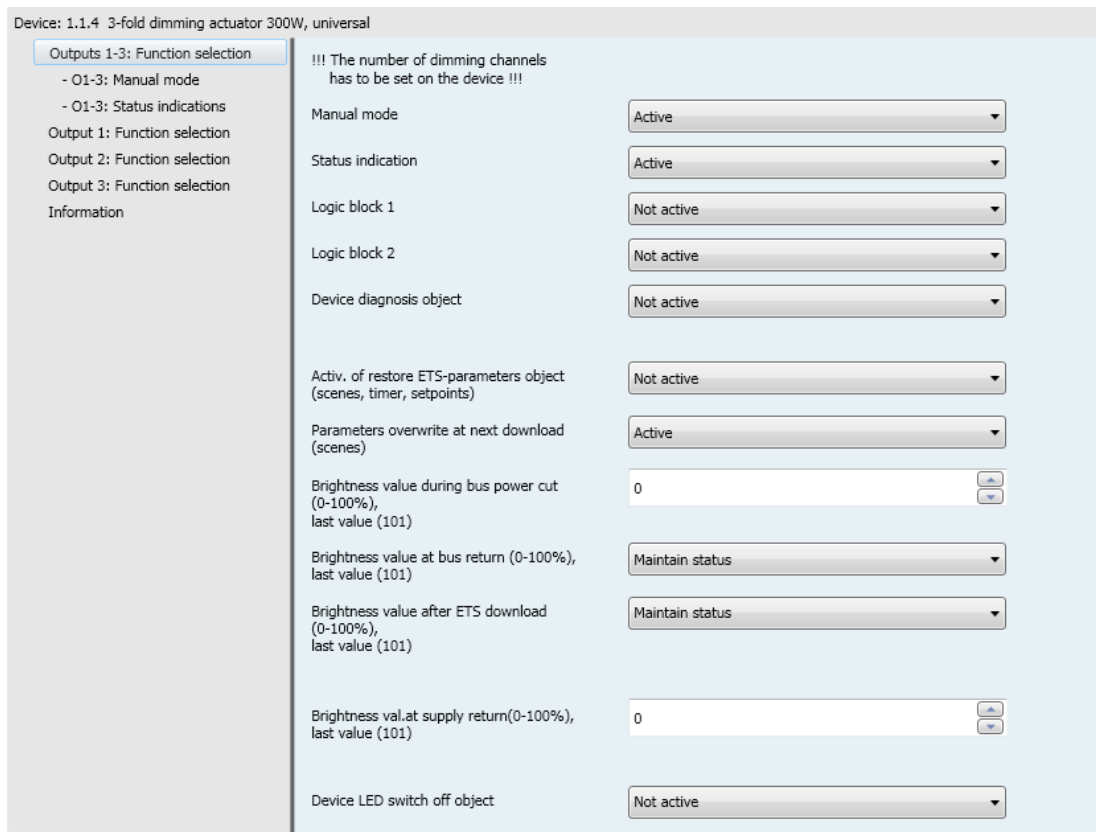

3.1.1 Manual mode

Parameter	Description	Value
Manual mode	Switch-over to the manual mode is not possible.	Not active
	Switch-over to manual mode is possible without time limit.	Active*
	Manual mode can be activated for a duration that is configurable via the ETS parameters. After expiry of the time limit, manual mode is no longer active.	Time limited

For configuration see section: [Manual mode](#)

* Default value

3.1.2 Activation of the Status indication

Parameter	Description	Value
Status indication	The Status indications parameter register is hidden.	Not active
	The Status indications parameter register is displayed.	Active*

For configuration see section: [Status indication](#)

3.1.3 Activation of the logic blocks

Parameter	Description	Value
Logic block 1	Logic block 1 communication object and parameter register are hidden.	Not active*
	Logic block 1 communication object and parameter register are displayed.	Active

For configuration see section: [Logic block](#)

Note: The parameters and objects are identical for block 2, only the terms will be adjusted.

For logic block 1

Communication objects: **100 - Logic block 1 – Logic result** (1 Bit – 1 Bit – 1.002 DPT_Bool)
96 - Logic block 1 - input 1 (1 Bit – 1.002 DPT_Bool)

For logic block 2

Communication objects: **106 - Logic block 2 – Logic result** (1 Bit – 1 Bit – 1.002 DPT_Bool)
102 - Logic block 2 - input 1 (1 Bit – 1.002 DPT_Bool)

3.1.4 Activation of the Device diagnosis object

Parameter	Description	Value
Device diagnosis object	The " Device diagnosis " parameter register and the associated communication object is hidden.	Not active*
	The "Device diagnosis" parameter register and the associated communication object are displayed.	Active

Communication object: **109 - Outputs 1-3 - Device diagnosis** (6 Byte – specific)

For configuration see section: [Device diagnosis](#)


* Default value

3.1.5 Restore ETS-Parameters

There are two types of parameters in the device:

- Parameters that can only be changed via ETS
- Parameters that can be changed via ETS or via the KNX bus.

For parameters that can be changed via ETS and via the KNX bus, two values are stored in the device memory: the value corresponding to the ETS-parameter and the currently used value.

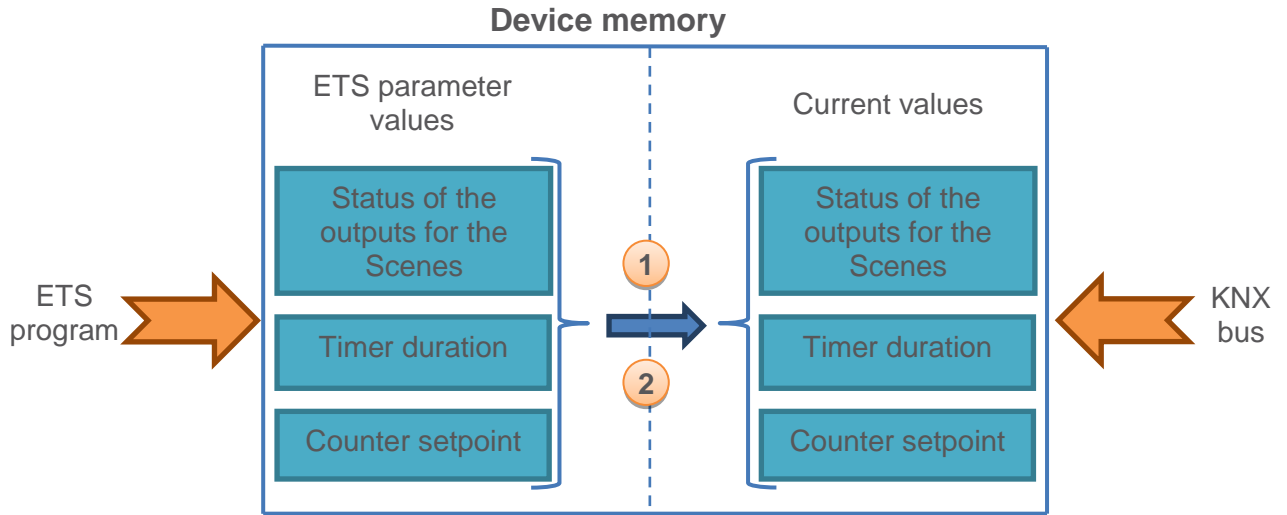

- 1 Receipt of the value "1" on the object, resets the ETS parameter values:** Current parameter values are always replaced by the ETS-parameter values.
- 2 Download of the ETS application:** Current parameter values are replaced by the ETS parameter values on download.

Parameter	Description	Value
Activ. of restore ETS-parameters object (scenes, timer, setpoints)	The Restore ETS-params settings communication object is hidden	Not active*
	The Restore ETS-params settings communication object is displayed.	Active
	On receipt of a 1 on this object, the parameters** that are adjustable via the bus are overwritten with values set in the ETS before the last download.	

** Output state for scene x, Timer duration, Operating h. counter setpoint

Communication object: **107 - Outputs 1-3 - Restore ETS params settings Value** (1 Bit – 1.015 DPT_Reset)

* Default value

Parameter	Description	Value
Parameters overwrite at next download (scenes)	The parameter values stored in the device will remain in the device at the next download.	Not active
	The parameter values stored in the device will be overwritten with the ETS configured values at the next download.	Active*

3.1.6 Status during bus power cut or download

Parameter	Description	Value
Brightness value during bus power cut (0-100%), last value (101)	On bus failure the output is set to the entered brightness value	0-100%
	The output status remains unchanged on bus failure.	101

Parameter	Description	Value
Brightness value at bus return (0-100%)	The output status remains unchanged on bus return	Maintain status*
	The output is switched ON on bus return	ON
	The output is switched OFF on bus return	Off
	The output is targeted on the stored brightness value set.	Value %

Note: The device will reboot on bus return. The priority functions that were present before the bus power cut, are no longer active.

Parameter	Description	Value
Brightness value at bus return (0-100%)	This parameter defines the brightness value that is set on the output after return of the KNX bus.	0... 100%

*Note: This parameter is only visible if the **Status after bus return** parameter has the following value: **Value %***

Parameter	Description	Value
Dimming speed for brightness value at bus return	This parameter defines the dimming speed for attaining the brightness value after return of the KNX bus.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Status after bus return** parameter has the following value: **Value%***

* Default value

Parameter	Description	Value
Brightness value after ETS download (0-100%)	The output remains unchanged during the ETS download	Maintain status*
	The output is switched on during the ETS download	On
	The output is switched off during the ETS download	Off
	The output is targeted on the stored brightness value set.	Value %

Note: During a download, the outputs remain unchanged.

Parameter	Description	Value
Brightness value after ETS download (0-100%)	This parameter defines the brightness value that is set on the output after download of the ETS parameters.	0... 100%

*Note: This parameter is only visible if the **Status after download** parameter has the following value: **Value%***

Parameter	Description	Value
Dimming speed for brightness value after ETS download	This parameter defines the dimming speed for attaining the brightness value after download of the EPS parameters.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Status after download** parameter has the following value: **Value%***

Parameter	Description	Value
Brightness val. at supply return (0-100%), last value (101)	After a return of power, the output is set to the stored brightness value	0-100%
	After a return of power, the output status is set to the last brightness value.	101

* Default value

3.1.7 LED display

Parameter	Description	Value
Device LED switch off object	The " Device LEDs lock-up " communication object is hidden	Not active*
	The " Device LEDs lock-up " communication object is displayed.	Active

Communication object: **108 - Outputs 1-3 - Device LED switch off** (1 Bit – 1.001 DPT_Switch)

Parameter	Description	Value
Polarity	Object Device LED lock-up receives "0" = the LED display is activated "1" = the LED display is deactivated "0" = the LED display is deactivated "1" = the LED display is activated	0 = Status indication, 1 = Always OFF* 0 = Always OFF, 1 = Status indication

*Note: This parameter is only visible if the **Device LED switch off object** parameter has the following value: **Active***

* Default value

3.2 Manual mode

In manual mode the device is disconnected from the KNX bus. The function of the connected load can be checked using the manual mode button.

Manual mode can only be activated using the switch on the front of the device.

In this mode, telegrams arriving from the KNX bus are ignored.

When manual mode is activated, the status of the relays initially remains unchanged. Each time the manual mode button of an output is pressed, its status is switched over.

The behaviour is determined by the following parameters:

Device: 1.1.4 3-fold dimming actuator 300W, universal

Outputs 1-3: Function selection	Object deactivation of manual mode	Active
- O1-3: Manual mode	Polarity	0=Manual mode authorized, 1=Manual mode locked-t
- O1-3: Status indications	Object status indication manual mode	Active
Output 1: Function selection	Polarity	0=Manual mode deactivated, 1=Manual mode activat
Output 2: Function selection	Emission	On status change
Output 3: Function selection	Status after manual mode	Value %
Information	Brightness value after manual mode (0-100%), last value (101)	100
	Dimming speed for brightness value after manual mode (h)	1
	Dimming speed for brightness value after manual mode (min)	0
	Dimming speed for brightness value after manual mode (s)	0

3.2.1 Duration of manual mode activation

Parameter	Description	Value
Duration of manual mode activation	This parameter defines the amount of time for which manual mode remains activated.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Manual mode** parameter has the following value: **Time limited***

* Default value

3.2.2 Manual mode: Deactivating

Parameter	Description	Value
Object deactivation of manual mode	The " Deactivation of manual mode " communication object is hidden	Not active*
	The " Deactivation of manual mode " communication object is displayed	Active

Communication object: **93 - Outputs 1-3 – Deactivation of manual mode** (1 Bit – 1.001 DPT_Enable)

Parameter	Description	Value
Polarity	The Deactivation of manual mode object receives "0" = manual mode is activated "1" = manual mode is not activated "0" = the manual mode is not activated "1" = manual mode is activated	0 = Manual mode authorized, 1 = Manual mode locked-up* 0 = Manual mode locked-up, 1 = Manual mode authorized

*Note: This parameter is only visible if the **Deactivation of manual mode** object parameter has the following value: **Active***

3.2.3 Manual mode status indication

Parameter	Description	Value
Object status indication manual mode	The " Status indication manual mode " communication object is hidden	Not active*
	The " Status indication manual mode " communication object is displayed	Active

Communication object: **94 - Outputs 1-3 - Status indication manual mode** (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	The Status indication manual mode communication object sends: "0" when manual mode is switched on "1" when manual mode is switched off "0" when manual mode is switched off "1" when manual mode is switched on	0 = Manual mode active, 1 = Manual mode not active 0 = Manual mode not active, 1 = Manual mode active*

*Note: This parameter is only visible if the **Manual mode** parameter has the following value: **Active***

* Default value

Parameter	Description	Value
Emission	The Status indication manual mode communication object is sent: on switching manual mode on or off periodically after a configurable time on switching manual mode on or off and periodically after a configurable time	On status change* Periodically On status change and periodically

Note: This parameter is only visible if the **Manual mode** parameter has the following value: **Active**

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time interval between the individual transmissions of the Status indication manual mode object.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically**

3.2.4 Status after manual mode

Parameter	Description	Value
Status after manual mode	At the end of manual mode, the output status is: not changed switched to the opposite status selectively switched on selectively switched off set to the stored value reset to the status that was active before manual mode switched to the status which would be active according to other communication objects if the manual mode had not taken place	Maintain status* Inversion ON Off Value % Status before manual mode Theoretical status without manual mode

Note: The application of this parameter depends on the priority of the other active functions. If a function with higher priority is active, this parameter will not be enacted. In the case where two functions with the same priority are active, the parameter of the most recently switched off function is enacted.

Note on inversion: If the brightness value is greater than or equal to 1%, the value goes to 0%. If the brightness value is less than 1%, the value goes to 100%.

* Default value

Parameter	Description	Value
Brightness value after manual mode (0-100%)	This parameter defines the brightness value that is applied on the output after the end of manual mode.	0... 100%

*Note: This parameter is only visible if the **Status after manual mode** parameter has the following value: **Value%***


Parameter	Description	Value
Dimming speed for brightness value after manual mode	This parameter defines the dimming speed for attaining the brightness value after the use of manual mode.	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Status after manual mode** parameter has the following value: **Value%***

* Default value

3.3 Status indication

The status indication function specifies the status of the output contact.

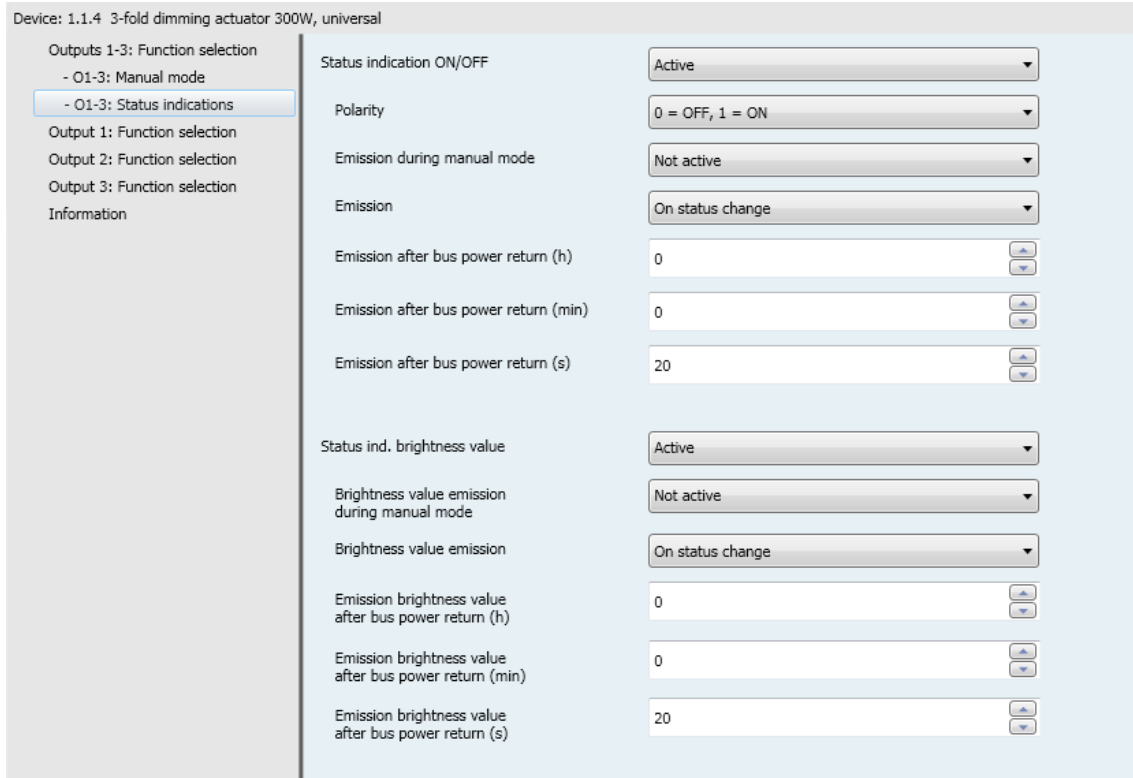

Parameter	Description	Value
Status indication ON/OFF	The associated parameters are hidden.	Not active
	The associated parameters are displayed.	Active*

Parameter	Description	Value
Polarity	The Status indication ON/OFF communication object sends: "0" for an open output contact "1" for a closed output contact	0 = OFF; 1 = ON*
	"0" for a closed output contact "1" for an open output contact	0 = ON, 1 = OFF

*Note: If the blinking function is activated, the above parameter is ignored and replaced by the **Output status during blinking function** parameter*

* Default value

Parameter	Description	Value
Emission during manual mode	The Status indication ON/OFF communication object sends: values if the output status is switched in manual mode no values if the output status is switched in manual mode	Active* Not active

Parameter	Description	Value
Emission	The Status indication ON/OFF communication object is sent: on each output change periodically after a configurable time on output change and periodically after a configurable time	On status change* Periodically On status change and periodically

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Status indication ON/OFF object.	0 hours: 0 to 23 h 10 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Emission after bus power return	This parameter determines the delay for emission of the Status change ON/OFF object on return of the KNX bus after a power cut.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 20 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

This parameter can be used to optimize the bus load after the return of the bus power.

Parameter	Description	Value
Status ind. brightness value	The associated parameters are hidden. The associated parameters are displayed.	Not active* Active

* Default value

Parameter	Description	Value
Brightness value emission during manual mode	The Status ind. brightness value communication object sends: values if the output status is changed in manual mode no values if the output status is changed in manual mode.	Not active* Active

Parameter	Description	Value
Brightness value emission	The Status indication ON/OFF communication object is sent: On each output change Periodically after a configurable time On output change and periodically after a configurable time.	On status change* Periodically On status change and periodically

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Status ind. brightness value object .	0 hours: 0 to 23 h. 10 minutes: 0 to 59 min. 0 seconds: 0 to 59 s.

*Note: This parameter is only visible if the **Brightness value emission** parameter has the following value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Emission brightness value after bus power return	This parameter determines the delay for emission of the Status ind. brightness value object on return of the KNX bus after a power cut.	0 hours: 0 to 23 h. 0 minutes: 0 to 59 min. 20 seconds: 0 to 59 s.

This parameter can be used to optimize the bus load after the return of the bus voltage.

* Default value

3.4 Logic block

The logic function is used to control an output depending on the result of a logic operation. This command has the lowest priority.

The result of the function can be output on the KNX bus and may directly relate to the status of one or more outputs.

Two logic blocks are available for each device.

The operating mode is determined by the following parameters:


Note: The description of the parameters is given for logic block 1. The parameters and objects are identical for logic block 2; only the terms will be adapted.

Device: 1.1.4 3-fold dimming actuator 300W, universal

<ul style="list-style-type: none"> Outputs 1-3: Function selection - O1-3: Manual mode - O1-3: Status indications - O1-3: Logic block 1 - O1-3: Logic block 2 Output 1: Function selection Output 2: Function selection Output 3: Function selection Information 	<p>Logic function type: OR</p> <p>Number of logic input: 1</p> <p>Inverting value of logic input 1: Maintain status</p> <p>Value at initialization logic input 1: Value before initialization</p> <p>Authorization object logic block: Active</p> <p>Value at initialization: Value before initialization</p> <p>Polarity: 0 = Locked-up , 1 = Authorized</p> <p>Logic result after autorisation: Immediate emission when authorization</p> <p>Emission of logic result: By logic result value change</p> <p>Logic result acts on outputs: Active</p> <p>Output 1: Yes</p> <p>Output 2: Yes</p> <p>Output 3: Yes</p> <p>Action if logic result = 0: OFF</p> <p>Action if logic result = 1: ON</p>
---	---

* Default value

Operating principle of the logic block:

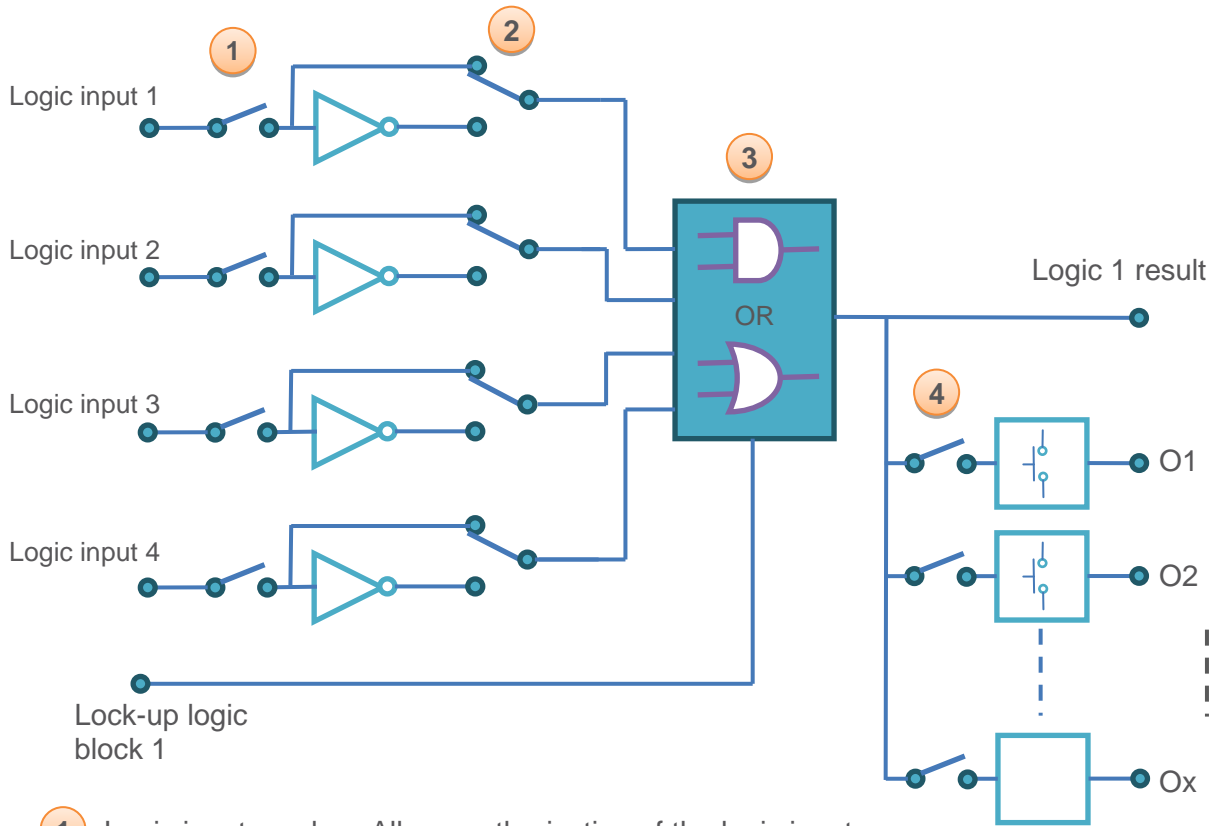

- 1 Logic input number: Allows authorization of the logic input
- 2 Logic input value: Inverted; yes or no
- 3 Type of logic function (AND or OR): Selection of the logic function
- 4 The logic result is applied to outputs: Selection of the outputs concerned by the logic operation

3.4.1 Configuration of the logic function

Parameter	Description	Value
Logic function type	The input objects are	
	OR linked	OR*
	AND linked	AND

For logic table see: [Appendix](#)

* Default value

Parameter	Description	Value
Number of logic inputs	This parameter determines the number of inputs of the logic block. Up to 4 inputs can be used.	1* 2 3 4

Communication objects:

Block 1: **97 – Logic block 1 - input 2** (1 Bit – 1.002 DPT_Bool)

98 – Logic block 1 - input 3 (1 Bit – 1.002 DPT_Bool)

99 – Logic block 1 - input 4 (1 Bit – 1.002 DPT_Bool)

Block 2: **103 – Logic block 2 - input 2** (1 Bit – 1.002 DPT_Bool)

104 – Logic block 2 - input 3 (1 Bit – 1.002 DPT_Bool)

105 – Logic block 2 - input 4 (1 Bit – 1.002 DPT_Bool)

Parameter	Description	Value
Inverting value of logic input x	The value of logic input x works on the logic block with its object value (0=0; 1=1) with inverted object value (0=1; 1=0)	Maintain status* Status inversion
x= 1 to 4		

Parameter	Description	Value
Value at initialization logic input 1	On initialization of the device after a download or after return of the bus power, the value of the logic input is: set to "0" set to "1" set according to the value of the logic input before the initialization occurred	0 1 Value before initialization*


3.4.2 Logic block authorization

Principle of logic block authorization:

The parameters are set as follows:

- Lock-up logic block: 0 = Locked-up , 1 = Authorized
- Action if logic result = 0: Scene 1
- Action if logic result = 1: Scene 2
- Logic input 1 and 2 are AND-linked
- Emission of logic result: By input value change

* Default value

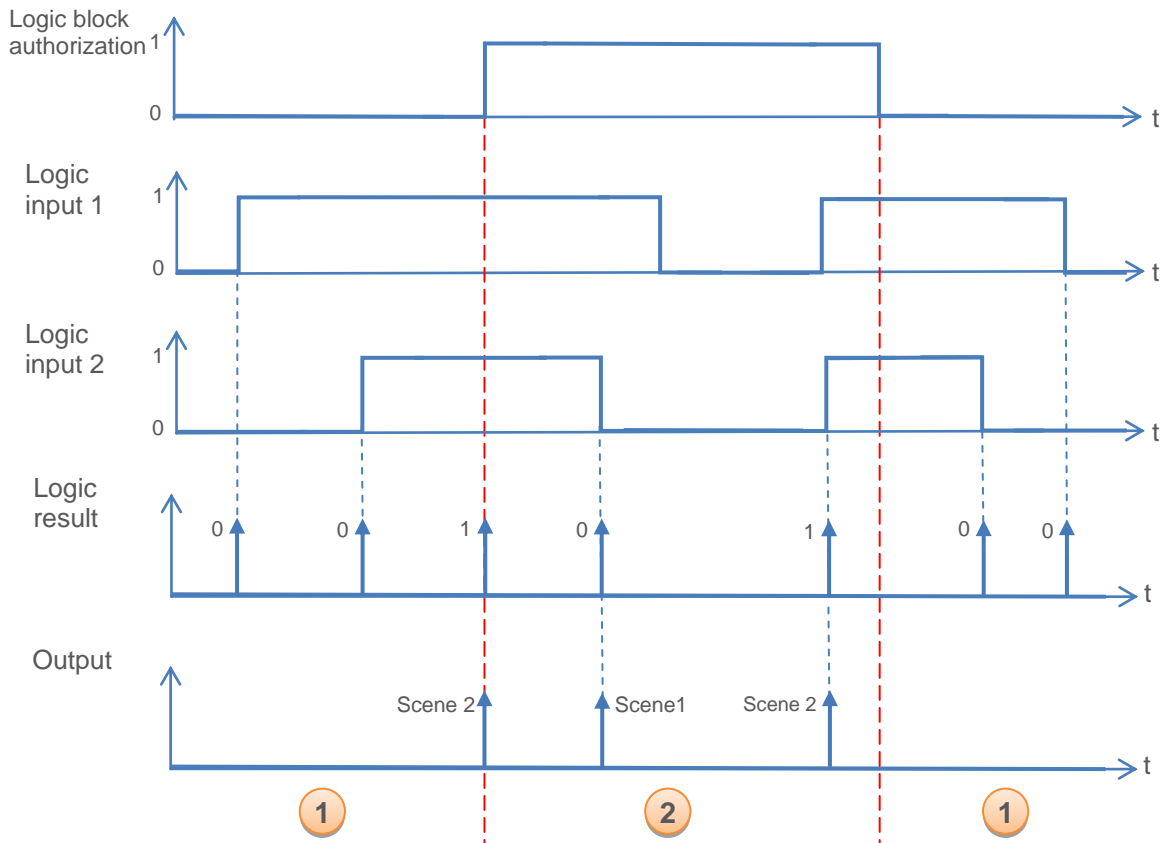

- 1 The logic result has no influence on the output
- 2 The commands from the logic result are executed

Note: The logic result commands will be executed immediately on authorization.

Parameter	Description	Value
Authorization object logic block	The " Logic block 1 – Authorization " communication object and related parameters are hidden	Not active*
	The " Logic block 1 – Authorization " communication object and related parameters are displayed.	Active

Note: If the logic block is locked-up, the logic operation is not processed.

Communication objects: Block 1: **95 - Logic block 1 – Authorization** (1 Bit – 1.003 DPT_Enable)
 Block 2: **101 - Logic block 2 – Authorization** (1 Bit – 1.003 DPT_Enable)

* Default value

Parameter	Description	Value
Value at initialization	On initialization of the device after a download or after return of the bus power, the value of the Logic block 1 - Authorization object is: set to "0" set to "1" set according to the value that the object had before initialization	0 1 Value before initialization*

*Note: This parameter is only visible if the **Authorization object logic block** parameter has the following value: **Active***

Parameter	Description	Value
Polarity	On receipt of a value on the Logic block 1 - Authorization object, this is locked-up on object value "1" locked-up on object value "0".	0 = Authorized, 1 = Locked-up 0 = Locked-up , 1 = Authorized*

*Note: This parameter is only visible if the **Authorization object logic block** parameter has the following value: **Active***

Parameter	Description	Value
Logic result after authorization	On authorization of the logic blocks: the value of the logic result is immediately ascertained the value of the logic result is ascertained only after receipt of a value on the logic input	Immediate emission when authorization* No immediate emission

*Note: This parameter is only visible if the **Lock-up block authorization object** parameter has the following value: **Active***

3.4.3 Logic result

Parameter	Description	Value
Emission of logic result	The Logic result object is sent on: each receipt of a telegram on a logic input a change in value of the logic result	By input value change By logic result value change*

* Default value

Parameter	Description	Value
Logic result acts on outputs	The logic result acts: on the Logic 1 result communication object on the Logic 1 result communication object and directly on one or more outputs.	Not active* Active

The status of the affected outputs is determined by the parameter action on logic result = x.

Parameter	Description	Value
Output 1...x	The output relationship with the Logic result is: directly dependent independent.	Yes* No

*Note: This parameter is only visible if the **Logic result acts on outputs** parameter has the following value: **Active***

Parameter	Description	Value
Action if logic result = 0	On the outputs that are directly dependent on Logic 1 result , if the output value = "0", the status: is not changed is switched to the opposite status is selectively switched on is selectively switched off is set to a stored value starts timer mode stops timer mode starts one of the 64 scenes adopts the default value given by the parameter Status on preset 1 object = 0 adopts the default value given by the parameter Status on preset 2 object = 0	Maintain status Inversion ON OFF* Value % Timer start Timer stop Scene number Preset 1 Preset 2

Note on inversion: If the brightness value is greater than or equal to 1%, the value goes to 0%. If the brightness value is less than 1%, the value goes to 100%.

Note: The Timer mode, Scene function or Preset function of the selected output must be configured. If this is not the case, the status remains unchanged.

* Default value

Parameter	Description	Value
Brightness value on Logic result = 0 (0-100%) <i>Note: This parameter is only visible if the Action if logic result = 0 parameter has the following value: Value%</i>	This parameter determines the brightness value that is applied if the logic result is 0 after the re-evaluation.	0... 100 *%

Parameter	Description	Value
Dimming speed for brightness value when Logic result = 0	This parameter determines the dimming speed to attain the brightness value if the logic result is 0 after re-evaluation.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Action if logic result = 0** parameter has the following value: **Value%***

Parameter	Description	Value
Scene if logic result = 0	This parameter determines the scene number that should be activated if the logic result is 0 after re-evaluation.	Scene 1... 64 Default value: 1

The outputs respond according to the scene numbers and associated parameters

*Note: This parameter is only visible if the **Action if logic result = 0** parameter has the following value: **Scene number***

Parameter	Description	Value
Action if logic result = 1	On the outputs that are directly dependent on Logic 1 result , if the output value = "1", the status: is not changed is switched to the opposite status is selectively switched on is selectively switched off is set to a stored value starts timer mode stops timer mode starts one of the 64 scenes adopts the default value given by the parameter Status on preset 1 object = 1 adopts the default value given by the parameter Status on preset 2 object = 1	Maintain status Inversion ON * Off Value % Timer start Timer stop Scene number Preset 1 Preset 2

* Default value

Note: The Timer mode, Scene function or Preset function of the selected output must be configured. If this is not the case, the status remains unchanged.

Note on inversion: If the brightness value is greater than or equal to 1%, the value goes to 0%. If the brightness value is less than 1%, the value goes to 100%.

Parameter	Description	Value
Brightness value on Logic result = 1 (0-100%)	This parameter determines the brightness value that is applied if the logic result is 1 after the re-evaluation.	0... 100%

*Note: This parameter is only visible if the **Action if logic result = 1** parameter has the following value: **Value%***

Parameter	Description	Value
Dimming speed for brightness value when Logic result = 1	This parameter determines the dimming speed to attain the brightness value if the logic result is 1 after re-evaluation.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Action if logic result = 1** parameter has the following value: **Value%***

Parameter	Description	Value
Scene if logic result = 1	This parameter determines the scene number that should be activated if the logic result is 1 after re-evaluation.	Scene 1... 64 Default value: 2

The outputs respond according to the scene numbers and associated parameters.

*Note: This parameter is only visible if the **Action if logic result = 1** parameter has the following value: **Scene number***

* Default value

3.5 Devise diagnosis

The **Device diagnosis object** allows notifications about the operating status of the device to be sent via the KNX bus.

This information is sent periodically and/or on status change.

The **Device diagnosis** object allows reporting of current faults according to the device and application. It also allows sending of the position of the switch on the front of the device and the number of the output that is affected by the fault(s).

The **Device Diagnosis** object is a 6-byte object that is composed as described below:

Byte number	6 (MSB)	5		4	3	2	1 (LSB)
Use	Switch position	Application type	Output number	Error codes			

Details of the bytes:

- **Bytes 1 to 4:** correspond to the error codes.

MSB																												LSB			
b31	b30	b29	b28	b27	b26	b25	b24	b23	b22	b21	b20	b19	b18	b17	b16	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
x	x	x	x	x	x	x	x	x	x	x	x	x	x	18	x	16	x	x	13	12	11	10	9	8	x	x	x	x	3	2	1

No.	Faults
1	Interruption to the power supply: The supply voltage of 230 V is not available. The device continues to run thanks to the supply on the KNX bus.
2	Wrong context: the user's parameters are not transferable. The standard parameters will be restored.
3	TP communication out of operation: Communication via the KNX bus was not available on the previous start.
8	Overload at the output: The power of the output load is too high.
9	Short circuit on the output: The dimmer automatically reduces the available power and no longer controls the load.
10	Over temperature on the output: The available power is reduced as long as the overtemperature is present.
11	Load default on output: The load on the corresponding output is non-existent or defective
12	Malfunction of the device switch: The position of the AUTO/MIN/MAX/MANU switch can not be determined (e.g. because of a fault with the internal contact)
13	Fault with the output number selection switch: (Concerns product reference 7531 30 07 only) The position of the channel number selection switch can not be determined (e.g. because of a fault with the internal contact)
16	Excessive number of restarts: This bit is use for notification of repeated restarts and/or a restart triggered by a Watch-Dog. Such a restart is not necessarily apparent to the user from the function, rather it is manifest as a disturbed environment or a bad contact of the power supply.
18	Over voltage at the output: The dimmer automatically reduces the available power and no longer controls the load.

Note: The use of the standard bits depends on the type of device used (switch actuator, dimmer, shutter/blind, etc.). Certain bits are same for all devices and others are application-specific.

* Default value

- **Byte 5:** corresponds to the application type and the number of the output affected by the error.

MSB			LSB				
b7	b6	b5	b4	b3	b2	b1	b0
Application type			Output number				
0 = not defined			0 = device error				
1 = switch actuator			1 = output 1				
2 = shutter/blind			2 = output 2				
3 = dimmer						
			Y = output Y				


Note: Y is the placeholder for the maximum number of outputs.

- **Byte 6:** Switch position

MSB							LSB
b7	b6	b5	b4	b3	b2	b1	b0
x	x	x	x	x	x	x	1

1: 0 = Automatic mode/1 = manual mode

Note: bits marked with an x are not used.

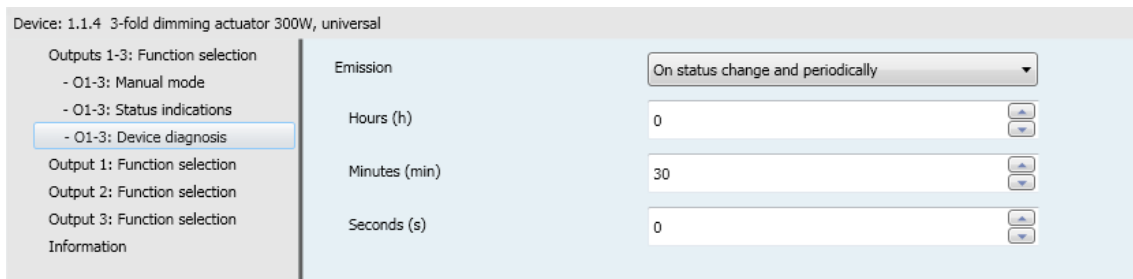

Parameter	Description	Value
Emission	The Device diagnosis communication object is sent:	
	On each change	On status change*
	Periodically after a configurable time	Periodically
	On change and periodically after a configurable time	On status change and periodically

Parameter	Description	Value
Hours (h)	This parameter determines the time between the individual transmissions of the Device diagnosis object.	0 hours: 0 to 23 h
Minutes (min)		30 minutes: 0 to 59 min.
Seconds (s)		0 seconds: 0 to 59 s

*Note: The smallest executable time is 1 second. Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

* Default value

3.6 Function selection

This parameter window is used to set the device outputs. These parameters are available individually for each output.

Device: 1.1.4 3-fold dimming actuator 300W, universal


Outputs 1-3: Function selection

- O1-3: Manual mode
- O1-3: Status indications
- Output 1: Function selection
- Output 2: Function selection
- Output 3: Function selection
- Information

Local min/max relative dimming limit settings		Not active
Apply relative min/max values after download		Active
Dimming mode after download		Values set on product
Authorization of the expert button		Active
Load memorisation		Not active
Relative dimming speed (h)	0	<input type="button" value="▲"/> <input type="button" value="▼"/>
Relative dimming speed (min)	0	<input type="button" value="▲"/> <input type="button" value="▼"/>
Relative dimming speed (s)	4	<input type="button" value="▲"/> <input type="button" value="▼"/>
Switch ON speed (soft ON) (h)	0	<input type="button" value="▲"/> <input type="button" value="▼"/>
Switch ON speed (soft ON) (min)	0	<input type="button" value="▲"/> <input type="button" value="▼"/>
Switch ON speed (soft ON) (s)	4	<input type="button" value="▲"/> <input type="button" value="▼"/>
Switch OFF speed (soft OFF) (h)	0	<input type="button" value="▲"/> <input type="button" value="▼"/>
Switch OFF speed (soft OFF) (min)	0	<input type="button" value="▲"/> <input type="button" value="▼"/>
Switch OFF speed (soft OFF) (s)	2	<input type="button" value="▲"/> <input type="button" value="▼"/>
Brightness value at switch ON (0-100%), last value (101)	101	<input type="button" value="▲"/> <input type="button" value="▼"/>
Minimum relative dimming value (1 - 50%)	1	<input type="button" value="▲"/> <input type="button" value="▼"/>
Maximum relative dimming value (51-100%)	100	<input type="button" value="▲"/> <input type="button" value="▼"/>
Switching ON by long press		Active
Switching OFF by long press		Active
Manual mode active for output 1		Yes
Status indication		Yes
Status indication ON/OFF		Active
Status ind. brightness value		Active
ON/OFF timings function		Not active
Timer		Not active
Scene		Not active
Preset		Not active
Lock-up		Not active
Priority		Not active
Hours counter		Not active
Notifications		Not active

* Default value

3.6.1 Definition - Dimmer and switch principle

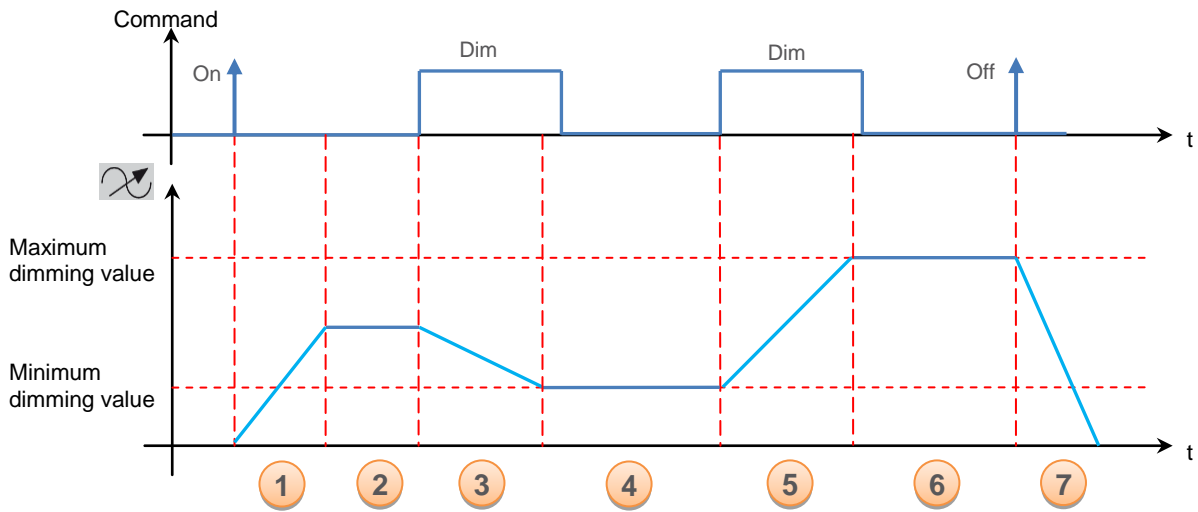

- 1 Switch ON speed (soft ON)
- 2 Status at switch on (0-100%), last brightness (101)
- 3 Relative dimming speed
- 4 Minimum dimming value (1-50)
- 5 Relative dimming speed
- 6 Maximum dimming value (51-100)
- 7 Switch OFF speed (soft OFF)

Upper and lower values can be set for the relative dimming for each output of the device. This configuring can be carried out over the KNX bus or locally using the buttons on the front of the device. The following parameters are used to configure the device for local settings.

Parameter	Description	Value
Local min/max relative dimming limit settings	The setting of a min/max value for relative dimming using the controls on the front of the device	Not active* Active
	is not possible	
	is possible	

* Default value

Parameter	Description	Value
Apply relative min/max values after download	After an ETS download the local min/max dimming value settings are maintained replaced by the ETS configured values	Not active Active*

Note: To manually save the minimum values for the relative dimming, the input range must be between 1 and 50%. To manually save the maximum values for the relative dimming, the input range must be between 51 and 100%.

On restarting after a download or using the ETS configuration tool, the limits for relative dimming are restored according to the value of the following parameter.

Parameter	Description	Value
Dimming mode after download	The dimming mode (inductive, capacitive, LED, etc.) after an ETS download, involves the dimming mode configured using the controls on the front of the device the dimming mode set using the ETS configuration.	Values set on product* Values settings in ETS

To optimize the dimming behaviour of the energy saving lamps, the device is equipped with a load learning function. It is also possible to set the dimming mode intended for the connected load type.

The learning procedure can be initiated in various ways.

1. Receipt of a "1" on the **Load memorisation** communication object enables the start of the learning process.
2. Load memorisation can also be started by a specific operating sequence of a KNX button:
 - Give 5 short presses on the KNX button configured for dimming (5 x ON, 5 x OFF or 5 x ON/OFF) and then one long press, until the load switches itself off.
 - Give a short press of the button to start the memorisation (press twice to restore the factory setting for dimming).

This process lasts around 30 seconds and results in varying brightness.

After the memorisation, the load is activated on the highest step and blinks once, to report that the learning is completed.

The minimum brightness can depend on the connected load.

This learning process can be authorized or disabled using the **Load memorisation** parameter.

This learning process can also be started using the controls on the front of the device; see the operating instructions for the device.

If a normal load is connected again, the device can be reset to the factory settings as follows: After the 5 button press sequence (see section on learning the load) give two further short presses. The device acknowledges the restoration of the factory settings by blinking the load twice. If there are no further presses of the buttons in the 10 seconds after the button pressing sequence, the device returns to the previous dimming mode.

This mode is ideal for conventional loads.

It is also possible to set the dimming mode intended for the connected load type via the ETS.

* Default value

Parameter	Description	Value
Dimming mode selection	After the next ETS download, the dimming mode of the device is set as follows:	
	Automatic load recognition of inductive and capacitive loads	Factory setting*
	Optimized dimming behaviour for energy saving lamps	Compact fluorescent lamp
	Optimized dimming behaviour for LEDs	LED load
	Phase control for inductive loads	Inductive load
	Phase control for capacitive loads	Capacitive load
	When the load is first switched ON after the ETS download, the learning procedure for LEDs and energy saving lamps is started.	Load memorisation

Note: This parameter is only visible if the **Dimming mode after download** parameter has the following value: **Values settings in ETS**.

Parameter	Description	Value
Authorization of the expert button	Setting of the dimming mode using the expert button on the front of the device is	
	not possible	Not active
	possible	Active*

Parameter	Description	Value
Load memorisation	The learning of the load via KNX commands is	
	not possible	Not active*
	possible	Active

Parameter	Description	Value
Relative dimming speed	This parameter determines the dimming speed for the brightness steps from 0% to 100% (long press of the dimmer switch).	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 4 seconds: 0 to 59 s

Parameter	Description	Value
Switch ON speed (soft ON)	This parameter defines the switch ON speed for attaining the brightness value after input of an ON command.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 4 seconds: 0 to 59 s

* Default value

Parameter	Description	Value
Switch OFF speed (soft OFF)	This parameter defines the switch OFF speed for attaining brightness value 0% after input of an OFF command.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 2 seconds: 0 to 59 s

Parameter	Description	Value
Brightness value at switch on (0-100%), last value (101)	On receipt of an ON command on the ON/OFF communication object, the output is set to the following value.	
	To the stored brightness value	0...100 %
	To the last brightness value	101*

Parameter	Description	Value
Minimum dimming value (1-50)	This parameter specifies a minimum brightness value for the dimming.	1*...50

Parameter	Description	Value
Maximum dimming value (51-100)	This parameter specifies a maximum brightness value for the dimming.	51...100*

Parameter	Description	Value
Switching ON by long press	Switching ON the output by relative dimming (long button press or 4-bit command)	
	is not possible	Not active
	is possible	Active*

Parameter	Description	Value
Switching OFF by long press	Switching OFF the output by relative dimming (long button press or 4-bit command)	
	is not possible	Not active
	is possible	Active*

Parameter	Description	Value
Manual mode active for output 1	This output can be controlled in manual mode.	Yes*
	This output is excluded from manual mode	No

* Default value

Parameter	Description	Value
Status indication	The Status indication communication objects and the associated parameters are hidden.	No
	The Status indication communication objects and the associated parameters are displayed.	Yes*

Parameter	Description	Value
Status indication ON/OFF	The Status indication ON/OFF communication object is hidden	Not active
	displayed, the status indication can be transmitted over the bus.	Active*

*Note: This parameter is only visible if the **Status indication** parameter has the following value: **Yes***

Communication objects: **7 - Output 1 – Status indication ON/OFF** (1 Bit – 1.001 DPT_Switch)
38 - Output 2 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)
69 - Output 3 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)

*Note: The transmission conditions for the Status indication objects must be set in the parameter Register "**O1-Ox: Status indication**"*

Parameter	Description	Value
Status ind. brightness value	The Status ind. brightness value communication object is hidden	Not active
	displayed, the status indication can be transmitted over the bus.	Active*

*Note: This parameter is only visible if the **Status indications** parameter has the following value: **Yes***

Communication objects: **8 - Output 1 – Status ind. brightness value** (1 Byte – 5.001 DPT_Scaling)
39 - Output 2 – Status ind. brightness value (1 Byte – 5.001 DPT_Scaling)
70 - Output 3 – Status ind. brightness value (1 Byte – 5.001 DPT_Scaling)

*Note: The transmission conditions for the Status indication objects must be set in the parameter Register "**O1-Ox: Status indication**"*

Parameter	Description	Value
ON/OFF object timings	The ON/OFF object timings tab and the associated parameters and objects are hidden	Not active*
	displayed	Active

For configuration see section: [ON/OFF object timings](#)

* Default value

Parameter	Description	Value
Timer	The Timer tab and the associated parameters and objects are hidden displayed	Not active* Active

Communication objects: **9 - Output 1 – Timer** (1 Bit – 1.001 DPT_Switch)
40 - Output 2 – Timer (1 Bit – 1.001 DPT_Switch)
71 - Output 3 – Timer (1 Bit – 1.001 DPT_Switch)

For configuration see section: [Timer](#)

Parameter	Description	Value
Scene	The Scenes tab and the associated parameters and objects are hidden displayed	Not active* Active

Communication objects: **11 - Output 1 – Scene** (1 Byte – 17.001 DPT_SceneNumber)
42 - Output 2 – Scene (1 Byte – 17.001 DPT_SceneNumber)
73 - Output 3 – Scene (1 Byte – 17.001 DPT_SceneNumber)

For configuration see section: [Scene](#)

Parameter	Description	Value
Preset	The Preset tab and the associated parameters and objects are hidden displayed for 1 preset object displayed for 2 preset objects	Not active* 1 preset object 2 preset objects

Note: When the value of this parameter changes, the associated parameters and group addresses are deleted.

Preset 1 communication objects: **12 - Output 1 – Preset 1** (1 Bit – 1.022 DPT_Scene_AB)
43 - Output 2 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
74 - Output 3 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)

Preset 2 communication objects: **13 - Output 1 – Preset 2** (1 Bit – 1.022 DPT_Scene_AB)
44 - Output 2 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
75 - Output 3 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)

For configuration see section: [Preset](#)

* Default value

Parameter	Description	Value
Lock-up	The Lock-up tab and the associated parameters and objects are hidden displayed for 1 lock-up object displayed for 2 lock-up objects	Not active* 1 lock-up object 2 lock-up objects

Lock-up 1 communication objects: **16 - Output 1 – Lock-up 1** (1 Bit – 1.003 DPT_Enable)
47 - Output 2 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
78 - Output 3 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)

Lock-up 2 communication objects: **17 - Output 1 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
48 - Output 2 – Lock-up 2 (1 Bit – 1.003 DPT_Enable)
79 - Output 3 – Lock-up 2 (1 Bit – 1.003 DPT_Enable)

For configuration see section: [Lock-up](#)

Parameter	Description	Value
Priority	The Priority tab and the associated parameters and objects are hidden displayed	Not active* Active

The device responds to telegrams received via the **Priority** object, as given in the following table:

Telegram received by the priority operation object		Status of the outputs
Bit 1	Bit 2	
0	0	End of the priority
0	1	End of the priority
1	0	Priority OFF
1	1	Priority ON

Communication objects: **19 - Output 1 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
50 - Output 2 – Priority (2 Bit – 2.002 DPT_Bool_Control)
81 - Output 3 – Priority (2 Bit – 2.002 DPT_Bool_Control)

For configuration see section: [Priority](#)

* Default value

Parameter	Description	Value
Hours counter	The Hours counter tab and the associated parameters and objects are	
	hidden	Not active*
	displayed	Active

A telegram can be transmitted via the **Operating h. counter setpoint reached** object, in accordance with a programmable setpoint.

It is also possible to reset the count value via a "1" signal on the **Reset hours counter value** object

Communication objects:

21 - Output 1 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)

52 - Output 2 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)

83 - Output 3 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)

22 - Output 1 – Reset hours counter (1 Bit – 1.015 DPT_Reset)

53 - Output 2 – Reset hours counter (1 Bit – 1.015 DPT_Reset)

84 - Output 3 – Reset hours counter (1 Bit – 1.015 DPT_Reset)

23 - Output 1 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)

54 - Output 2 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)

85 - Output 3 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)

For configuration see section: [Hours counter](#)

Parameter	Description	Value
Notifications	The Notification tab and the associated parameters and objects are	
	hidden	Not active*
	displayed	Active

For configuration see section: [Notification](#)

* Default value

3.6.2 ON/OFF object timings

Device: 1.1.4 3-fold dimming actuator 300W, universal

Outputs 1-3: Function selection

- O1-3: Manual mode
- O1-3: Status indications

Output 1: Function selection

- O1: ON/OFF object timings

Output 2: Function selection

Output 3: Function selection

Information

Delays for ON/OFF objects

Switching and tripping delay ▼

Switching delay (h) ▲ ▼

Switching delay (min) ▲ ▼

Switching delay (s), minimum value 1s ▲ ▼

Tripping delay (h) ▲ ▼

Tripping delay (min) ▲ ▼

Tripping delay (s), minimum value 1s ▲ ▼

Timer/toggle switch changeover for object ON/OFF

Active ▼

Hours (h) ▲ ▼

Minutes (min) ▲ ▼

Seconds (s), minimum value 1s ▲ ▼

Additional time limited toggle switch function

Active ▼

Hours (h) ▲ ▼

Minutes (min) ▲ ▼


Seconds (s), minimum value 1s ▲ ▼

3.6.2.1 Delays for ON/OFF objects


Parameter	Description	Value
Delays for ON/OFF objects	The parameters for time-delayed switching of the outputs are	
	hidden	Not active*
	displayed for Switching delay	Switching delay
	displayed for Tripping delay	Tripping delay
	displayed for Switching and tripping delay	Switching and tripping delay

* Default value


Switching delay: Allows the configuration of a delay between the switch-on command and the switching of the output contact.

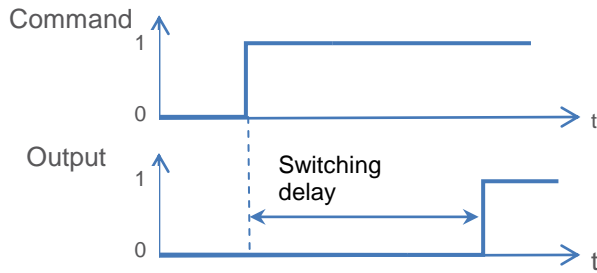

Tripping delay: Allows the configuration of a delay between the switch-off command and the switching of the output contact.

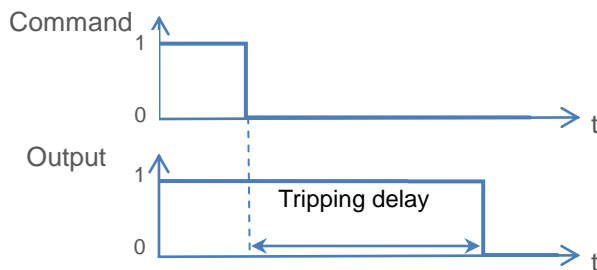

Switching and tripping delay: Allows the configuration of a delay between the switch-on command and the switching of the output contact, as well as between the switch-off command and the switching of the output contact.

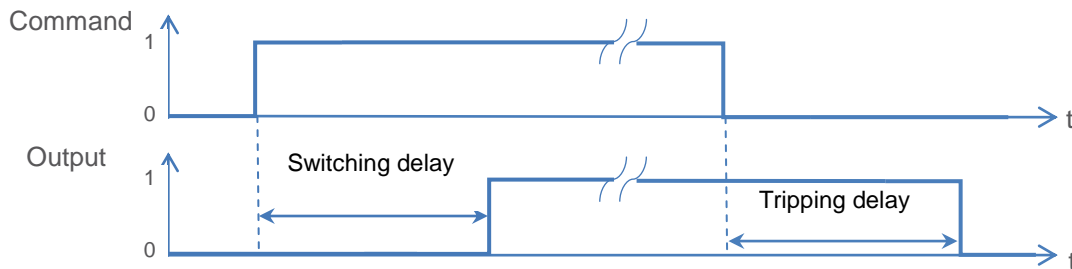

Parameter	Description	Value
Switching delay	This parameter defines the delay between the switch-on command and the switching of the output contact.	0 hours: 0 to 23 h 3 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Delays for ON/OFF object** parameter has the following value: **Switching delay** or **Switching and tripping delay**.*

Parameter	Description	Value
Tripping delay	This parameter defines the delay between the switch-off command and the switching of the output contact.	0 hours: 0 to 23 h 3 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

* Default value

Note: The smallest executable time is 1 second.

Note: This parameter is only visible if the **Delays for ON/OFF object** parameter has the following value: **Tripping delay** or **Switching and tripping delay**.

3.6.2.2 Timer/toggle switch changeover for ON/OFF object

This function switches the output channels between toggle switch and timer mode. The **ON/OFF** object is used for both functions.


For example, *Switching function daytime and Time-limited OFF function at night.*

During the day, the button is used as a switch. In the evenings, the button is used as a time-limited OFF switch, so that the light will turn off automatically.

Parameter	Description	Value
Timer/toggle switch changeover for ON/OFF object	The Timer/toggle switch changeover object and the associated parameters are hidden	Not active*
	displayed	Active

Active: The associated parameters and objects are displayed.

- If the **Timer/toggle switch changeover** object receives the value "1", the toggle-switch mode function is deactivated. The switching of the output is performed as usual via the **ON/OFF** object.
- If the **Timer/toggle switch changeover** object receives the value "0", the toggle-switch mode function is activated.
 - o If the **ON/OFF** object receives the value "1", the telegram will be treated as a switching ON of the toggle-switch mode. The toggle-switch mode is applied depending on the setting of the duration of the toggle-switch mode.
 - o If the **ON/OFF** object receives the value "0", the telegram will be treated as a switching OFF of the toggle-switch mode.

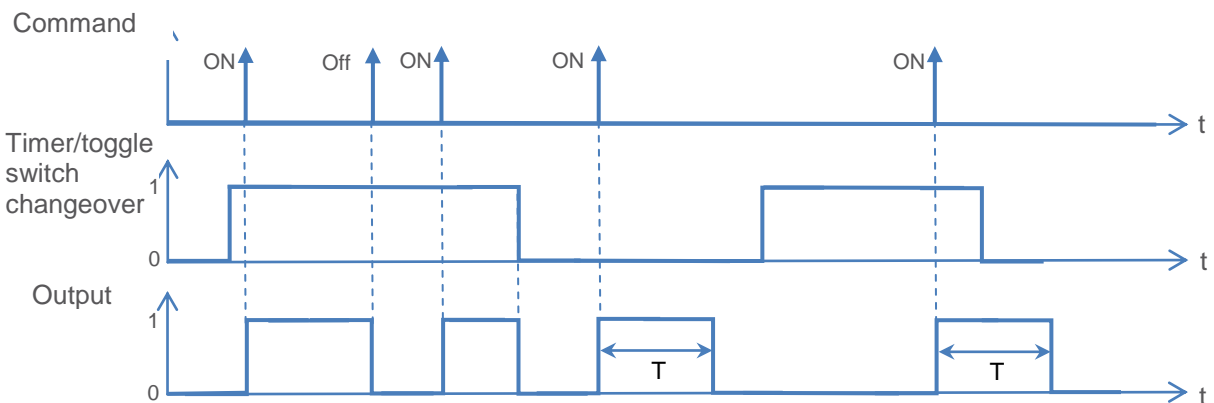

Communication objects: **5 - Output 1 – Timer/toggle switch changeover** (1 Bit – 1.001 DPT_Switch)
36 - Output 2 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
67 - Output 3 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)

* Default value

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter sets the length of the toggle-switch operation, if this is activated.	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

Note: This parameter is only visible if the **Timer/toggle switch changeover** parameter for the switching object has the following value: **Active**

3.6.2.3 Time-limited OFF


The Time-limited OFF function enables automatic switch off after a programmable **Time-limited OFF** time.

The output works as a normal switch actuator but is switched off after a given time for security.

Example: In an attic, the lighting can be switched quite normally but switches off after not more than 3 hours.

Parameter	Description	Value
Additional time limited toggle switch function	The parameters for setting the Time-limited OFF time are	
	hidden	Not active*
	displayed	Active

Function diagram

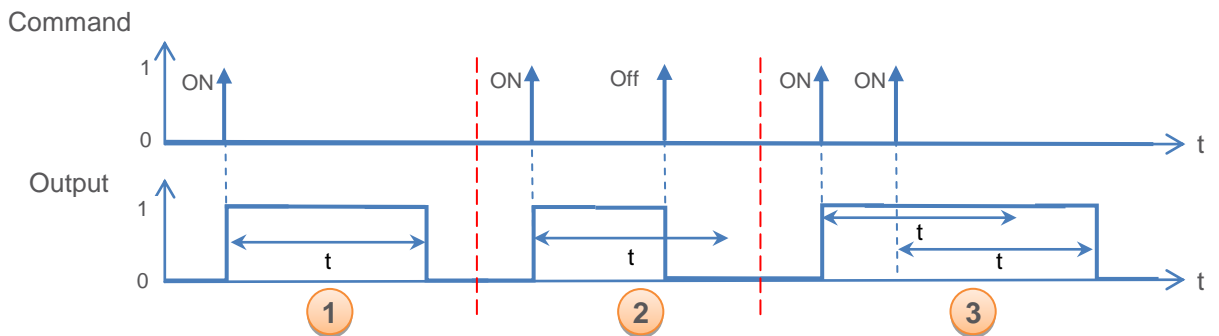

- 1 Emission of an ON command: The output which is at ON will switch to OFF on expiry of the **Time-limited OFF time**.
- 2 Emission of an ON command: The output switches to ON.
Emission of an OFF command before expiry of the **Time-limited OFF time**, t: The output switches to OFF
- 3 Emission of an ON command: The output switches to ON.
Emission of an ON command before expiry of the **Time-limited OFF time**, t: The output remains at ON and the **Time-limited OFF time**, t, is re-started.

* Default value

Communication objects: **6 - Output 1 – Time limited toggle switch** (1 Bit – 1.001 DPT_Switch)
37 - Output 2 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
68 - Output 3 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter sets the length of the timer operation for the Time-limited toggle switch , if this is activated.	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Additional time limited toggle switch function** parameter has the following value: **Active***

3.6.3 Timer

The timer function can switch a lighting circuit on or off for a configurable period.

According to the selected operating mode of the timer, the output can be turned to a brightness value for a determined period of time. The timer may be interrupted before expiry of the delay time. A programmable Cut-OFF pre-warning announces the end of the delay time by halving the present brightness of the output.

Device: 1.1.4 3-fold dimming actuator 300W, universal

Outputs 1-3: Function selection

- O1-3: Manual mode
- O1-3: Status indications

Output 1: Function selection

- O1: Timer

Output 2: Function selection

Output 3: Function selection

Information

Timer operation	Value %
Timer duration (h)	0
Timer duration (min)	3
Timer duration (s), minimum value 1s	0
Brightness value during timer (0-100%), last value (101)	101
Dimming speed for brightness value during timer (h)	0
Dimming speed for brightness value during timer (min)	0
Dimming speed for brightness value during timer (s)	0
Cut-OFF pre-warning	Active
Hours (h)	0
Minutes (min)	0
Seconds (s)	30
Timer interruption	Yes
Timer retriggerability	Yes
Timer duration extension (10 first seconds)	Unlimited
Timer duration modifiable through object	Not active

* Default value

3.6.3.1 Timer operation

Parameter	Description	Value
Timer operation	On activation of the timer the output is set, for the timer duration, to a specified brightness value alternates between two brightness values (blink time configurable using the additional parameters).	Value %* Blinking

Parameter	Description	Value
Timer duration	This parameter determines the timer duration.	0 hours: 0 to 23 h 3 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

Parameter	Description	Value
Brightness value during timer (0-100%), last value (101)	During the timer duration, the output is set to the following value. To the stored brightness value To the last brightness value	 0...100 101


*Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Value %***

Parameter	Description	Value
Dimming speed for brightness value during timer	This parameter defines the dimming speed for attaining the brightness value on activation of the timer function.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Value %***

* Default value

Operating principle of the blink function:

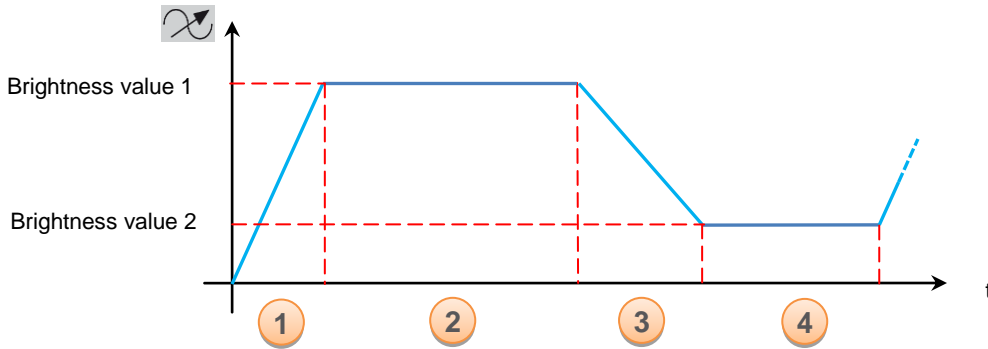

- 1 Dimming speed for brightness value 1
- 2 Brightness value 1 duration
- 3 Dimming speed for Brightness value 2
- 4 Brightness value 2 duration

Parameter	Description	Value
Brightness val. 1 during blinking (0-100%), last value (101)	Brightness value 1 during Blinking corresponds to the stored value the last brightness value.	0...100 101

Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking**

Parameter	Description	Value
Duration brightness value 1 during blinking (s)	Brightness value 1 during blinking is set for the following time	5 seconds: 5 to 240 s

Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking**

Parameter	Description	Value
Dimming speed for brightness value 1 during blinking (s)	This parameter defines the dimming speed for attaining brightness value 1 during blinking.	0 seconds: 0 to 240 s

Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking**

* Default value

Parameter	Description	Value
Brightness val. 2 during blinking (0-100%), last value (101)	Brightness value 2 during Blinking corresponds to the stored value the last brightness value.	0...100 101*

Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking**

Note: If Brightness value 1 and Brightness value 2 are set to maintain the output value at 101, no blinking will be detectable.

Parameter	Description	Value
Duration brightness value 2 during blinking (s)	Brightness value 2 is set during blinking for the following time.	5 seconds: 5 to 240 s

Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking**

Parameter	Description	Value
Dimming speed for brightness value 2 during blinking (s)	This parameter defines the dimming speed for attaining brightness value 2 during blinking.	0 seconds: 0 to 240 s

Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking**

Parameter	Description	Value
Output status during blinking function	On blinking of the dimmer outputs, the Status indication ON/OFF object sends the value "1" = ON the value "0" = OFF Alternating values depending on the current brightness value Brightness value = 0 Status indication = 0 Brightness value > 0 Status indication = 1	ON* Off ON/OFF

Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking**

* Default value

3.6.3.2 Cut-OFF pre-warning

Parameter	Description	Value
Cut-OFF pre-warning	Before expiry of the timer delay there is no warning	Not active
	a warning through a 1-second halving of the brightness value. The lead time of this warning can be set.	Active*

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the lead time of the cut-OFF pre-warning	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 30 seconds: 0 to 59 s

*Note: The smallest executable time is 1 second. Note: This parameter is only visible if the **Cut-OFF pre-warning** parameter has the following value: **Active***

Note: If the lead time of the cut-OFF pre-warning is greater than the duration of the timer, the cut-OFF pre-warning is not triggered.

3.6.3.3 Configuration

Parameter	Description	Value
Timer interruption	On receiving the value "0" on the Timer communication object, the timing is interrupted	Yes*
	not interrupted	No

Parameter	Description	Value
Timer retriggerability	The parameter Timer duration extension (10 first seconds) is hidden	No
	displayed	Yes*

* Default value

Parameter	Description	Value
Timer duration extension (10 first seconds)	If, during the first 10 seconds of the timer duration, on the Timer communication object commands with the value "1" are received, the timer duration is multiplied by the number of "1" commands. multiplied 1x multiplied a maximum of 2x multiplied a maximum of 3x multiplied a maximum of 4x multiplied a maximum of 5x	Unlimited* 1-time duration extension 2-time duration extension 3-time duration extension 4-time duration extension 5-time duration extension

Parameter	Description	Value
Timer duration modifiable through object	The Timer duration communication object is hidden displayed, the timer duration can be transmitted via the bus.	Not active* Active

Communication objects: **10 - Output 1 – Timer duration** (3 Byte – 10.001 DPT_TimeOfDay)
41 - Output 2 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)
72 - Output 3 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)

* Default value


3.6.4 Scene

Device: 1.1.4 3-fold dimming actuator 300W, universal

<ul style="list-style-type: none"> Outputs 1-3: Function selection - O1-3: Manual mode - O1-3: Status indications Output 1: Function selection <li style="background-color: #e0e0e0;">- O1: Scenes Output 2: Function selection Output 3: Function selection Information 	Number of scenes used	8
	Scenes memorisation by long key press	Active
	Scenes memorisation acknowledgment (Output status inversed for 3s)	Not active
	Output status for scene 1	Not active
	Output status for scene 2	Not active
	Output status for scene 3	Not active
	Output status for scene 4	Not active
	Output status for scene 5	Not active
	Output status for scene 6	Not active
	Output status for scene 7	Not active
	Output status for scene 8	Not active
	Brightness val. 1 during blink.(0-100%), last value (101)	100
	Duration brightness value 1 during blinking (s)	5
	Dimming speed for brightness value 1 during blinking (s)	0
	Brightness val. 2 during blink.(0-100%), last value (101)	101
Duration brightness value 2 during blinking (s)	5	
Dimming speed for brightness value 2 during blinking (s)	0	
Output status during blinking function	ON	

* Default value

Operating principle of the scenes:

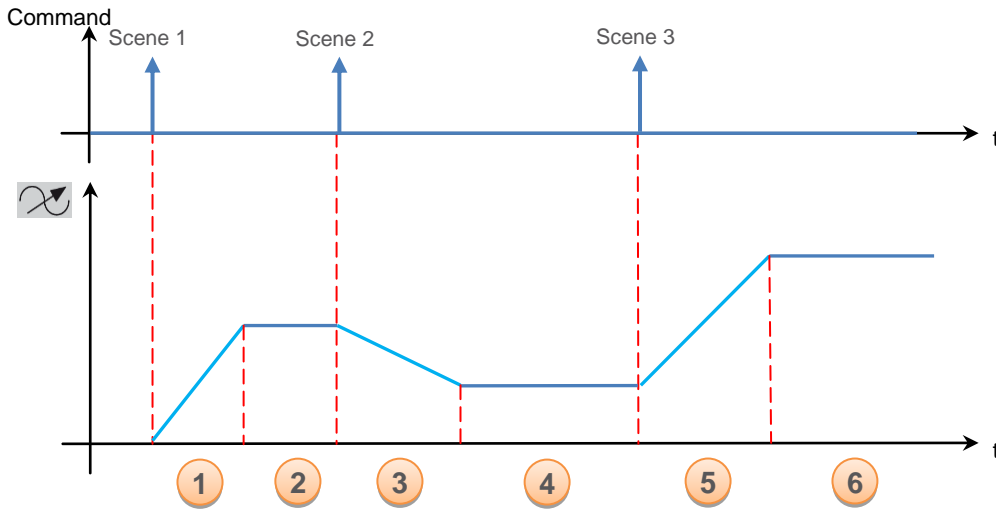

- ① Dimming speed for Scene 1
- ② Brightness value for Scene 1
- ③ Dimming speed for Scene 2
- ④ Brightness value for Scene 2
- ⑤ Dimming speed for Scene 3
- ⑥ Brightness value for Scene 3

Parameter	Description	Value
Number of scenes used	This parameter determines the number of scenes used.	8 * - 16 - 24 - 32 - 48 - 64

Note: If the Scene number received on the Scene object is greater than the maximum number of scenes, the status of the output remains unchanged.

Parameter	Description	Value
Scene memorisation by a long key press	This parameter allows learning and storing of a scene by, for example, a long press (> 5 seconds) of the corresponding key.	Not active Active*

* Default value

Learning and storing scenes


This process is used to change and store a scene. For example, by locally pressing the key in the room or by emission of the values from a visualization.

To access and store scenes, the following values must be sent.

Scene number	Access scene (object value 1-byte)	Store scene (object value 1-byte)
1-64	= Scene number -1	= Scene number +128
Examples		
1	0	128
2	1	129
3	2	130
...	...	
64	63	191

Here is the scene memorisation for local switches, for example.

- Activate scene by briefly pressing the transmitter that starts it,
- The outputs (lights, shutters, etc.) are set in the desired state using the usual control devices (buttons, remote control, etc.),
- Memorise the status of the outputs with a press greater than 5 seconds long on the transmitter that starts the scene. The memorisation can be displayed by short-term activation of the outputs.

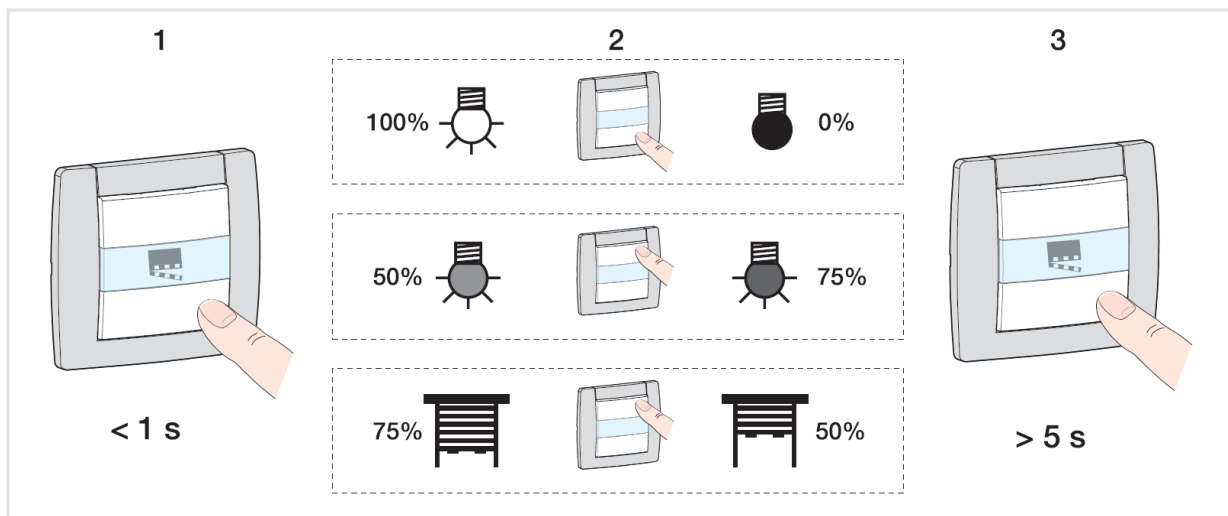

Parameter	Description	Value
Scenes memorisation acknowledgment	<p>Memorisation of a scene is not acknowledged</p> <p>acknowledged by the output by a 3 second long inversion of the output status.</p>	<p>Not active*</p> <p>Active</p>

* Default value

Parameter	Description	Value
Output status for scene X	On activation of Scene X the output is not changed switched on switched off alternated according to the Blink function (Blink time configurable via the additional parameters) set to the stored value	Not active* On Off Blinking Value %

X = 1 to 64

*Note: Each output has up to 64 scenes available, in accordance with the **Number of scenes used** parameter*

*Note: Local memorisation of the scene is not recorded if the **Output status for scene 1** parameter is not active.*

Parameter	Description	Value
Brightness value for Scene X (0-100%), X = 1 to 64	This parameter defines the brightness value that is applied to the output when Scene X is selected.	0... 100


*Note: This parameter is only visible if the **Output status for scene X** parameter has the following value: **Value%***

Parameter	Description	Value
Dimming speed for Scene X X = 1 to 64	This parameter defines the dimming speed for attaining the brightness value when Scene X is selected.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Output status for scene X** parameter has the following value: **Value%***

* Default value

Operating principle of the blink function:

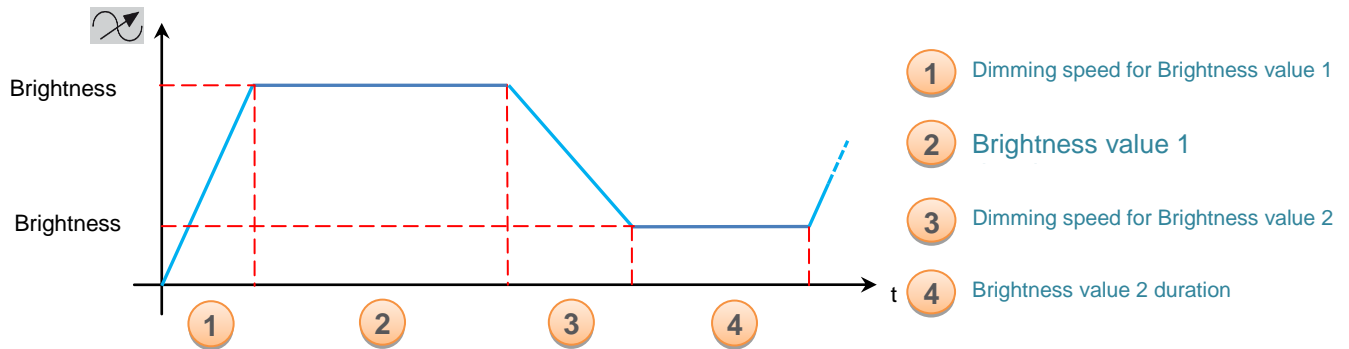

Parameter	Description	Value
Brightness val. 1 during blinking (0-100%), last value (101)	Brightness value 1 during Blinking corresponds to the stored value the last brightness value.	0...100 101

Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking**

Parameter	Description	Value
Duration brightness value 1 during blinking (s)	Brightness value 1 during blinking is set for the following time	5 seconds: 5 to 240 s

Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking**

Parameter	Description	Value
Dimming speed for brightness value 1 during blinking (s)	This parameter defines the dimming speed for attaining brightness value 1 during blinking.	0 seconds: 0 to 240 s

Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking**

Parameter	Description	Value
Brightness val. 2 during blinking (0-100%), last value (101)	Brightness value 2 during Blinking corresponds to the stored value the last brightness value.	0...100 101*

Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking**

* Default value

Parameter	Description	Value
Duration brightness value 2 during blinking (s)	Brightness value 2 during blinking is set for the following time	5 seconds: 5 to 240 s

*Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking***

Parameter	Description	Value
Dimming speed for brightness value 2 during blinking (s)	This parameter defines the dimming speed for attaining brightness value 2 during blinking.	0 seconds: 0 to 240 s

*Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking***

Parameter	Description	Value
Output status during blinking function	On blinking of the dimmer outputs, the Status indication ON/OFF object sends the value "1" = ON the value "0" = OFF Alternating values depending on the current brightness value Brightness value = 0 Status indication = 0 Brightness value > 0 Status indication = 1.	ON* Off ON/OFF

*Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking***

* Default value

3.6.5 Preset

Device: 1.1.4 3-fold dimming actuator 300W, universal

Outputs 1-3: Function selection

- O1-3: Manual mode
- O1-3: Status indications

Output 1: Function selection

- O1: Preset

Output 2: Function selection

Output 3: Function selection

Information

Preset authorization objects Active

Value of authorization preset 1 at initialization Value before initialization

Value of authorization preset 2 at initialization Value before initialization

Polarity of Preset 1 authorization object 0 = Locked-up , 1 = Authorized

Polarity of Preset 2 authorization object 0 = Locked-up , 1 = Authorized

Status if preset 1 object = 0 Scene number

Scene for preset 1 = 0 1

Status if preset 1 object = 1 Blinking

Brightness val. 1 during blink.(0-100%), last value (101) 100

Duration brightness value 1 during blinking (s) 5

Dimming speed for brightness value 1 during blinking (s) 0

Brightness val. 2 during blink.(0-100%), last value (101) 100

Duration brightness value 2 during blinking (s) 5

Dimming speed for brightness value 2 during blinking (s) 0

Output status during blinking function ON

Status if preset 2 object = 0 Maintain status

Status if preset 2 object = 1 Maintain status


The Preset function is used to switch an output into various predefined states. The preset function is activated via 1-bit format objects.

Principle of Preset authorization:

The parameters are set as follows:

- Polarity of Preset 1 authorization object: 0 = Locked-up , 1 = Authorized
- Polarity of Preset 2 authorization object: 0 = Locked-up , 1 = Authorized
- Status if preset 1 object = 0 ON
- Status if preset 1 object = 1 OFF
- Status if preset 2 object = 0 Scene1
- Status if preset 2 object = 1 Scene 2

* Default value

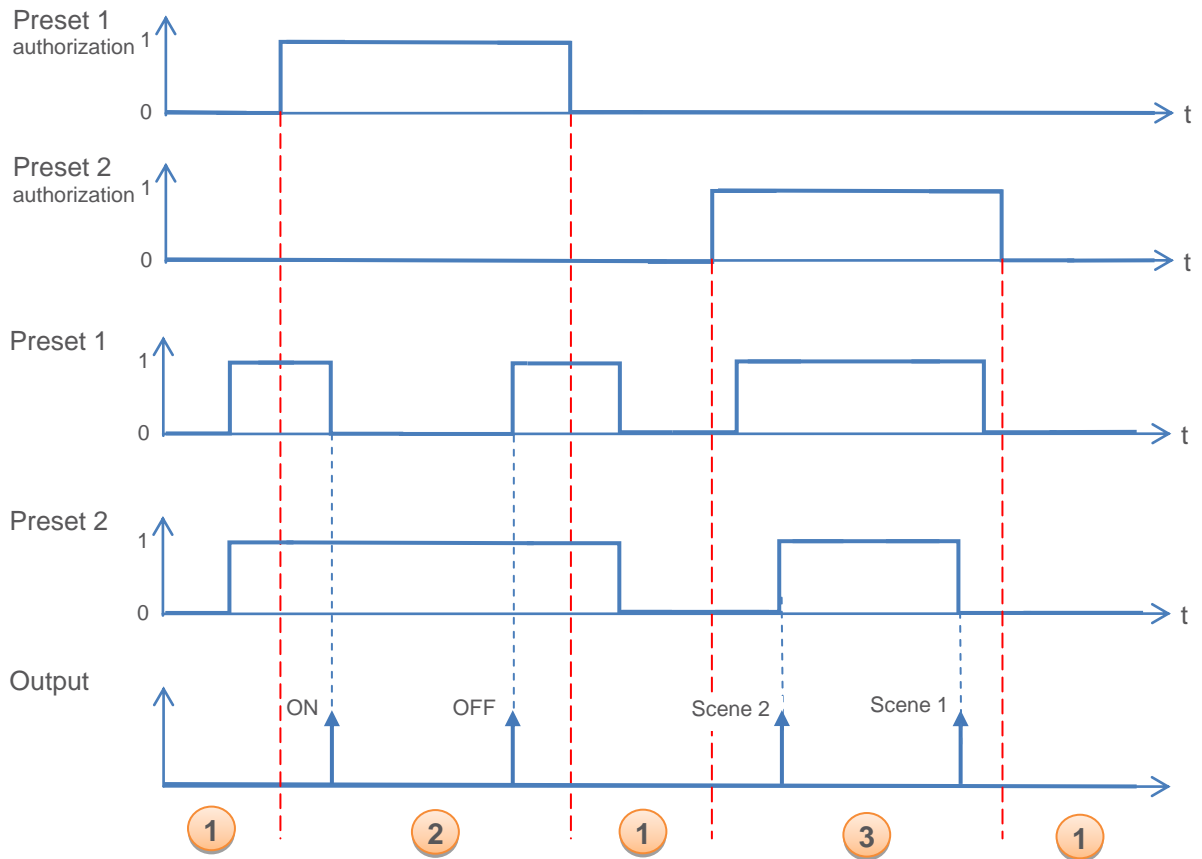

- 1 The preset inputs have no influence on the output
- 2 The commands from Preset 1 are executed
- 3 The commands from Preset 2 are executed

Note: The commands from the Preset will not be executed immediately after authorization, but only when the value of the Preset changes.

Parameter	Description	Value
Preset authorization objects	The " Preset 1 authorization " communication object and the related parameters are hidden displayed This object allows the authorization or lock-up of the Preset 1 function via a KNX telegram.	Not active* Active

Note: The number of available Preset objects is dependent on the **Preset** parameter. A maximum of two of these objects can be available.

Communication objects: **14 - Output 1 – Preset 1 authorization** (1 Bit – 1.003 DPT_Enable)

45 - Output 2 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)

76 - Output 3 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)

* Default value

Communication objects: **15 - Output 1 – Preset 2 authorization** (1 Bit – 1.003 DPT_Enable)
46 - Output 2 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
77 - Output 3 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)

Note: The parameters and objects are identical for Preset 2, only the terms are adjusted.

Parameter	Description	Value
Value of authorization preset 1 at initialization	On initialization of the device after a download or after return of the bus power, the value of the Preset 1 authorization object is: set to "0" set to "1" set according to the value that the object had before initialization	0 1 Value before initialization*

*Note: This parameter is only visible if the **Preset authorization objects** parameter has the following value: **Active***

Parameter	Description	Value
Polarity of Preset 1 authorization object	On receipt of a value on the Preset 1 authorization object, Preset 1 is locked-up on object value "1" is locked-up on object value "0"	0 = Authorized, 1 = Locked-up 0 = Locked-up , 1 = Authorized*

*Note: This parameter is only visible if the **Preset authorization objects** parameter has the following value: **Active***

Parameter	Description	Value
Status if preset 1 object = 0	On receipt of the value "0" on the Preset 1 object, the output is: not changed switched to the opposite status selectively switched on selectively switched off set to a stored brightness value set to a scene value set in blinking mode switched to the status that was active before last receiving the value "1" on the Preset 1 object.	Maintain status* Inversion On Off Value % Scene number Blinking Status before preset 1 = 1

* Default value

Note on inversion: If the brightness value is greater than or equal to 1%, the value goes to 0%. If the brightness value is less than 1%, the value goes to 100%.

Parameter	Description	Value
Brightness value if object Preset 1 = 0 (0-100%)	This parameter determines the brightness value which will be applied to the respective output if the Preset 1 object receives the value "0".	0...100

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter has the following value: **Value%***

Parameter	Description	Value
Dimming speed for the brightness value when Preset 1 = 0	This parameter determines the dimming speed to attain the brightness value of the respective output if the Preset 1 object receives the value "0".	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter has the following value: **Value%***

Parameter	Description	Value
Scene if Preset 1=0	This parameter determines the value of the scene if: <ul style="list-style-type: none"> - The Preset 1 object has value "0". - The Status if preset 1 object = 0 parameter has the scene value 	Scene 1... 64 Default value: 1

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter has the following value: **Scene number**.*

Parameter	Description	Value
Status if preset 1 object = 1	On receipt of the value "1" on the Preset 1 object, the output is: not changed switched to the opposite status selectively switched on selectively switched off set to a stored brightness value set to a scene value set in blinking mode switched to the status that was active before last receiving the value "1" on the Preset 1 object.	Maintain status* Inversion On Off Value % Scene number Blinking Status before preset 1 = 0

* Default value

Note on inversion: If the brightness value is greater than or equal to 1%, the value goes to 0%. If the brightness value is less than 1%, the value goes to 100%.

Parameter	Description	Value
Brightness value if preset 1 object = 1 (0-100%)	This parameter determines the brightness value which will be applied to the respective output if the Preset 1 object receives the value "1".	0...100

Note: This parameter is only visible if the **Status if preset 1 object = 1** parameter has the following value: **Value%**

Parameter	Description	Value
Dimming speed for the brightness value when Preset 1 = 1	This parameter determines the dimming speed to attain the brightness value of the respective output if the Preset 1 object receives the value "1".	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s


Note: This parameter is only visible if the **Status if preset 1 object = 1** parameter has the following value: **Value%**

Parameter	Description	Value
Scene for preset 1 = 1	This parameter determines the value of the scene if: <ul style="list-style-type: none"> - The Preset 1 object has value "1". - The Status on preset 1 object = 1 parameter has the scene value 	Scene 1... 64 Default value: Scene 1

Note: This parameter is only visible if the **Status if preset 1 object = 1** parameter has the following value: **Scene number**.

If the **Status on preset 1 object = 0** parameter, **Status on preset 1 =1** object, **Status on preset 2 = 0** object and **Status on preset 2 = 1** object have the value **Blinking**, the Blink parameter is configured as follows:

Operating principle of the blink function:

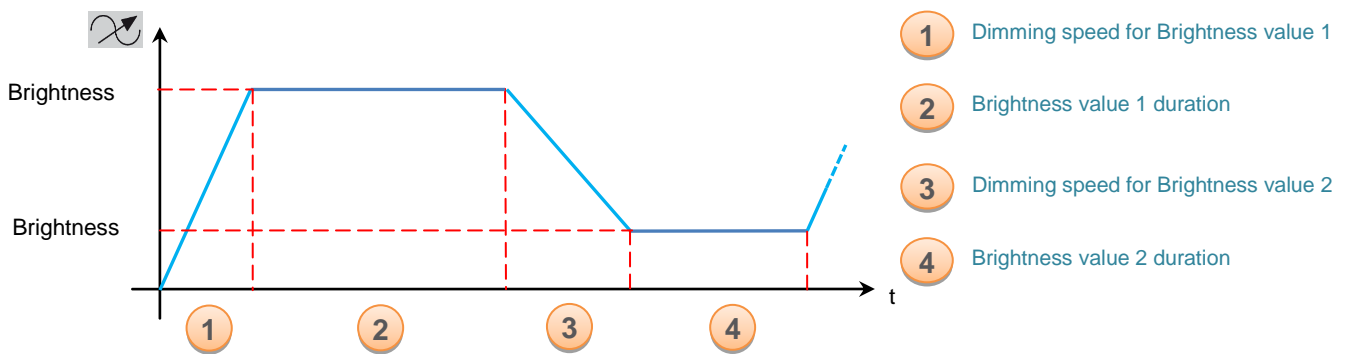

* Default value

Parameter	Description	Value
Brightness val. 1 during blinking (0-100%), last value (101)	Brightness value 1 during Blinking corresponds to the stored value the last brightness value.	0...100 101

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter or the **Status if preset 1 object = 1** parameter has the following value: **Blinking***

Parameter	Description	Value
Duration brightness value 1 during blinking (s)	Brightness value 1 is set during blinking for the following time.	5 seconds: 5 to 240 s

*Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking***

Parameter	Description	Value
Dimming speed for brightness value 1 during blinking (s)	This parameter defines the dimming speed for attaining brightness value 1 during blinking.	0 seconds: 0 to 240 s

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter or the **Status if preset 1 object = 1** parameter has the following value: **Blinking***

Parameter	Description	Value
Brightness val. 2 during blinking (0-100%), last value (101)	Brightness value 2 during Blinking corresponds to the stored value the last brightness value.	0...100 101

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter or the **Status if preset 1 object = 1** parameter has the following value: **Blinking***

Parameter	Description	Value
Brightness value 2 duration during blinking	Brightness value 2 during blinking is set for the following time	5 seconds: 5 to 240 s

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter or the **Status if preset 1 object = 1** parameter has the following value: **Blinking***

Parameter	Description	Value
Dimming speed for brightness value 2 during blinking	This parameter defines the dimming speed for attaining brightness value 2 during blinking.	0 seconds: 0 to 240 s

* Default value

Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter or the **Status if preset 1 object = 1** parameter has the following value: **Blinking**

Parameter	Description	Value
Output status during blinking function	On blinking of the dimmer outputs, the Status indication ON/OFF object sends the value "1" = ON the value "0" = OFF Alternating values depending on the current brightness value Brightness value = 0 Status indication = 0 Brightness value > 0 Status indication = 1.	ON* Off ON/OFF

Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter or the **Status if preset 1 object = 1** parameter has the following value: **Blinking**

3.6.6 Lock-up

Device: 1.1.4 3-fold dimming actuator 300W, universal

Outputs 1-3: Function selection

- O1-3: Manual mode
- O1-3: Status indications

Output 1: Function selection

- O1: Lock-up

Output 2: Function selection

Output 3: Function selection

Information

Lock-up type:

Lock-up duration:

Polarity of lock-up object 1:

Polarity of lock-up object 2:

Priority between lock-up 1 and lock-up 2:

Status during lock-up 1:

Status during lock-up 2:

Status after lock-up function 1:

Status after lock-up function 2:

Activation of lock-up status object:

Polarity:

Emission:

Hours (h):

Minutes (min):

Seconds (s):

The lock-up function is used to lock the output in a predefined state.

Priority: Manual mode > Priority > **Lock-up** > basic functions.

The lock-up prevents any actuation until an unlock command has been received. The Lock-up duration can be set.

* Default value

Parameter	Description	Value
Lock-up type	<p>The Lock-up acts:</p> <p>directly on the dimmer output. As long as the Lock-up is active, the output can only be controlled by higher priority commands. The output status at the end of the lock-up can be set.</p> <p>on selected communication objects. As long as the lock-up is active, the output can not be controlled via these objects.</p>	<p>Output lock-up*</p> <p>Objects lock-up</p>

Parameter	Description	Value
Lock-up duration	<p>The duration of the lock-up is</p> <p>not time limited, the lock-up is only authorized by means of a telegram on Lock-up 1 object.</p> <p>the lock-up is active for a limited time. After expiry of this time, control of the output is authorized.</p>	<p>Permanently*</p> <p>Time limited</p>

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	<p>This parameter determines the activation time of the lock-up.</p>	<p>0 hours: 0 to 23 h 15 minutes: 0 to 59 min. 0 seconds: 0 to 59 s</p> <p><i>Note: The smallest executable time is 1 second. Note: This parameter is only visible if the Lock-up duration parameter has the following value: Time limited</i></p>

Parameter	Description	Value
Polarity of lock-up object 1	<p>On receipt of a value on the Lock-up 1 object, the lock-up</p> <p>is activated on object value "1" deactivated on object value "0"</p> <p>activated on object value "0". deactivated on object value "1"</p>	<p>0 = Lock-up deactivated, 1 = Lock-up activated*</p> <p>0 = Lock-up activated, 1 = Lock-up deactivated</p> <p><i>Note: The parameters and objects are identical for Lock-up 2, only the terms will be adjusted.</i></p>

Parameter	Description	Value
Priority between lock-up 1 and lock-up 2	<p>The priority between lock-up 1 and lock-up 2 is set as follows:</p> <p>Lock-up 1 has priority over lock-up 2</p> <p>Lock-up 2 has priority over lock-up 1</p> <p>Lock-up 1 and lock-up 2 have the same priority</p>	<p>Lock-up 1 > Lock-up 2*</p> <p>Lock-up 1 < Lock-up 2</p> <p>Lock-up 1 = Lock-up 2</p>

* Default value

*Note: This parameter is only visible if the **Lock-up** parameter has the following value: **Active with 2 lock-up objects***

Note: The priority of the lock-up always functions in the same way, independently of the lock-up type (Output lock-up or object lock-up),

Operating principle of the priorities:

If Lock-up 1 > Lock-up 2

Active lock-up	Activation order of Lock-up 1	Activation order of Lock-up 2
None	Lock-up 1 is activated	Lock-up 2 is activated
Lock-up 1	Lock-up 1 remains active	Despite the activation order of Lock-up 2, Lock-up 1 remains activated
Lock-up 2	Lock-up 1 is activated	Lock-up 2 remains active

If Lock-up 1 = Lock-up 2

Active lock-up	Activation order of Lock-up 1	Activation order of Lock-up 2
None	Lock-up 1 is activated	Lock-up 2 is activated
Lock-up 1	Lock-up 1 remains active	Lock-up 2 is activated
Lock-up 2	Lock-up 1 is activated	Lock-up 2 remains active

If Lock-up 1 < Lock-up 2

Active lock-up	Activation order of Lock-up 1	Activation order of Lock-up 2
None	Lock-up 1 is activated	Lock-up 2 is activated
Lock-up 1	Lock-up 1 remains active	Lock-up 2 is activated
Lock-up 2	Despite the activation order of Lock-up 1, Lock-up 2 remains activated	Lock-up 2 remains active

Parameter	Description	Value
Status during lock-up 1	If the Lock-up type is set to " Output lock-up ", on activation of the lock-up the output will: not change switch to the opposite status selectively switch on selectively switch off set to the stored brightness value	Maintain status* Inversion On Off Value %

Note on inversion: If the brightness value is greater than or equal to 1%, the value goes to 0%. If the brightness value is less than 1%, the value goes to 100%.

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adjusted.

* Default value

Control is possible via the following objects despite Lock-up 1:

The parameters listed below allow the selection of the objects. The output can be controlled via the nevertheless active Lock-up.

*Note: These parameters are only visible if the **Lock-up type** parameter has the following value:*

Objects lock-up

Parameter	Objects concerned	Value
ON/OFF	ON/OFF	Yes No*
Dimming	Dimming	Yes No*
Brightness value	Brightness value	Yes No*
Scene	Scene	Yes No*
Timer	Timer	Yes No*
Timer/toggle switch changeover for ON/OFF object	Timer/toggle switch changeover	Yes No*
Time limited toggle switch	Time limited toggle switch	Yes No*
Preset 1	Preset 1	Yes No*
Preset 2	Preset 2	Yes No*

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adjusted.

Parameter	Description	Value
Status after lock-up function 1	<p>If the Lock-up type is set to "Output lock-up", on cancellation of the lock-up the output is:</p> <ul style="list-style-type: none"> not changed switched to the opposite status selectively switched ON selectively switched OFF set to the stored brightness value reset to the value that was active before the lock-up set to the status which would be active according to other communication objects had no lock-up taken place 	<p>Maintain status*</p> <p>Inversion</p> <p>On</p> <p>Off</p> <p>Value %</p> <p>Status before lock-up 1</p> <p>Theoretical status without lock-up function 1</p>

* Default value

Note on inversion: If the brightness value is greater than or equal to 1%, the value goes to 0%. If the brightness value is less than 1%, the value goes to 100%.

Note: The application of this parameter depends on the priority of the other active functions. If a function with higher priority is active, this parameter will not be enacted. In the case where two functions with the same priority are active, the parameter of the most recently switched off function is enacted.

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adjusted.

Parameter	Description	Value
Activation of lock-up status object	The " Status indication lock-up " communication object is hidden	Not active*
	The " Status indication lock-up " communication object is displayed	Active

Communication objects: **18 - Output 1 – Status indication lock-up** (1 Bit – 1.011 DPT_State)
49 - Output 2 – Status indication lock-up (1 Bit – 1.011 DPT_State)
80 - Output 3 – Status indication lock-up (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	The Status indication Lock-up communication object sends:	
	"0" on deactivation of the lock-up "1" on activation of the lock-up	0 = Lock-up deactivated, 1 = Lock-up activated*
	"1" on deactivation of the lock-up "0" on activation of the lock-up	0 = Lock-up activated, 1 = Lock-up deactivated

Parameter	Description	Value
Emission	The Status indication lock-up communication object is sent:	
	on activation and deactivation of the lock-up periodically after a configurable time	On status change* Periodically
	on activation and deactivation of the lock-up and periodically after a configurable time	On status change and periodically

*Note: This parameter is only visible if the **Activation of lock-up status object** parameter has the following value: **Active***


Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Activation of lock-up status object.	0 hours: 0 to 23 h 10 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

* Default value

Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically**

3.6.7 Priority

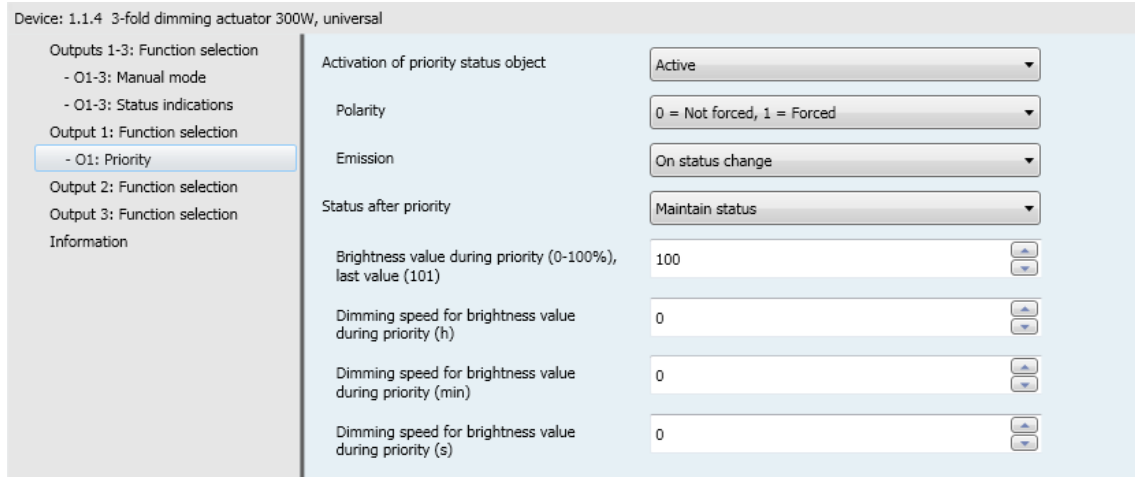

The Priority is used to force the output into a predefined state.

Priority: Manual mode > **Priority** > Lock-up > basic functions

No other command is considered when Priority is active.

Only by ending the Priority are other commands again permitted.

Parameter	Description	Value
Activation of priority status object	The " Status indication priority " communication object and related parameters are hidden	Not active*
	The " Status indication priority " communication object and related parameters are displayed	Active

Communication objects **20 - Output 1 – Status indication priority** (1 Bit – 1.011 DPT_State)
51 - Output 2 – Status indication priority (1 Bit – 1.011 DPT_State)
82 - Output 3 – Status indication priority (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	The Status indication priority communication object sends:	
	"1" on activation of the Priority "0" on deactivation of the Priority	0 = Not forced, 1 = Forced*
	"1" on deactivation of the Priority "0" on activation of the Priority	0 = Forced, 1 = Not forced

Note: This parameter is only visible if the **Activation of priority status object** parameter has the following value: **Active**

* Default value

Parameter	Description	Value
Emission	The Status indication priority communication object is sent: on activation and deactivation of the Priority periodically after a configurable time on activation and deactivation of the Priority and periodically after a configurable time	On status change* Periodically On status change and periodically

*Note: This parameter is only visible if the **Activation of priority status object** parameter has the following value: **Active***

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Activation of priority status object.	0 hours: 0 to 23 h 10 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Status after priority	At the end of the priority, the output is: not changed switched to the opposite status selectively switched on selectively switched off set to the stored brightness value switched back to the brightness value that was active before the priority switched to the status which would be active according to other communication objects if the priority had not taken place.	Maintain status* Inversion ON Off Value % Status before priority Theoretical status without priority

Note on inversion: If the brightness value is greater than or equal to 1%, the value goes to 0%. If the brightness value is less than 1%, the value goes to 100%.

* Default value

Note: The application of this parameter depends on the priority of the other active functions. If a function with higher priority is active, this parameter will not be enacted. In the case where two functions with the same priority are active, the parameter of the most recently switched off function is enacted.

Parameter	Description	Value
Brightness value after priority (0-100%)	This parameter defines the brightness value that is applied on the output after the end of priority.	0... 100

*Note: This parameter is only visible if the **Status after priority** parameter has the following value:
Value%*

Parameter	Description	Value
Dimming speed for brightness value after priority	This parameter defines the dimming speed for attaining the brightness value of the output after ending of the priority.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Status after priority** parameter has the following value:
Value%*

Parameter	Description	Value
Brightness value during priority (0-100%), last value (101)	Brightness value 1 during Priority corresponds to the stored value the last brightness value.	0... 100 101

Parameter	Description	Value
Dimming speed for brightness value during priority	This parameter defines the dimming speed for attaining the brightness value of the output during the priority.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

* Default value

3.6.8 Hours counter

The hours counter function is used to count the overall operating time of an output in the ON or OFF state.

The operating hours counter setpoint can be programmed and altered via an object.

Device: 1.1.4 3-fold dimming actuator 300W, universal


Outputs 1-3: Function selection - O1-3: Manual mode - O1-3: Status indications	Relay status for operating hours counter	Closed
Output 1: Function selection - O1: Hours counter	Hours counter direction	Increment
Output 2: Function selection	Operating h. counter setpoint	10000
Output 3: Function selection	Counter setpoint value modifiable through object	Not active
Information	Emission hours counter value	On status change and periodically
	Value interval (h)	100
	Periodical emission delay (h)	1
	Periodical emission delay (min)	0
	Periodical emission delay (s)	0
	Object emission counter setpoint reached	Periodically
	Periodical emission delay (h)	1
	Periodical emission delay (min)	0
	Periodical emission delay (s)	0

Parameter	Description	Value
Relay status for operating hours counter	The hours counter runs if the brightness value is > 0 the brightness value = 0	Closed* Opened

Parameter	Description	Value
Hours counter direction	The hours counter counts up down	Increment* Countdown


* Default value

Increment:

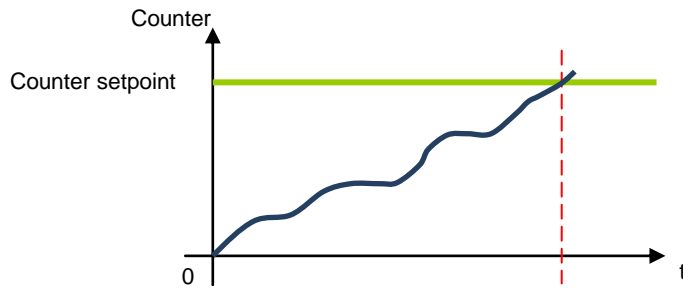

The counter starts to count up from the value 0. As soon as the counter setpoint (**Operating h. counter setpoint** object) is reached, the **Hours counter setpoint reached** object is set to "1" and sent to the bus.

Countdown:

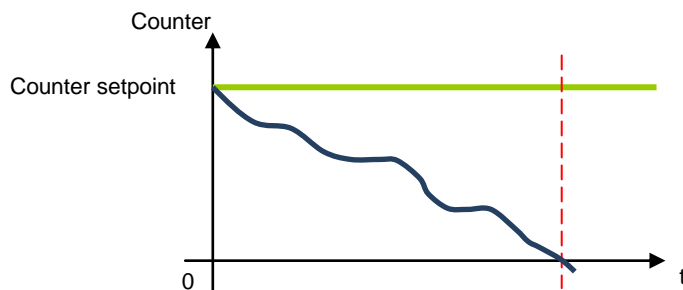

The counter starts to count down from the operating hours counter setpoint (**Operating h. counter setpoint** object). As soon as the counter reaches 0, the **Hours counter setpoint reached** is set to "1" and sent to the bus.

Parameter	Description	Value
Operating h. counter setpoint	This parameter determines the value of the hours counter	1 ... 10000* ...65535 (hours)

An incrementing counter starts at 0 and counts up until it reaches the setpoint value.

A countdown counter starts to count at the setpoint value and counts down until it has arrived at 0.

Parameter	Description	Value
Counter setpoint value modifiable through object	The " Operating h. counter setpoint " communication object is hidden	Not active*
	The " Operating h. counter setpoint " communication object is displayed. The value can be changed via the KNX bus	Active

Communication objects:

24 - Output 1 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)

55 - Output 2 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)

86 - Output 3 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)

* Default value

Parameter	Description	Value
Emission hours counter value	The Hours counter value communication object is sent: On each change Periodically after a configurable time On each change and periodically after a configurable time.	On status change* Periodically On status change and periodically

Parameter	Description	Value
Value interval (h)	This parameter specifies the value interval (in hours) for the sending frequency of the Operating h. counter setpoint object.	1 ... 100* ... 65535 (hours)

*Note: If the value interval is 200 hours, then the **Operating h. counter setpoint** object is sent each time 200 hours is counted.*

*Note: This parameter is only visible if the **Emission hours counter value** parameter has the following value: **On status change** or **On status change and periodically***

Parameter	Description	Value
Periodical emission delay	This parameter determines the time interval between the individual transmissions of the Operating h. counter setpoint object.	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Emission hours counter value** parameter has the following value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Object emission counter setpoint reached	The Hours counter setpoint reached communication object is sent: on reaching the counter setpoint periodically after a configurable time on reaching the counter setpoint and periodically after a configurable time.	On status change Periodically* On status change and periodically

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Hours counter setpoint reached object.	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Object emission counter setpoint reached** parameter has the following value: **Periodically** or **On status change and periodically***

* Default value

3.6.9 Notification

Device: 1.1.4 3-fold dimming actuator 300W, universal

Outputs 1-3: Function selection

- O1-3: Manual mode
- O1-3: Status indications

Output 1: Function selection

- O1: Notification

Output 2: Function selection

Output 3: Function selection

Information

Object dimming mode	Active	<input type="text"/>
Emission	Periodically	<input type="text"/>
Periodical emission delay (h)	0	<input type="text"/>
Periodical emission delay (min)	15	<input type="text"/>
Periodical emission delay (s)	0	<input type="text"/>
Object overload	Active	<input type="text"/>
Emission	On status change	<input type="text"/>
Object shortcircuit	Active	<input type="text"/>
Emission	On status change	<input type="text"/>
Object over voltage	Active	<input type="text"/>
Emission	On status change	<input type="text"/>
Object over temperature	Active	<input type="text"/>
Emission	On status change	<input type="text"/>
Object load default	Active	<input type="text"/>
Emission	On status change	<input type="text"/>

3.6.9.1 Dimming mode

Parameter	Description	Value
Object dimming mode	This parameter is used to authorize the Dimming mode object . This object enables the dimming mode to be sent.	Not active* Active

Communication objects: **25 - Output 1 – Dimming mode** (1 Byte – Spezifisch)
55 - Output 2 – Dimming mode (1 Byte – Spezifisch)
85 - Output 3 – Dimming mode (1 Byte – Spezifisch)

Parameter	Description	Value
Emission	The Dimming mode communication object is sent:	
	on each change	On status change*
	periodically after a configurable time	Periodically
	on each change and periodically after a configurable time	On status change and periodically

* Default value

Note: This parameter is only visible if the **Dimming mode** parameter has the following value: **Active**

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Dimming mode object.	0 hours: 0 to 23 h 15 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

Note: This parameter is only visible if the **Dimming mode emission** parameter has the following value: **Periodically** or **On status change and periodically**

3.6.9.2 Overload

Parameter	Description	Value
Object overload	This parameter is used to authorize the Overload object . This object is used for notification of an overload on the output concerned, via the KNX bus. An overload arises, for example, when several lamps are connected to the output, exceeding its rated power.	Not active* Active

Communication objects: **26 - Output 1 – Overload** (1 Bit – 1.005 DPT_Alarm)

57 - Output 2 – Overload (1 Bit – 1.005 DPT_Alarm)

88 - Output 3 – Overload (1 Bit – 1.005 DPT_Alarm)

Parameter	Description	Value
Emission	The Overload communication object is sent: on each change periodically after a configurable time on each change and periodically after a configurable time	On status change* Periodically On status change and periodically

Note: This parameter is only visible if the **Overload** parameter has the following value: **Active**

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Overload object.	0 hours: 0 to 23 h 15 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

Note: This parameter is only visible if the **Overload emission** parameter has the following value: **Periodically** or **On status change and periodically**

* Default value

3.6.9.3 Short circuit

Parameter	Description	Value
Objet shortcircuit	This parameter is used to authorize the Short circuit object . This object is used for notification of a short circuit on the output concerned, via the KNX bus.	Not active* Active

Communication objects: **27 - Output 1 – Short circuit** (1 Bit – 1.005 DPT_Alarm)
58 - Output 2 – Short circuit (1 Bit – 1.005 DPT_Alarm)
89 - Output 3 – Short circuit (1 Bit – 1.005 DPT_Alarm)

Parameter	Description	Value
Emission	The Short circuit communication object is sent: on each change periodically after a configurable time on each change and periodically after a configurable time	On status change* Periodically On status change and periodically

*Note: This parameter is only visible if the **Short circuit** parameter has the following value: **Active***

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Short circuit object.	0 hours: 0 to 23 h 15 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Short circuit emission** parameter has the following value: **Periodically** or **On status change and periodically***

3.6.9.4 Over voltage

Parameter	Description	Value
Object over voltage	This parameter is used to authorize the Over voltage object . This object is used for notification of an over voltage on the output concerned, via the KNX bus.	Not active* Active

Communication objects: **28 - Output 1 – Over voltage** (1 Bit – 1.005 DPT_Alarm)
59 - Output 2 – Over voltage (1 Bit – 1.005 DPT_Alarm)
90 - Output 3 – Over voltage (1 Bit – 1.005 DPT_Alarm)

* Default value

Parameter	Description	Value
Emission	The Over voltage communication object is sent: on each change periodically after a configurable time on each change and periodically after a configurable time	On status change* Periodically On status change and periodically

Note: This parameter is only visible if the **Short circuit** parameter has the following value: **Active**

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Over voltage object.	0 hours: 0 to 23 h 15 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

Note: This parameter is only visible if the **Over voltage emission** parameter has the following value: **Periodically** or **On status change and periodically**

3.6.9.5 Over temperature

Parameter	Description	Value
Object over temperature	This parameter is used to authorize the Over temperature object . This object is used for notification of an over temperature on the output concerned, via the KNX bus. An over temperature arises when a load is connected to the output that results in a temperature increase in the output current circuit.	Not active* Active

Communication objects:

- 29 - Output 1 – Over temperature** (1 Bit – 1.005 DPT_Alarm)
- 60 - Output 2 – Over temperature** (1 Bit – 1.005 DPT_Alarm)
- 91 - Output 3 – Over temperature** (1 Bit – 1.005 DPT_Alarm)

Parameter	Description	Value
Emission	The Over temperature communication object is sent: on each change periodically after a configurable time on each change and periodically after a configurable time	On status change* Periodically On status change and periodically

Note: This parameter is only visible if the **Short circuit** parameter has the following value: **Active**

* Default value

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Over temperature object.	0 hours: 0 to 23 h 15 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Over temperature emission** parameter has the following value: **Periodically** or **On status change and periodically***

3.6.9.6 Load default

Parameter	Description	Value
Object load default	This parameter is used to authorize the object load default . This object is used for notification of a load default on the output concerned, via the KNX bus. Load default means that the output has no load or a defective load.	Not active* Active

Communication objects:

- 30 - Output 1 – Load default** (1 Bit – 1.005 DPT_Alarm)
- 61 - Output 2 – Load default** (1 Bit – 1.005 DPT_Alarm)
- 92 - Output 3 – Load default** (1 Bit – 1.005 DPT_Alarm)

Parameter	Description	Value
Emission	The Load default communication object is sent:	
	on each change	On status change*
	periodically after a configurable time	Periodically
	on each change and periodically after a configurable time	On status change and periodically

*Note: This parameter is only visible if the **Load default** parameter has the following value: **Active***

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Load default object.	0 hours: 0 to 23 h 15 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Load default emission** parameter has the following value: **Periodically** or **On status change and periodically***

* Default value

4 Communication objects

4.1 General communication objects

	Number	Name	Object function	Length	C	R	W	T
■ ↕	93	Outputs 1-3	Deactivation of manual mode	1 Bit	C	R	W	-
■ ↕	94	Outputs 1-3	Status indication manual mode	1 Bit	C	R	-	T
■ ↕	95	Logic block 1	Authorization	1 Bit	C	R	W	-
■ ↕	96	Logic block 1	Input 1	1 Bit	C	R	W	-
■ ↕	97	Logic block 1	Input 2	1 Bit	C	R	W	-
■ ↕	98	Logic block 1	Input 3	1 Bit	C	R	W	-
■ ↕	99	Logic block 1	Input 4	1 Bit	C	R	W	-
■ ↕	100	Logic block 1	Logic result	1 Bit	C	R	-	T
■ ↕	101	Logic block 2	Authorization	1 Bit	C	R	W	-
■ ↕	102	Logic block 2	Input 1	1 Bit	C	R	W	-
■ ↕	103	Logic block 2	Input 2	1 Bit	C	R	W	-
■ ↕	104	Logic block 2	Input 3	1 Bit	C	R	W	-
■ ↕	105	Logic block 2	Input 4	1 Bit	C	R	W	-
■ ↕	106	Logic block 2	Logic result	1 Bit	C	R	-	T
■ ↕	107	Outputs 1-3	Restore ETS-params values	1 Bit	C	R	W	-
■ ↕	108	Outputs 1-3	Device LED switch off	1 Bit	C	R	W	-
■ ↕	109	Outputs 1-3	Devise diagnosis	6 Byte	C	R	-	T

4.1.1 Manual mode

No.	Description	Function of the object	Data type	Flags
93	Outputs 1-3	Deactivation of manual mode	1 Bit – 1.001 DPT_Switch	C, R,W
<p>This object is activated if the Manual mode parameter and the Deactivation of manual mode object parameter are active.</p> <p>This object is used to control the manual mode via the KNX bus.</p> <p>Object value: depends on the Polarity parameter.</p> <p>0 = Manual mode locked-up , 1 = Manual mode authorized:</p> <ul style="list-style-type: none"> - If the object receives the value "1", manual mode is activated. - If the object receives the value "0", manual mode is deactivated. <p>0 = Manual mode authorized, 1 = Manual mode locked-up:</p> <ul style="list-style-type: none"> - If the object receives the value "1", manual mode is deactivated. - If the object receives the value "0", manual mode is activated. <p>For further information, see: Manual mode</p>				

No.	Description	Function of the object	Data type	Flags
94	Outputs 1-3	Status indication manual mode	1 Bit – 1.011 DPT_Switch	C,R,T
<p>This object is activated if the Manual mode parameter and the Object status indication manual mode parameter are active.</p> <p>This object is used to send the manual mode status of the device via the KNX bus.</p> <p>Object value: depends on the Polarity parameter.</p> <p>0 = Manual mode active, 1 = Manual mode not active:</p> <ul style="list-style-type: none"> - If manual mode is deactivated, a telegram is sent with logic value "1". - If manual mode is activated, a telegram is sent with logic value "0". <p>0 = Manual mode not active, 1 = Manual mode active:</p> <ul style="list-style-type: none"> - If manual mode is activated, a telegram is sent with logic value "1". - If manual mode is deactivated, a telegram is sent with logic value "0". <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Manual mode</p>				

4.1.2 Logic block

No.	Description	Function of the object	Data type	Flags
95	Logic block 1	Authorization	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Logic block 1 parameter and the Lock-up logic block object are active.</p> <p>This object makes it possible to activate or deactivate the logic blocks of the device via the KNX bus.</p> <p>Object value: depends on the Polarity parameter.</p> <p>0 = Locked-up, 1 = Authorized:</p> <ul style="list-style-type: none"> - If the object receives the value "0", logic block 1 is deactivated. - If the object receives the value "1", logic block 1 is activated. <p>0 = Authorized, 1 = Locked-up:</p> <ul style="list-style-type: none"> - If the object receives the value "0", logic block 1 is activated. - If the object receives the value "1", logic block 1 is deactivated. <p>The value of this object can be initialized at start-up of the device.</p> <p>For further information, see: Logic block</p>				

No.	Description	Function of the object	Data type	Flags
96	Logic block 1	Input 1	1 Bit – 1.002 DPT_Bool	C, R, W
97	Logic block 1	Input 2	1 Bit – 1.002 DPT_Bool	C, R, W
98	Logic block 1	Input 3	1 Bit – 1.002 DPT_Bool	C, R, W
99	Logic block 1	Input 4	1 Bit – 1.002 DPT_Bool	C, R, W
<p>These objects are activated in accordance with the value of the Number of logic inputs parameter. There may be up to a maximum of 4 of these objects.</p> <p>These objects are used to produce the status of a logic input for processing of the logic operation.</p> <p>The value of these objects can be initialized at start-up of the device.</p> <p>For further information, see: Logic block</p>				

No.	Description	Function of the object	Data type	Flags
100	Logic block 1	Logic result	1 Bit – 1.002 DPT_Bool	C, R, T
<p>This object is activated when the Logic block 1 parameter is active.</p> <p>This object enables output of the results of the logic operation via the bus.</p> <p>The value of the object is the result of a logic AND or OR operation, according to the status of the logic inputs. There may be up to a maximum of 4 of these objects. This result can also be directly assigned to the status of the output contact.</p> <p>For further information, see: Logic block</p>				

No.	Description	Function of the object	Data type	Flags
101	Logic block 2	Authorization	1 Bit – 1.003 DPT_Enable	C, R, W
See object No. 95				

No.	Description	Function of the object	Data type	Flags
102	Logic block 2	Input 1	1 Bit – 1.002 DPT_Bool	C, R, W
103	Logic block 2	Input 2	1 Bit – 1.002 DPT_Bool	C, R, W
104	Logic block 2	Input 3	1 Bit – 1.002 DPT_Bool	C, R, W
105	Logic block 2	Input 4	1 Bit – 1.002 DPT_Bool	C, R, W
See object No. 96				

No.	Description	Function of the object	Data type	Flags
106	Logic block 2	Logic result	1 Bit – 1.002 DPT_Bool	C, R, T
See object No. 100				

4.1.3 Behaviour of the device



No.	Description	Function of the object	Data type	Flags
107	Outputs 1-3	Restore ETS-params settings	1 Bit – 1.015 DPT_Reset	C, R, W
<p>This object is activated if the Activ. of restore ETS-parameters object (scenes, timer, setpoints) parameter is active.</p> <p>This object enables the current parameter value to be replaced at any time with the ETS parameter value.</p> <p>If the object receives value "1", then the output status values for the scenes, the timer duration specifications and all the counter setpoints are reset to the values sent by the last download.</p> <p>For further information, see: Restore ETS-params settings</p>				

No.	Description	Function of the object	Data type	Flags
108	Outputs 1-3	Device LEDs Lock-up	1 Bit – 1.001 DPT_Switch	C, R, W
<p>This object is activated if the Device LEDS lock-up object parameter is active.</p> <p>This function is used to reduce the overall power consumption of the device. It allows the LEDs on the front of the device to be switched off.</p> <p>Object value: depends on the Polarity parameter</p> <p>0 = Status indication, 1 = Always OFF:</p> <ul style="list-style-type: none"> - If the object receives value "0", the LED display is activated. - If the object receives value "1", the LED display is deactivated. <p>0 = Always OFF, 1 = Status indication:</p> <ul style="list-style-type: none"> - If the object receives value "0", the LED display is deactivated. - If the object receives value "1", the LED display is activated. <p>For further information, see: LED display</p>				

4.1.4 Device diagnosis

No.	Description	Function of the object	Data type	Flags																
109	Outputs 1-3	Devise diagnosis	6 Byte - Specific	C, R, T																
<p>This object is activated when the Device diagnosis object parameter is active.</p> <p>The object enables reporting of current faults according to the device and the application used. It also allows sending of the position of the switch on the front of the device and the number of the output that is affected by the fault(s).</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Byte count</th> <td>6 (MSB)</td> <td colspan="2">5</td> <td>4</td> <td>3</td> <td>2</td> <td>1 (LSB)</td> </tr> </thead> <tbody> <tr> <th>Use</th> <td>Switch position</td> <td>Application type</td> <td>Output number</td> <td colspan="4">Error codes</td> </tr> </tbody> </table> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Devise diagnosis</p>					Byte count	6 (MSB)	5		4	3	2	1 (LSB)	Use	Switch position	Application type	Output number	Error codes			
Byte count	6 (MSB)	5		4	3	2	1 (LSB)													
Use	Switch position	Application type	Output number	Error codes																

4.2 Communication objects for each output

	Number	Name	Object function	Length	C	R	W	T
 	0	Output 1	ON/OFF	1 Bit	C	R	W	-
 	1	Output 1	Dimming	4 Bit	C	R	W	-
 	2	Output 1	Brightness value	1 Byte	C	R	W	-
 	3	Output 1	Load memorisation	1 Bit	C	R	W	-
 	4	Output 1	Default memorisation	1 Bit	C	R	-	T
 	5	Output 1	Timer/toggle switch changeover	1 Bit	C	R	W	-
 	6	Output 1	Time limited toggle switch	1 Bit	C	R	W	-
 	7	Output 1	Status indication ON/OFF	1 Bit	C	R	-	T
 	8	Output 1	Status ind. brightness value	1 Byte	C	R	-	T
 	9	Output 1	Timer	1 Bit	C	R	W	-
 	10	Output 1	Timer duration	3 Byte	C	R	W	-
 	11	Output 1	Scene	1 Byte	C	R	W	-
 	12	Output 1	Preset 1	1 Bit	C	R	W	-
 	13	Output 1	Preset 2	1 Bit	C	R	W	-
 	14	Output 1	Preset 1 authorization	1 Bit	C	R	W	-
 	15	Output 1	Preset 2 authorization	1 Bit	C	R	W	-
 	16	Output 1	Lock-up 1	1 Bit	C	R	W	-
 	17	Output 1	Lock-up 2	1 Bit	C	R	W	-
 	18	Output 1	Status indication lock-up	1 Bit	C	R	-	T
 	19	Output 1	Priority	2 Bit	C	R	W	-
 	20	Output 1	Status indication priority	1 Bit	C	R	-	T
 	21	Output 1	Hours counter value	2 Byte	C	R	-	T
 	22	Output 1	Reset Hours counter	1 Bit	C	R	W	-
 	23	Output 1	Hours counter setpoint reached	1 Bit	C	R	-	T
 	24	Output 1	Operating h. counter setpoint	2 Byte	C	R	W	-
 	25	Output 1	Dimming mode	1 Byte	C	R	-	T
 	26	Output 1	Overload	1 Bit	C	R	-	T
 	27	Output 1	Short circuit	1 Bit	C	R	-	T
 	28	Output 1	Over voltage	1 Bit	C	R	-	T
 	29	Output 1	Over temperature	1 Bit	C	R	-	T
 	30	Output 1	Load default	1 Bit	C	R	-	T

	Number	Name	Object function	Length	C	R	W	T
■ ↕	31	Output 2	ON/OFF	1 Bit	C	R	W	-
■ ↕	32	Output 2	Dimming	4 Bit	C	R	W	-
■ ↕	33	Output 2	Brightness value	1 Byte	C	R	W	-
■ ↕	34	Output 2	Load memorisation	1 Bit	C	R	W	-
■ ↕	35	Output 2	Default memorisation	1 Bit	C	R	-	T
■ ↕	36	Output 2	Timer/toggle switch changeover	1 Bit	C	R	W	-
■ ↕	37	Output 2	Time limited toggle switch	1 Bit	C	R	W	-
■ ↕	38	Output 2	Status indication ON/OFF	1 Bit	C	R	-	T
■ ↕	39	Output 2	Status ind. brightness value	1 Byte	C	R	-	T
■ ↕	40	Output 2	Timer	1 Bit	C	R	W	-
■ ↕	41	Output 2	Timer duration	3 Byte	C	R	W	-
■ ↕	42	Output 2	Scene	1 Byte	C	R	W	-
■ ↕	43	Output 2	Preset 1	1 Bit	C	R	W	-
■ ↕	44	Output 2	Preset 2	1 Bit	C	R	W	-
■ ↕	45	Output 2	Preset 1 authorization	1 Bit	C	R	W	-
■ ↕	46	Output 2	Preset 2 authorization	1 Bit	C	R	W	-
■ ↕	47	Output 2	Lock-up 1	1 Bit	C	R	W	-
■ ↕	48	Output 2	Lock-up 2	1 Bit	C	R	W	-
■ ↕	49	Output 2	Status indication lock-up	1 Bit	C	R	-	T
■ ↕	50	Output 2	Priority	2 Bit	C	R	W	-
■ ↕	51	Output 2	Status indication priority	1 Bit	C	R	-	T
■ ↕	52	Output 2	Hours counter value	2 Byte	C	R	-	T
■ ↕	53	Output 2	Reset Hours counter	1 Bit	C	R	W	-
■ ↕	54	Output 2	Hours counter setpoint reached	1 Bit	C	R	-	T
■ ↕	55	Output 2	Operating h. counter setpoint	2 Byte	C	R	W	-
■ ↕	56	Output 2	Dimming mode	1 Byte	C	R	-	T
■ ↕	57	Output 2	Overload	1 Bit	C	R	-	T
■ ↕	58	Output 2	Short circuit	1 Bit	C	R	-	T
■ ↕	59	Output 2	Over voltage	1 Bit	C	R	-	T
■ ↕	60	Output 2	Over temperature	1 Bit	C	R	-	T
■ ↕	61	Output 2	Load default	1 Bit	C	R	-	T

	Number	Name	Object function	Length	C	R	W	T
■ ↕	62	Output 3	ON/OFF	1 Bit	C	R	W	-
■ ↕	63	Output 3	Dimming	4 Bit	C	R	W	-
■ ↕	64	Output 3	Brightness value	1 Byte	C	R	W	-
■ ↕	65	Output 3	Load memorisation	1 Bit	C	R	W	-
■ ↕	66	Output 3	Default memorisation	1 Bit	C	R	-	T
■ ↕	67	Output 3	Timer/toggle switch changeover	1 Bit	C	R	W	-
■ ↕	68	Output 3	Time limited toggle switch	1 Bit	C	R	W	-
■ ↕	69	Output 3	Status indication ON/OFF	1 Bit	C	R	-	T
■ ↕	70	Output 3	Status ind. brightness value	1 Byte	C	R	-	T
■ ↕	71	Output 3	Timer	1 Bit	C	R	W	-
■ ↕	72	Output 3	Timer duration	3 Byte	C	R	W	-
■ ↕	73	Output 3	Scene	1 Byte	C	R	W	-
■ ↕	74	Output 3	Preset 1	1 Bit	C	R	W	-
■ ↕	75	Output 3	Preset 2	1 Bit	C	R	W	-
■ ↕	76	Output 3	Preset 1 authorization	1 Bit	C	R	W	-
■ ↕	77	Output 3	Preset 2 authorization	1 Bit	C	R	W	-
■ ↕	78	Output 3	Lock-up 1	1 Bit	C	R	W	-
■ ↕	79	Output 3	Lock-up 2	1 Bit	C	R	W	-
■ ↕	80	Output 3	Status indication lock-up	1 Bit	C	R	-	T
■ ↕	81	Output 3	Priority	2 Bit	C	R	W	-
■ ↕	82	Output 3	Status indication priority	1 Bit	C	R	-	T
■ ↕	83	Output 3	Hours counter value	2 Byte	C	R	-	T
■ ↕	84	Output 3	Reset Hours counter	1 Bit	C	R	W	-
■ ↕	85	Output 3	Hours counter setpoint reached	1 Bit	C	R	-	T
■ ↕	86	Output 3	Operating h. counter setpoint	2 Byte	C	R	W	-
■ ↕	87	Output 3	Dimming mode	1 Byte	C	R	-	T
■ ↕	88	Output 3	Overload	1 Bit	C	R	-	T
■ ↕	89	Output 3	Short circuit	1 Bit	C	R	-	T
■ ↕	90	Output 3	Over voltage	1 Bit	C	R	-	T
■ ↕	91	Output 3	Over temperature	1 Bit	C	R	-	T
■ ↕	92	Output 3	Load default	1 Bit	C	R	-	T

4.2.1 ON/OFF

No.	Description	Function of the object	Data type	Flags
0, 31, 62	Output x	ON/OFF	1 Bit – 1.001 DPT_Switch	C, R, W
<p>These objects are always activated. They enable switching of the output contact in accordance with the value that is sent via the KNX bus</p> <p>Object value: depends on the Output contact parameter.</p> <p>Normally open:</p> <ul style="list-style-type: none"> - On input of an OFF command, the output relay contact opens. - On input of an ON command, the output relay contact closes. <p>Normally closed:</p> <ul style="list-style-type: none"> - On input of an OFF command, the output relay contact closes. - On input of an ON command, the output relay contact opens. <p>For further information, see: Definition</p>				

4.2.2 Dimming

No.	Description	Function of the object	Data type	Flags																	
1, 32, 63	Output x	Dimming	4 Bit - 3.007 DPT_Control_Dimming	C, R, W																	
<p>These objects are always activated. They enable relative dimming of the output in accordance with the value that is sent on the KNX bus.</p> <p>The output is dimmed in accordance with the 4-bit format value that arrives.</p> <p>Object value:</p> <table border="1" style="margin-left: 20px;"> <tr> <td>b3</td> <td>b2</td> <td>b1</td> <td>b0</td> </tr> <tr> <td>C</td> <td colspan="3">Steps</td> </tr> </table> <table border="1" style="margin-left: 20px; width: 100%;"> <thead> <tr> <th>Data fields</th> <th>Description</th> <th>Code</th> </tr> </thead> <tbody> <tr> <td>C</td> <td>Increase or reduction in brightness</td> <td>0: darker 1: brighter</td> </tr> <tr> <td>Steps</td> <td>Brightness between 0% and 100% divided into steps</td> <td>0: Stop 1: 100 % 2: 50 % 3: 25 % 4: 12 % 5: 6 % 6: 3 % 7: 1 %</td> </tr> </tbody> </table> <p>For further information, see: Definition</p>					b3	b2	b1	b0	C	Steps			Data fields	Description	Code	C	Increase or reduction in brightness	0: darker 1: brighter	Steps	Brightness between 0% and 100% divided into steps	0: Stop 1: 100 % 2: 50 % 3: 25 % 4: 12 % 5: 6 % 6: 3 % 7: 1 %
b3	b2	b1	b0																		
C	Steps																				
Data fields	Description	Code																			
C	Increase or reduction in brightness	0: darker 1: brighter																			
Steps	Brightness between 0% and 100% divided into steps	0: Stop 1: 100 % 2: 50 % 3: 25 % 4: 12 % 5: 6 % 6: 3 % 7: 1 %																			

No.	Description	Function of the object	Data type	Flags
2, 33, 64	Output x	Brightness value	1 Byte - 5.001 DPT_Scaling	C, R, W
<p>These objects are always activated. They enable absolute dimming of the output in accordance with the value that is sent on the KNX bus.</p> <p>The output is dimmed according to the value that arrives in 1-byte format and corresponds to the brightness value to be attained.</p> <p>Object value: 0 to 255: 0 = 0%, 255 = 100%</p> <p>Resolution: approx. 0.4%</p> <p>For further information, see: Definition</p>				

4.2.3 Load memorisation

No.	Description	Function of the object	Data type	Flags
3, 34, 65	Output x	Load memorisation	1 Bit - 1.003 DPT_Enable	C, R, W
<p>These objects are always activated. They are used to start the memorisation process in accordance with the value that is sent on the KNX bus.</p> <p>This process lasts around 30 seconds and results in varying brightness.</p> <p>After the memorisation, the load is activated on the highest step and blinks once, to report that the learning is completed.</p> <p>If the object receives the value "1", the Load memorisation is started.</p> <p>For further information, see: Definition</p>				

No.	Description	Function of the object	Data type	Flags
4, 35, 66	Output x	Default memorisation	1 Bit - 1.005 DPT_Alarm	C, R, T
<p>These objects are always activated. They are used for notification of a default memorisation.</p> <p>If the load is not recognised at the end of the learning process, the device automatically selects the Factory setting for the dimming mode.</p> <p>If learning of the load has failed, a telegram with logic value "1" is sent to the object.</p> <p>For further information, see: Definition</p>				

4.2.4 ON/OFF object timings

No.	Description	Function of the object	Data type	Flags
5, 36, 67	Output x	Timer/toggle switch changeover	1 Bit – 1.001 DPT_Switch	C, R, W
<p>This object is activated if the Timer/toggle switch changeover for ON/OFF object parameter is active.</p> <p>This object is used to switch between a toggle switch and timer switch operation on the same pushbutton</p> <ul style="list-style-type: none"> - If the Timer/toggle switch changeover object receives the value "1", the toggle-switch mode function is activated. The ON/OFF switching of the output is performed as usual via the ON/OFF object. - If the Timer/toggle switch changeover object receives the value "0", the timer mode function is activated. <ul style="list-style-type: none"> o If the ON/OFF object receives the value "1", the output is switched ON. After expiry of a configurable time, the output is automatically switched OFF. o If the ON/OFF object receives the value "0", the output is switched OFF. <p><i>Example: Switching function daytime and time-limited OFF function at night.</i> <i>During the day, the button is used as an ON/OFF switch. In the evenings, the button is used as a time-limited OFF switch, so that the light will turn off automatically.</i></p> <p>For further information, see: ON/OFF object timings</p>				

No.	Description	Function of the object	Data type	Flags
6, 37, 68	Output x	Time limited toggle switch	1 Bit – 1.001 DPT_Switch	C, R, W
<p>This object is activated when the Additional time limited toggle switch function parameter is active.</p> <p>This object combines a timer function with a tripping delay function.</p> <ul style="list-style-type: none"> - If the object receives the value "1", the output switches to ON for a configurable time period. After that period expires, the output switches to OFF. - If the object receives the value "0", the output switches to OFF. <p><i>Note: The time-limited OFF function is generally used for lighting in cellars, attics and sheds.</i></p> <p>For further information, see: ON/OFF object timings</p>				

4.2.5 Status indication

No.	Description	Function of the object	Data type	Flags
7, 38, 69	Output x	Status indication ON/OFF	1 Bit – 1.001 DPT_Switch	C, R, T
<p>This object is activated when the Status indication ON/OFF parameter is active.</p> <p>This object allows the status of the output contact to be sent from the device over the KNX bus.</p> <p>Object value: depends on the Polarity parameter.</p> <p>0 = ON, 1 = OFF</p> <ul style="list-style-type: none"> - If the output relay is open, a telegram with logic value "1" is sent on the KNX bus. - If the output relay is closed, a telegram with logic value "0" is sent on the KNX bus. <p>0 = Off; 1 = On</p> <ul style="list-style-type: none"> - If the output relay is open, a telegram with logic value "0" is sent on the KNX bus. - If the output relay is closed, a telegram with logic value "1" is sent on the KNX bus. <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Status indication</p>				

No.	Description	Function of the object	Data type	Flags
8, 39, 70	Output x	Status ind. brightness value	1 Byte – 5.001 DPT_Scaling	C, R, T
<p>This object is activated when the Status ind. brightness value parameter is active.</p> <p>This object allows the status of the brightness value of the Output to be sent over the KNX bus.</p> <p>Object value: 0 to 255: 0 = 0%, 255 = 100%</p> <p>For further information, see: Status indication</p>				

4.2.6 Timer

No.	Description	Function of the object	Data type	Flags
9, 40, 71	Output x	Timer	1 Bit – 1.001 DPT_Switch	C, R, W
<p>This object is activated when the Timer parameter is active.</p> <p>This object is used to activate the timer function of the device via the KNX bus.</p> <p>Object value:</p> <ul style="list-style-type: none"> - If a rising edge (0 to 1) arrives at this object, the output switches for a configurable period. - If a falling edge (1 to 0) arrives at this object, the output remains in its current state. <p><i>Note: Depending on the configuration, the timer switching can be interrupted on the timer by a long press of the control button.</i></p> <p><i>Note: Depending on the configuration, the timer duration may be reset by input of a start command during timer operation.</i></p> <p>For further information, see: Timer</p>				

No.	Description	Function of the object	Data type	Flags
10, 41, 72	Output x	Timer duration	3 Bit – 10.001 DPT_TimeOfDay	C, R, W

This object is activated if the **Timer duration modifiable through object** object parameter is active.
 This object can be used to configure the timer duration. The timer duration can thus be configured in accordance with a time of day.

Byte 3 (MSB)					Byte 2						Byte 1 (LSB)												
Hours					Minutes						Seconds												
0	0	0	H	H	H	H	H	0	0	M	M	M	M	M	M	0	0	S	S	S	S	S	S

Fields	Code	Value	Units
Hours	binary	0 to 23 (4 Bit)	Hours
Minutes	binary	0 to 59 (6 Bit)	Minutes
Seconds	binary	0 to 59 (6 Bit)	Seconds

For further information, see: [Timer](#)

4.2.7 Scene

No.	Description	Function of the object	Data type	Flags
11, 42, 73	Output x	Scene	1 Byte – 17.001 DPT_SceneNumber	C, R, W

This object is activated when the **Scene** parameter is active.

This object is used to recall or save a scene.

Details on the format of the object are given below.

7	6	5	4	3	2	1	0
Learning	Not active	Scene number					

Bit 7: 0: The scene is called/1: The scene is saved.

Bit 6: Not active

Bit 5 to Bit 0: Scene numbers from 0 (Scene 1) to 63 (Scene 64).

For further information, see: [Scene](#)

4.2.8 Preset

No.	Description	Function of the object	Data type	Flags
12, 43, 74	Output x	Preset 1	1 Bit – 1.022 DPT_Scene_AB	C, R, W
<p>This object is activated if the Preset has value Active with preset 1-level object or Active with preset 2-level objects.</p> <p>With this object, several outputs can be set to a configurable predefined status.</p> <p>Object value:</p> <ul style="list-style-type: none"> - If the object receives value "0", the values of the parameters for Preset 1 = "0" are used. - If the object receives value "1", the values of the parameters for Preset 1 = "1" are used. <p>For further information, see: Preset</p>				

No.	Description	Function of the object	Data type	Flags
13, 44, 75	Output x	Preset 2	1 Bit – 1.022 DPT_Scene_AB	C, R, W
<p>This object is activated if the Preset parameter has value Active with preset 2-level objects.</p> <p>See object No. 12</p>				

No.	Description	Function of the object	Data type	Flags
14, 45, 76	Output x	Preset 1 authorization	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Preset authorization objects parameter is active</p> <p>This object makes it possible to activate or deactivate the Preset 1 function of the device via the KNX bus.</p> <p>Object value: this is dependent on the Polarity of Preset 1 authorization object parameter.</p> <p>0 = Locked-up, 1 = Authorized:</p> <ul style="list-style-type: none"> - If the object receives the value "0", Preset 1 is deactivated. - If the object receives the value "1", Preset 1 is activated. <p>0 = Authorized, 1 = Locked-up:</p> <ul style="list-style-type: none"> - If the object receives the value "0", Preset 1 is activated. - If the object receives the value "1", Preset 1 is deactivated. <p>For further information, see: Preset</p>				

No.	Description	Function of the object	Data type	Flags
15, 46, 77	Output x	Preset 2 authorization	1 Bit – 1.003 DPT_Enable	C, R, W
<p>See object No. 14</p>				

4.2.9 Lock-up

No.	Description	Function of the object	Data type	Flags
16, 47, 78	Output x	Lock-up 1	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Lock-up has value Active with 1 lock-up object or Active with 2 lock-up objects.</p> <p>This object is used to control the activation of the lock-up via the KNX bus.</p> <p>Object value: this is dependent on the Polarity of lock-up object 1 parameter.</p> <p>0 = Lock-up activated, 1 = Lock-up deactivated:</p> <ul style="list-style-type: none"> - If the object receives value "0", the lock-up is activated. - If the object receives value "1", the lock-up is deactivated. <p>0 = Lock-up deactivated, 1 = Lock-up activated:</p> <ul style="list-style-type: none"> - If the object receives value "0", the lock-up is deactivated. - If the object receives value "1", the lock-up is activated. <p>For further information, see: Lock-up</p>				

No.	Description	Function of the object	Data type	Flags
17, 48, 79	Output x	Lock-up 2	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Lock-up parameter has value Active with 2 lock-up objects.</p> <p>See object No. 16</p>				

No.	Description	Function of the object	Data type	Flags
18, 49, 80	Output x	Status indication lock-up	1 Bit – 1.011 DPT_Switch	C, R, T
<p>This object is activated when the Activation of lock-up status object parameter is active</p> <p>This object allows the status of the lock-up to be sent from the device over the KNX bus.</p> <p>Object value: depends on the Polarity parameter.</p> <p>0 = Lock-up deactivated, 1 = Lock-up activated:</p> <ul style="list-style-type: none"> - If the lock-up is deactivated, a telegram with logic value "0" is sent on the KNX bus. - If the lock-up is activated, a telegram with logic value "1" is sent on the KNX bus. <p>0 = Lock-up activated, 1 = Lock-up deactivated:</p> <ul style="list-style-type: none"> - If the lock-up is activated, a telegram with logic value "0" is sent on the KNX bus. - If the lock-up is deactivated, a telegram with logic value "1" is sent on the KNX bus. <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Lock-up</p>				

4.2.10 Priority

No.	Description	Function of the object	Data type	Flags																	
19, 50, 81	Output x	Priority	2 Bit – 2.002 DPT_Bool_Control	C, R, W																	
<p>This object is activated if the Priority parameter is active. The status of the output contact is determined directly by this object. Details on the format of the object are given below.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2">Telegram received by the priority operation object</th> <th rowspan="2">Status of the outputs</th> </tr> <tr> <th>Bit 1</th> <th>Bit 2</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>End of the priority</td> </tr> <tr> <td>0</td> <td>1</td> <td>End of the priority</td> </tr> <tr> <td>1</td> <td>0</td> <td>Priority OFF</td> </tr> <tr> <td>1</td> <td>1</td> <td>Priority ON</td> </tr> </tbody> </table> <p>The first bit of this object (Bit 0) determines the status of the output contact, which should be priority controlled. The second bit activates or deactivates the Priority. For further information, see: Priority</p>					Telegram received by the priority operation object		Status of the outputs	Bit 1	Bit 2	0	0	End of the priority	0	1	End of the priority	1	0	Priority OFF	1	1	Priority ON
Telegram received by the priority operation object		Status of the outputs																			
Bit 1	Bit 2																				
0	0	End of the priority																			
0	1	End of the priority																			
1	0	Priority OFF																			
1	1	Priority ON																			

No.	Description	Function of the object	Data type	Flags
20, 51, 82	Output x	Status indication priority	1 Bit – 1.011 DPT_Switch	C, R, T
<p>This object is activated when the Activation of lock-up status object <i>parameter is active</i> This object allows the status of the Priority to be sent from the device on the KNX bus. Object value: depends on the Polarity parameter. 0 = Not forced, 1 = Forced:</p> <ul style="list-style-type: none"> - If Priority is deactivated, a telegram is sent with logic value "0". - If Priority is activated, a telegram is sent with logic value "1". <p>0 = Forced, 1 = Not forced:</p> <ul style="list-style-type: none"> - If Priority is activated, a telegram is sent with logic value "0". - If Priority is deactivated, a telegram is sent with logic value "1". <p>This object is sent periodically and/or on status change. For further information, see: Priority</p>				

4.2.11 Hours counter

No.	Description	Function of the object	Data type	Flags
21, 52, 83	Output x	Hours counter value	2 Bit – 7.001 DPT_16_Bit_Counter	C, R, T
<p>This object is activated if the Hours counter parameter is active.</p> <p>This object allows the value of the operating hours to be sent from the device on the KNX bus.</p> <p>The count value is saved during a power cut on the KNX bus. It is submitted after return of power to the bus or after an ETS download.</p> <p>Object value: 0 to 65535 hours</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Hours counter</p>				

No.	Description	Function of the object	Data type	Flags
22, 53, 84	Output x	Reset Hours counter	1 Bit – 1.015 DPT_Reset	C, R, W
<p>This object is activated if the Hours counter parameter is active.</p> <p>This object enables the hours counter value to be reset.</p> <p>Object value:</p> <ul style="list-style-type: none"> - If the object receives the value "0", the counter is not reset. - If the object receives the value "1", the counter is reset. <p>For further information, see: Hours counter</p>				

No.	Description	Function of the object	Data type	Flags
23, 54, 85	Output x	Hours counter setpoint reached	1 Bit – 1.002 DPT_Bool	C, R, T
<p>This object is activated if the Hours counter parameter is active.</p> <p>This object reports that the hours counter has reached its setpoint.</p> <ul style="list-style-type: none"> - incrementing counter: Counter = counter setpoint - countdown counter: Counter = 0 <p>Object value: If the setpoint is reached, a telegram with logic value "1" is sent on the KNX bus.</p> <p>The count value is saved during a power cut on the KNX bus. It is submitted after return of power to the bus or after an ETS download.</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Hours counter</p>				

No.	Description	Function of the object	Data type	Flags
24, 55, 86	Output x	Operating h. counter setpoint	2 Bit – 7.001 DPT_16_Bit_Counter	C, R, W
<p>This object is activated if the Counter setpoint value modifiable through object object parameter is active.</p> <p>This object is used to initialize the counter setpoint of the hours counter via the KNX bus.</p> <p>Object value: 0 to 65535 hours</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Hours counter</p>				

4.2.12 Notifications

No.	Description	Function of the object	Data type	Flags
26, 57, 88	Output x	Overload	1 Bit – 1.005 DPT_Alarm	C, R, T
<p>This object is activated when the Overload parameter is active.</p> <p>This object is used for notification of an overload on the output concerned, via the KNX bus. An overload arises, for example, when several lamps are connected to the output, exceeding its rated power.</p> <p>Object value: If an overload is detected on the output concerned, a telegram with logic value "1" is sent to the object.</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Notification</p>				

No.	Description	Function of the object	Data type	Flags
27, 58, 89	Output x	Short circuit	1 Bit – 1.005 DPT_Alarm	C, R, T
<p>This object is activated when the Short circuit parameter is active.</p> <p>This object is used for notification of a short circuit on the output concerned, via the KNX bus.</p> <p>Object value: If a short circuit is detected on the output concerned, a telegram with logic value "1" is sent to the object.</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Notification</p>				

No.	Description	Function of the object	Data type	Flags
28, 59, 90	Output x	Over voltage	1 Bit – 1.005 DPT_Alarm	C, R, T
<p>This object is activated when the Over voltage parameter is active.</p> <p>This object is used for notification of an over voltage on the output concerned, via the KNX bus.</p> <p>Object value: If an over voltage is detected on the output concerned, a telegram with logic value "1" is sent to the object.</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Notification</p>				


No.	Description	Function of the object	Data type	Flags
29, 60, 91	Output x	Over temperature	1 Bit – 1.005 DPT_Alarm	C, R, T
<p>This object is activated when the Over temperature parameter is active.</p> <p>This object is used for notification of an over temperature on the output concerned, via the KNX bus. An over temperature arises when a load is connected to the output that results in a temperature increase in the output current circuit.</p> <p>Object value: If an over temperature is detected on the output concerned, a telegram with logic value "1" is sent to the object.</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Notification</p>				

No.	Description	Function of the object	Data type	Flags
30, 61, 92	Output x	Load default	1 Bit – 1.005 DPT_Alarm	C, R, T
<p>This object is activated if the Load default parameter is active.</p> <p>This object is used for notification of a load default on the output concerned, via the KNX bus. Load default means that the output has no load or a defective load.</p> <p>Object value: If a load default is detected on the output concerned, a telegram with logic value "1" is sent to the object.</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Notification</p>				

5 Appendix


5.1 Specifications











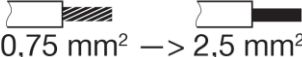







5.1.1 7531 10 11 / 12

Supply voltage	30 V DC SELV 230 V ~ 50/60 Hz
Busline max consumption	2,3 mA
Zero-load mains consumption	350 mW
Power dissipation	4 W (TYA661A) 7,5 W (TYA661B)
Dimensions	4 x 17,5 mm
Protection class	IP 30
Operating temperature	-5 °C → + 45 °C
Storage temperature	- 25 °C → + 70 °C
Electrical connection	 0,75 mm ² → 2,5 mm ²
Installation mode	Din-rail
Operating altitude	< 2000 m
Pollution level	2
Surge voltage	4kV
Protection rating	IP 20 (housing) / IP30 (housing under faceplate)
IK	04
Overvoltage category	III
Standard	EN 60669-2-1, EN 50491-3, EN 50428

Load type	7531 10 11	7531 10 12
Incandescent, halogen 230V	300 W	600 W
Halogen ELV (12 or 24V) via ferromagnetic transformer suitable for dimming. The transformer shouldn't be used with less than 75 % of its nominal load.	300 VA	600 VA
Halogen ELV (12 or 24V) via electronic transformer.	300 W	600 W
Dimmable fluocompact lamps	60 W	120 W
Dimmable LED lamps	60 W (8 lampes/lamps)	120 W (10 lampes/lamps)

5.1.2 7531 30 07

Supply voltage	30 V DC
	230 V~ 50/60 Hz
Busline max consumption	2,3 mA
Consumption without load	600 mW
Power dissipation	8,9 W
Dimensions	6 x 17,5 mm
Protection class	IP20/ IP30 faceplate in place
Operating temperature	-5 °C → + 45 °C
Storage temperature	-20 °C → + 70 °C
Norms	EN 60669-2-1, EN 50491-3, EN 50428
Electrical connection	 0,75 mm ² → 2,5 mm ²

Type de charges / Load type				
Incandescent, halogen 230V	 C1	1x 900 W	1x 600 W	1x 300 W
	 C2	-	1x 300 W	1x 300 W
	 C3	-	-	1x 300 W
Halogen ELV (12 or 24V) via ferromagnetic transformer suitable for dimming. The transformer shouldn't be used with less than 75 % of its nominal load.	 C1	1x 900 W	1x 600 W	1x 300 W
	 C2	-	1x 300 W	1x 300 W
	 C3	-	-	1x 300 W
Halogen ELV (12 or 24V) via electronic transformer.	 C1	1x 900 W	1x 600 W	1x 300 W
	 C2	-	1x 300 W	1x 300 W
	 C3	-	-	1x 300 W
Dimmable fluocompact lamps	 C1	1x 210 W	1x 120 W	1x 60 W
	 C2	-	1x 60 W	1x 60 W
	 C3	-	-	1x 60 W
Dimmable LED lamps	 C1	210 W	1x 120 W	1x 60 W
	 C2	-	1x 60 W	1x 60 W
	 C3	(15 lampes/ lamps)	(8 et/and 15 lampes/lamps)	8 lampes/lamps/ sortie/output

5.2 Table of logical operations

Input 4	Input 3	Input 2	Input 1	OR	AND
-	-	0	0	0	0
-	-	0	1	1	0
-	-	1	0	1	0
-	-	1	1	1	1
-	0	0	0	0	0
-	0	0	1	1	0
-	0	1	0	1	0
-	0	1	1	1	0
-	1	0	0	1	0
-	1	0	1	1	0
-	1	1	0	1	0
-	1	1	1	1	1
0	0	0	0	0	0
0	0	0	1	1	0
0	0	1	0	1	0
0	0	1	1	1	0
0	1	0	0	1	0
0	1	0	1	1	0
0	1	1	0	1	0
0	1	1	1	1	0
1	0	0	0	1	0
1	0	0	1	1	0
1	0	1	0	1	0
1	0	1	1	1	0
1	1	0	0	1	0
1	1	0	1	1	0
1	1	1	0	1	0
1	1	1	1	1	1

5.3 Characteristics

Product	7531 10 11 / 12	7531 30 07
Max. number of group addresses	254	254
Max. number of allocations	255	255
Objects	47	107

Berker GmbH & Co. KG

Klagebach 38

58579 Schalksmühle/Germany

Telefon + 49 (0) 2355/905-0

Telefax + 49 (0) 2355/905-111

www.berker.de