


6LE09302A

DE

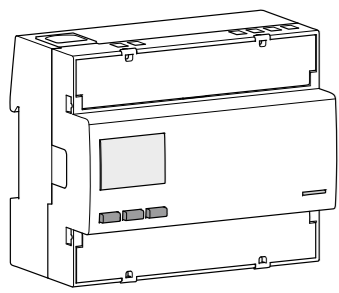

ECR311D Dreiphasen-Energiezähler, Direktanschluss 125 A mit MID-Konformitätserklärung und Modbus RTU Kommunikation...


Sicherheitsanweisungen

- Einbau und Montage in Innenbereichen dürfen nur durch eine Elektrofachkraft gemäß den geltenden lokalen Installationsstandards durchgeführt werden.

Funktion

Dieses 4-Quadranten-Modbus-RTU-Messgerät misst die in einer elektrischen Anlage verwendete Wirk- und Blindenergie. Die Blindenergie wird gemessen, aber nicht angezeigt...


Leistungsfaktor

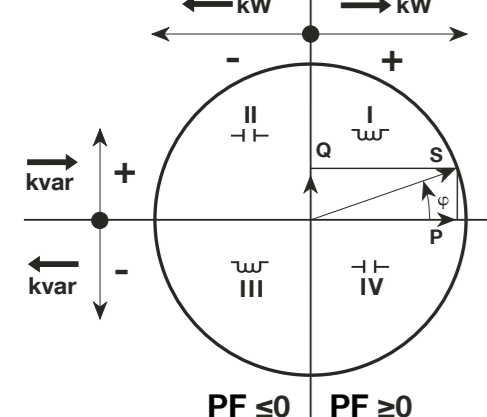

Geräteaufbau




Befehle: OK-Taste: Wird verwendet, um eine Änderung eines Parameters (oder einer Ziffer eines numerischen Parameters) zu bestätigen oder um eine Frage zu beantworten...

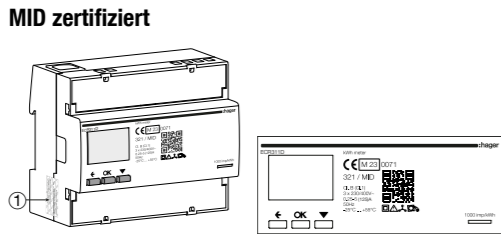

1 MID Sicherheitsiegel 2 Tarife 3 Blindleistung induktiv/kapazitiv Phasenanzeige 4 Hauptenergieregister, nicht rücksetzbar Teil-Energieregister, rücksetzbar 5 Einheiten 6 Energieimport (Verbrauch) Energieexport (Produktion) Status der Kommunikationsaktivität...

Abmessungen

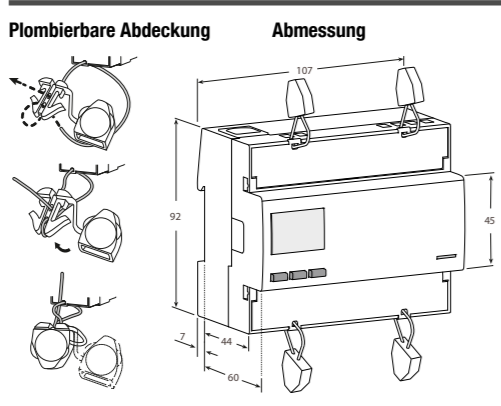

Anschluss


Modbus RTU Kommunikation: Empfehlungen: Verwenden Sie das HTG485H-Referenzkabel, das speziell von Hager als Zubehör entwickelt wurde.

Wichtig

Es ist wichtig, einen Widerstand von 120 Ohm an beiden Enden der Busleitung anzuschließen.

Bestimmungsgemäße Verwendung

Der Energiezähler eignet sich sowohl für die Verwendung bei mit Impedanz geerdeten Netzen als auch bei nicht geerdeten Netzen.

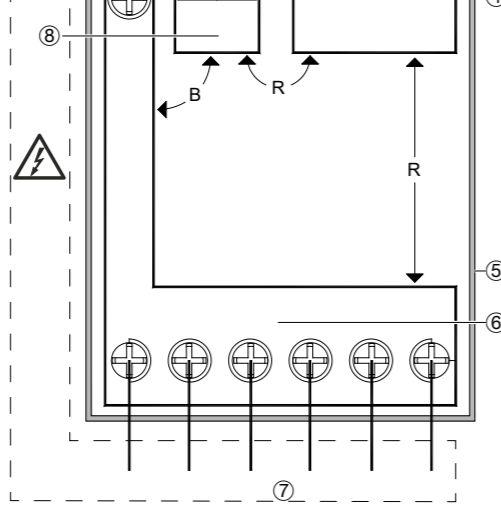


Es sind keine berührbaren Teile vorhanden: B = Basisisolierung D = doppelte Isolierung R = verstärkte Isolierung F = Funktionsisolierung

- 1 HLV (Gefährliche aktive Spannung)-KLEMME, 1 Klemme für Neutralleiter 2 HLV (Gefährliche aktive Spannung)-KLEMME, 2 Klemmen für Tarifsteuereingänge...

Schaltplan

Wichtig: Die Leitungen müssen die Norm IEC 60332-1-2:2004 erfüllen oder über eine Flammbaureits-Bemessung von UL 2556 VW-1 verfügen.

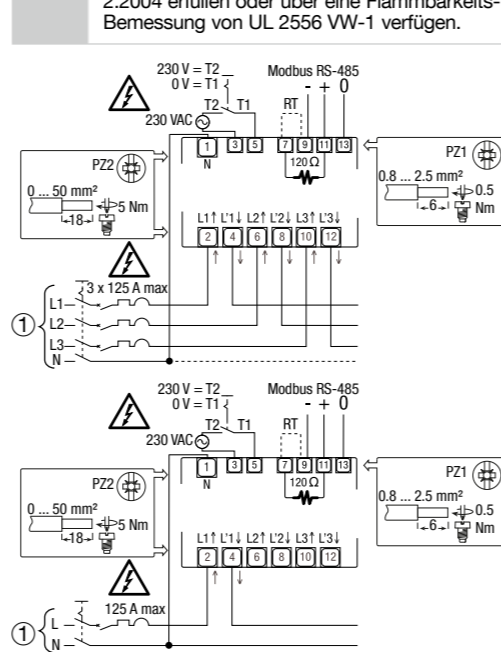

Installation

Das einspeisende Schalt- oder Schutzgerät (Nummer 1 im Anschlussplan) muss leicht zu identifizieren bzw. zu bedienen und zudem nahe am Zähler installiert sein.

Inbetriebnahme

- Empfehlungen: Folgende Punkte müssen vor der Inbetriebnahme beachtet werden: 1. Sicherstellen, dass keine gefährliche Spannung an den SELV-Klemmen anliegen.

Wartung

- Sicherstellen, dass keine Spannung am Energiezähler anliegt. Es darf nur eine Trockenreinigung mit einem Naturfasertuch (bspw. aus Baumwolle oder Leinwand) oder einem Tuch aus synthetischem Stoff, das keine Restfasern auf der Oberfläche oder im Inneren des Zählers hinterlässt, durchgeführt werden.

Hilfe bei Problemen

Fehlerbedingung: Bei blinkender Teil-Energie, Teil-Energieregister zurücksetzen (Register für maximale Teilenergie). Wenn auf dem Display die Meldung ERROR N02 oder ERROR N03 angezeigt wird, funktioniert der Zähler nicht korrekt und muss ausgetauscht werden.


Main navigation menu for the meter's display, listing various functions like 'Nach Einschalten Softwareversion und Prüfsumme', 'Zählertyp', 'Importierte/Exportierte Wirkenergie', 'Messwerte lesen', 'Konfiguration', 'Messwerte lesen', 'Modbus-Adresse', 'Baudrate', 'Parität', 'Gerättyp', 'Herstellungsjahr', 'Softwareversion und Prüfsumme', 'Test der Anzeige', 'Wirkleistung', 'Blindleistung', 'Scheinleistung', 'Spannung', 'Strom', 'Strom Neutralleiter', 'Leistungsfaktor L1/L2/L3', and 'Frequenz'.

Diagnosemeldung: Die Reihenfolge der Verkabelung (L1-L2-L3) ist falsch. L1-, L2- und L3-Symbole blinken. Tauschen Sie die Adern von 2 Phasen (Phase 1 <-> Phase 2 oder Phase 2 <-> Phase 3). Andernfalls wird die Nachricht durch Drücken der "OK"-Taste für mindestens 5 Sekunden bis zum nächsten Neustart gelöscht.

Technische Daten


Technical specifications table including: Allgemeine Charakteristiken (Dimensions, Weight), Bedienungsfunktionen (Connections, Storage), Referenzstrom (In, Min, Max), Anlaufstrom, Überstrom, Referenzfrequenz, Genauigkeit, Versorgungs- und Stromverbrauch, Messfunktionen, Anzeigefunktionen, Sicherheitsmerkmale, Integrierte Kommunikationsschnittstelle, Umgebungsbedingungen, and Störausendung.

6LE09302A

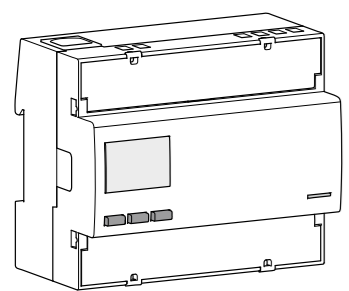

GB

LCD display:

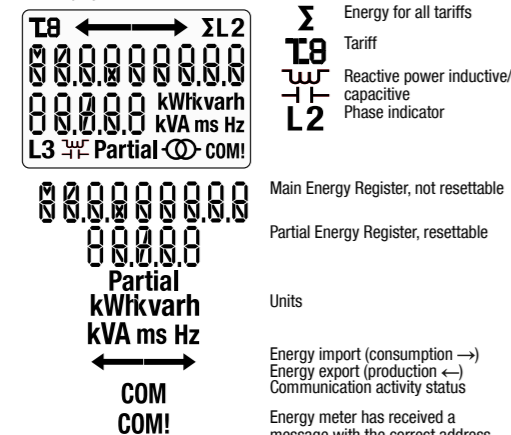

Energy for all tariffs
Tariff
Reactive power inductive/capacitive
Phase indicator
Main Energy Register, not resettable
Partial Energy Register, resettable
Units
Energy import (consumption →)
Energy export (production ←)
Communication activity status
Energy meter has received a message with the correct address and with the correct checksum, but the meter has answered with an Exception Message in case of Modbus:
- illegal function
- illegal data address
- illegal data value


Commands

- OK** button: is used to confirm a modification of a parameter (or a digit of a numerical parameter) or to answer to a question
- SCROLL** button: is used to scroll Menu pages or to modify the whole value or a digit of a parameter
- ESCAPE** button: is used to escape to main menu from anywhere or to skip back to the previous digit of the value under modification

Optical metrological LED

Note: If no button is pushed for at least 20 seconds the display goes back to the Main Page and the backlight is switched off again.

MID certified

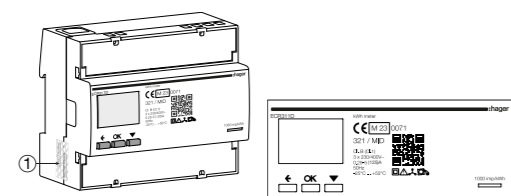


MID safety sealing

Symbols

- One phase
- Three phases
- Protected by double insulation (Class II)
- Backstop: Reversal preventing device

Dimensions

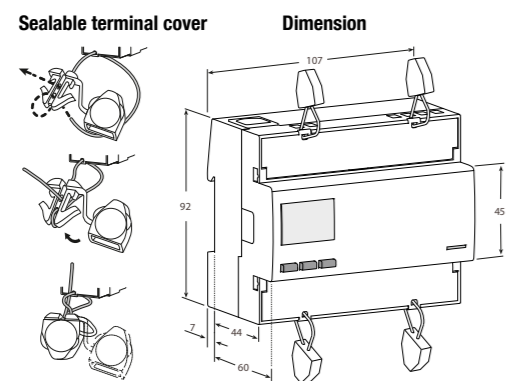


Modbus RTU Communication

Recommendations
Use HTG485H reference cable specially developed as accessory by Hager.

Modbus protocol
The Modbus protocol operates on a master/slave structure:
- Reading (Function 3),
- Writing (Function 6 or 16), broadcast option at address 0.
The communication method is RTU (Remote Terminal Unit) with hexadecimal.

Important
It is essential to connect a resistance of 120 Ohms at the 2 ends of the connection.


Intended use
The Energy Meter is suitable for use on both impedance grounded networks and not grounded networks.

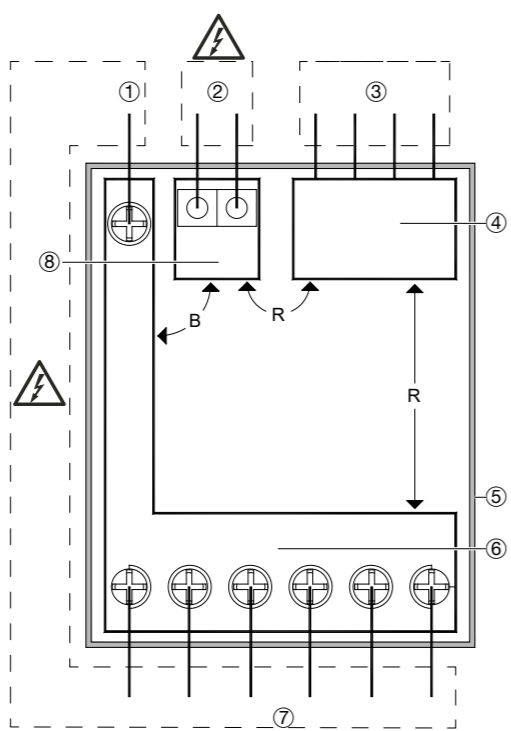

There are no accessible parts
Legend:
B = Basic Insulation
D = Double Insulation
R = Reinforced Insulation
F = Functional Insulation

- HLV TERMINAL, 1 terminal for neutral
- HLV TERMINAL, 2 terminal for tariff Input
- SELV TERMINALS, 4 terminals or 2 RJ45 connectors
- SELV CIRCUIT, (communication) working voltage <25 Vac, < 60 Vdc
- PLASTIC CASE (NOT EARTHED)
- HLV CIRCUIT, (mains) Working Voltage = 300 Vac
- HLV TERMINAL, 6 terminal for mains
- HLV CIRCUIT, (tariff input) working voltage = 300 Vac

Important
Cables must therefore comply with IEC 60332-1-2:2004 or have a flammability rate UL 2556 VW-1.

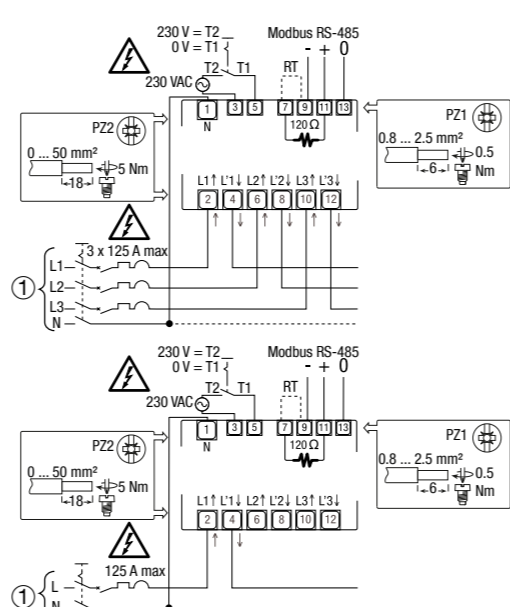

In-installation

The four-pole disconnector (reference 1) in the wiring diagrams must be easy to identify and to operate and must be close to the Meter. They both must be in "OFF" position (open circuits) from the beginning to the end of the installation or of the uninstallation. The Energy Meter, the disconnectors and the overload current protection devices must be easily identifiable. They must be installed in an adequate cabinet (IP51 and V1) and it must be easy to intervene on them if necessary. Inside the cabinet, do not install any other device with a flammability class worse than V1.

Commissioning

Recommendations
Check the following before putting it into service:
• Make sure that no dangerous voltages are connected to the SELV terminals.
• Make sure that a phase has not been connected to the Neutral terminal (this would cause the internal protections to intervene and will damage the Meter).
• Check that the main page appears on the display (see menu description) and not the Phase Sequence Error page.


Maintenance

- Make sure that no voltage is applied to the instrument.
- Only dry cleaning is allowed with a natural fiber cloth (for example cotton or linen) or synthetic fabric that does not leave residual fibers that can remain on the surface of the Energy Meter or that can penetrate into the Energy Meter.

For this Energy meter, no maintenance, repair or replacement of parts is foreseen. Such interventions are to be considered prohibited. In case of malfunction, it must be replaced.

Help in case of problems

Error condition
When partial energy blinks, reset partial energy (maximum partial energy register). When the display shows the message ERROR N02 or ERROR N03, the meter has got a malfunction and must be replaced.

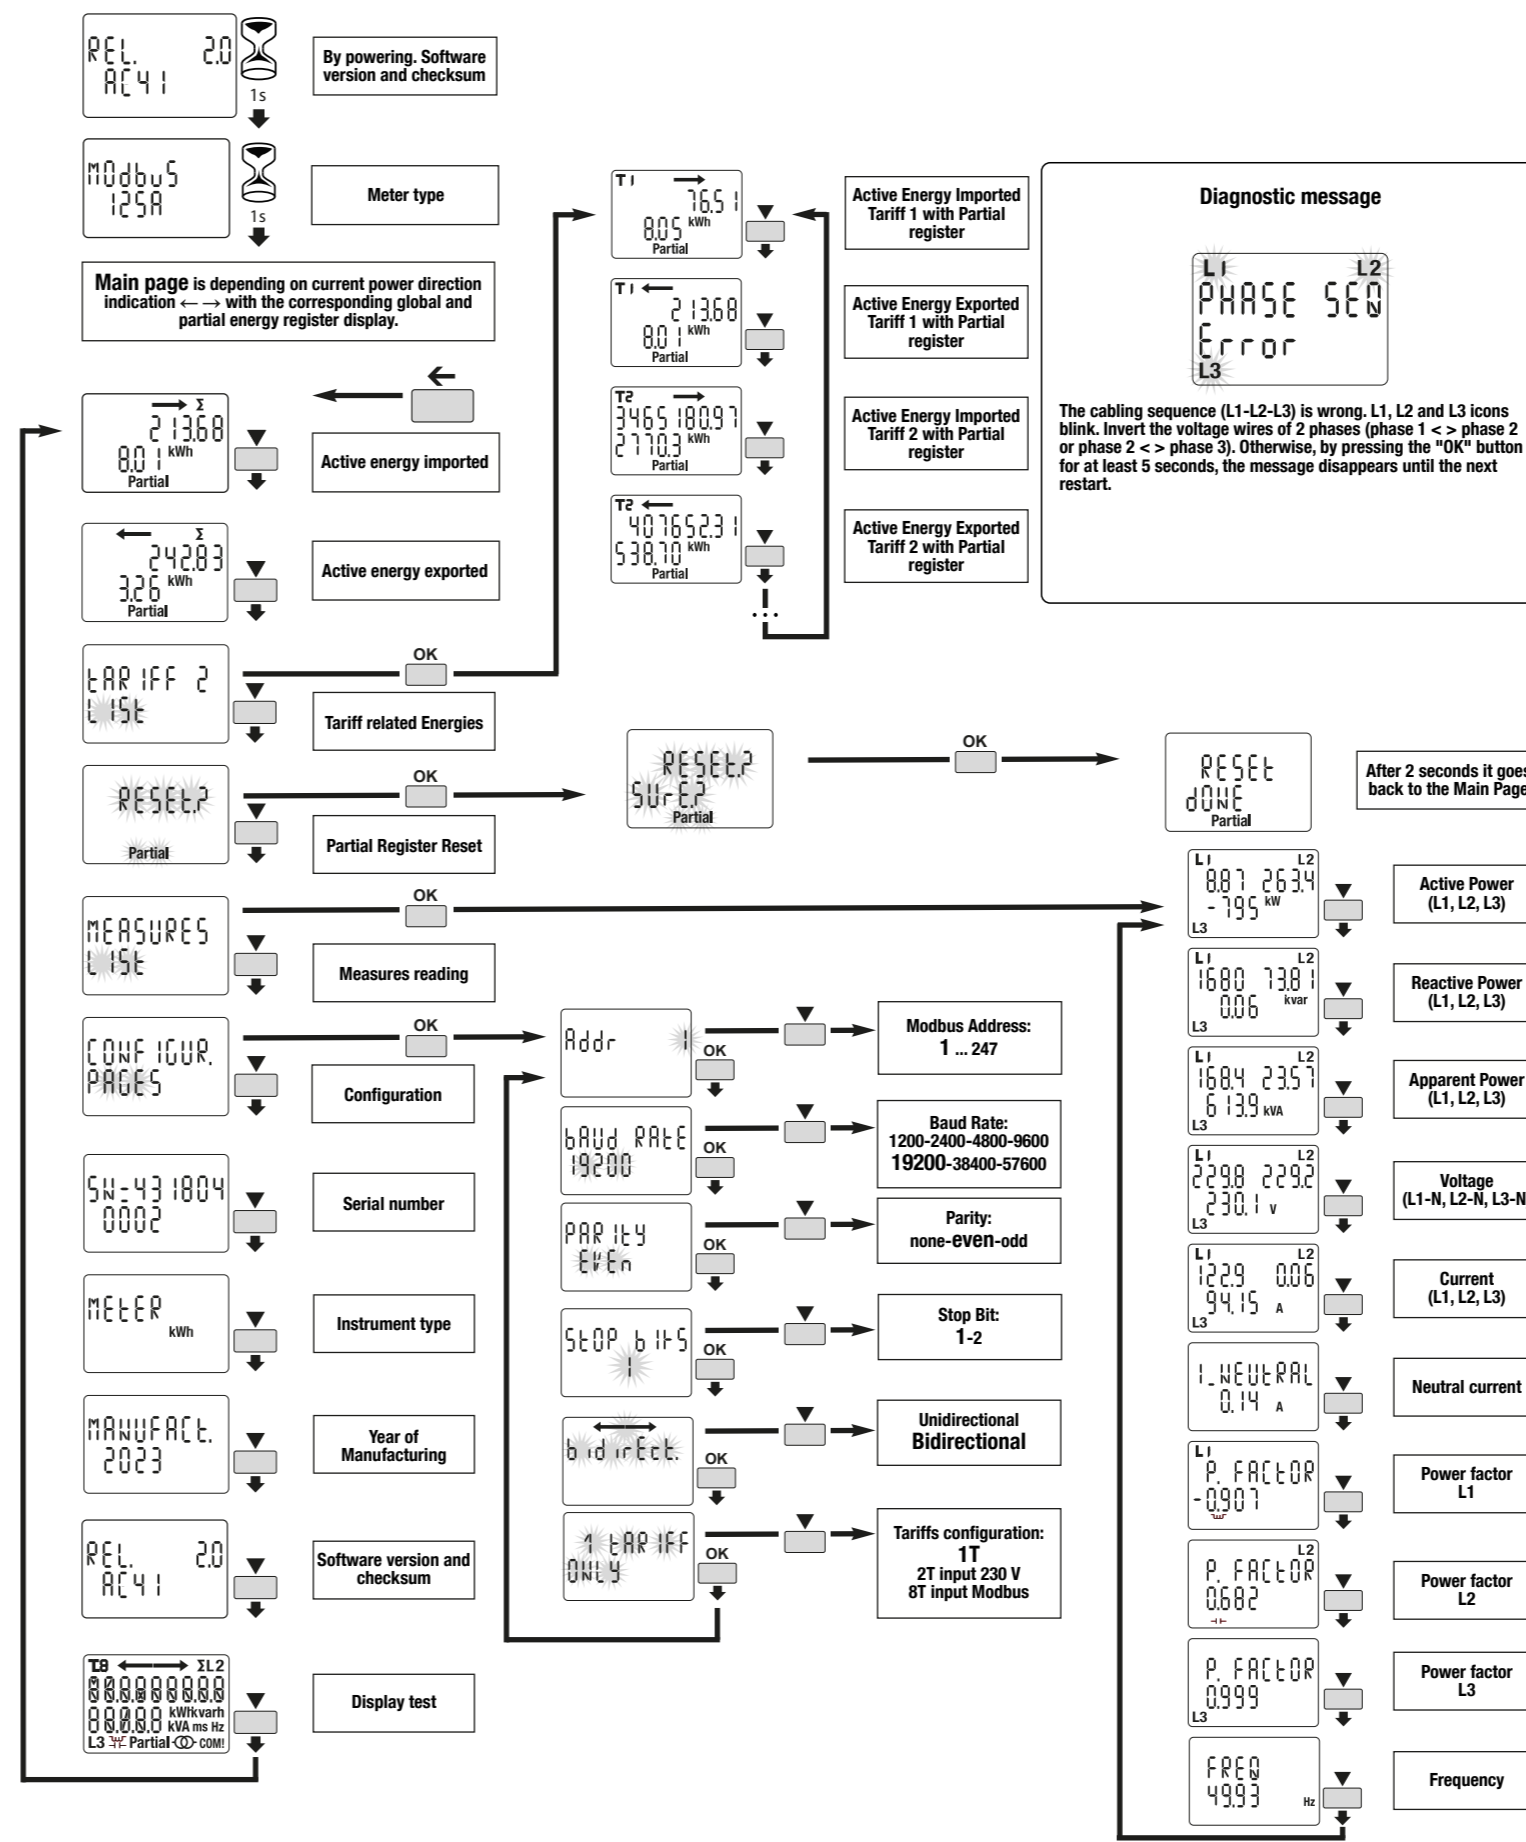

Data in compliance with EN 62052-11:2021+A11:2022, EN 62052-31:2016-06, IEC 62052-31, EN 62059-32-1:2012

General characteristics

Housing	DIN 43880	DIN	6 0
Mounting	EN 60715	DIN rail	35 mm
Depth		mm	60
Weight		g	700

Operating features

Connection	to single-phase network - number of wires	-	2 (L1)
	to three-phase network - number of wires	-	4
Storage of energy values and configuration	Internal flash non volatile memory	-	✓
Tariff	for active and reactive energy(*)	-	T1 ... T2 230V - T1 ... T8 Modbus

Approval (EN 62052-31:2016-06 EN 50470-3:2022)

Reference Voltage (Un)	phase / neutral	VAC	230
	phase / phase	VAC	400
Reference Current (In)		A	5
Minimum Current (Imn)		A	0.25
Maximum Current (Imax)		A	125
Starting Current (Ist)		A	0.020
Transitional Current (Itr)		A	0.05
Reference Frequency (fn)		Hz	50
Number of phases / number of wires		-	3 / 4
Certified Measures		kWh	→ kWh ← kWh

Accuracy

- Active Energies (accord. to EN 50470-3:2022)	classe	B / 1
- Active Powers (accord. to IEC 62053-21:2020 and IEC 61557-12:2018)		
- Reactive Energies (accord. to IEC 62053-23:2020)		
- Reactive Power (accord. to IEC 62053-21:2020)	classe	2

Supply Voltage and Power Consumption

Operating Supply Voltage range	V	92 ... 276 / 160 ... 480
Maximum Power Consumption (Voltage circuit)	VA / W	≤2 / 0.6
Maximum VA burden (Current circuit) @ Imax	VA	≤0.7
Voltage Input Waveform		AC
Voltage impedance	MΩ	1
Current impedance	mΩ	≤20

Overload capability

Voltage	continuous	phase / neutral	VAC	276
	temporary (1 s)	phase / neutral	VAC	300
Current	continuous	phase / phase	VAC	480
	temporary (1 s)	phase / phase	VAC	800
Current	continuous		A	125
	temporary (10 ms)		A	3750

Measuring Features

Voltage range	phase / neutral	VAC	92 ... 276
	phase / phase	VAC	160 ... 480
Current range		A	0.25 ... 125
Frequency range		Hz	45 ... 65
Measured Quantities		V, A, kWh, kvarh, PF, Hz, kW, kvar	
		3 phases Energy calculation	WELMEC

Display features

Display type	LCD with backlight	-	7.2 +3.2
Active Energy	7 digits + 2 decimal digits	kWh	0.01 ... 9999999.99
Voltage	3 digits + 1 decimal digit	V	92.0 ... 276.0
Current	2 digits + 2 decimal digits / 3+1 / 4+0	A	0.00 ... 125.00
Power factor	1 digit + 3 decimal digits with sign + capac./induc. indic.		-1.000 ... 1.000
Frequency	2 digits + 2 decimal digits	Hz	45.00 ... 65.00
Active Power	2 digits + 2 decimal digits	kW	0.00 ... 34.50
Reactive Power	2 digits + 2 decimal digits	kvar	0.00 ... 34.50
Apparent Power	2 digits + 2 decimal digits	kVA	0.00 ... 34.50
Running Tariff	1 digit		T1 ... T2 230V - T1 ... T8 Modbus
Display refresh period		s	1

Optical metrological LED

Front mounted red LED (meter constant)	proportional to active imp/exp Energy	imp/kWh	1000
--	---------------------------------------	---------	------

Safety

Utilization category		-	UC3
Overvoltage category		-	3
Protective class		classe	II
AC voltage test (EN 50470-3:2022)		kV	4
Degree of pollution			2
Operational voltage		V	300
Impulse voltage test (Uimp)		1.2/50 μs-kV	6.4
Housing material flame resistance	UL 94	classe	V0
Safety-sealing between upper and lower housing part		-	✓
Printed circuit board flammability class		-	V1
Material group		-	IIIa

IR Connectable Communication Modules

For communication modules		-	✓
---------------------------	--	---	---

Embedded Modbus communication

Physical interface	RS-485 - 3 wires	-	-, +, 0
Internal termination resistor		-	120 Ω
Baud rate	adjustable		1200 ... 57600
Parity	adjustable: Odd, Even, None	-	✓
Stop Bit	adjustable	-	1, 2
Address	adjustable	-	1 ... 247
Isolation class	SELV	-	✓

Tariff

Tariff 1		-	✓
Tariff 2		VAC	230 ±20%
Input impedance		kΩ	224

Environmental conditions

Storage temperature range	°C	-25 ... +70	
Operating temperature range	°C	-25 ... +55	
Mechanical environment		-	
Electromagnetic environment		-	
Installation	indoor only	-	✓
Altitude (max.)		m	≤2000
Humidity	yearly average, without condensation	-	≤75%
	on 30 days per year, without condensation	-	≤95%
IP rating	in built-in condition (front part)	-	IP51
	terminal block	-	IP20

Emission class compatibility CISPR 32

Durability Certification	according to EN 62059-32-1	
(*) Tariff management is available for active and reactive energy via communication.		