



6LE09303A

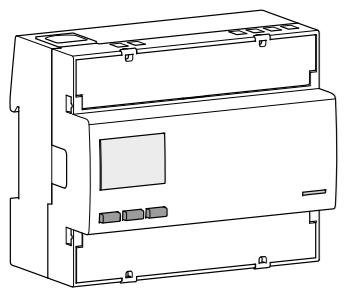


ECR312D Dreiphasen-Energiezähler, Direktanschluss 125 A mit MID-Konformitätserklärung und Modbus RTU Kommunikation...

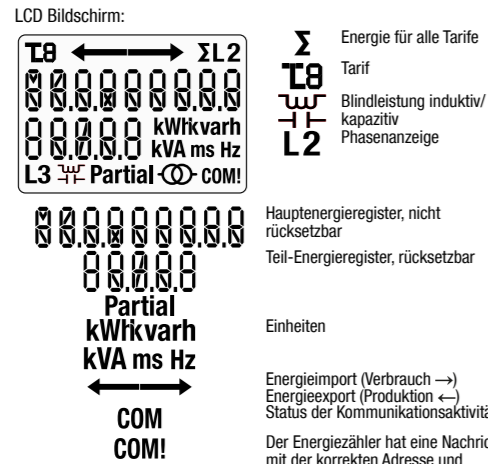


Einheiten Energieimport (Verbrauch) Energieexport (Produktion) Status der Kommunikationsaktivität...

Befehle OK ESCROLL ESCAPE Optische messtechnische LED Hinweis: Wenn für mindestens 20 Sekunden keine Taste gedrückt wird...

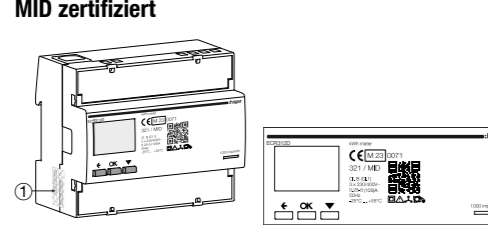

Symbolle Eine Phase Drei Phasen Geschützt durch doppelte Isolierung (Klasse II) Rücklaufsperrle: Umkehrverhinderungsgerät

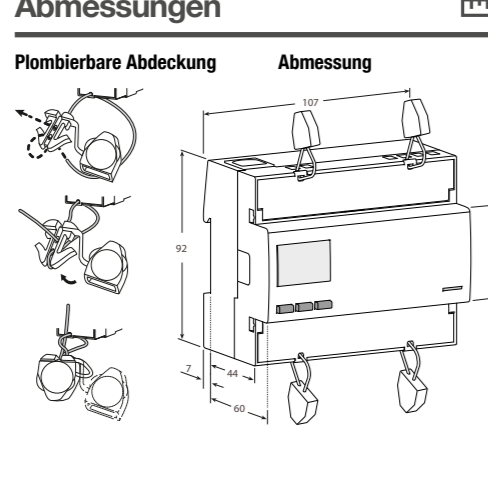


Modbus RTU Kommunikation Empfehlungen Verwenden Sie das HTG485H-Referenzkabel...

Modbus-Protokoll Das Modbus-Protokoll arbeitet auf einer Master/Slave-Struktur: Lesen (Funktion 3), Schreiben (Funktion 6 oder 16)...

Wichtig Es ist wichtig, einen Widerstand von 120 Ohm an beiden Enden der Busleitung anzuschließen.


Bestimmungsgemäße Verwendung Der Energiezähler eignet sich sowohl für die Verwendung bei mit Impedanz geerdeten Netzen...

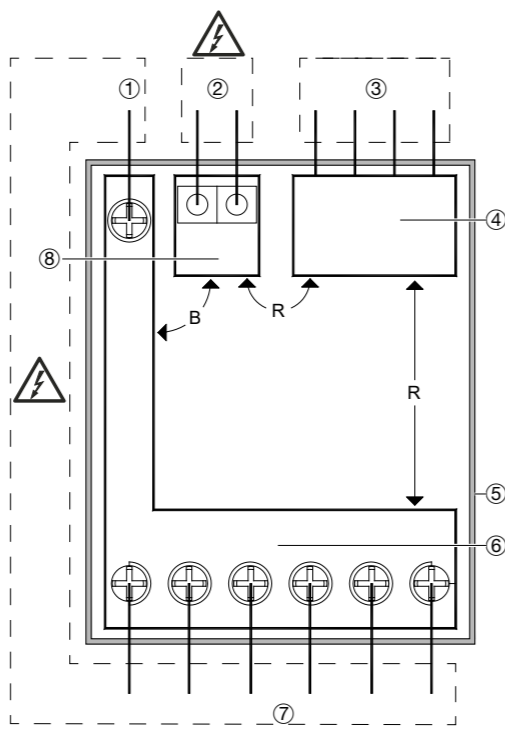

Es sind keine berührbaren Teile vorhanden Legende: B = Basisisolierung D = doppelte Isolierung R = verstärkte Isolierung F = Funktionsisolierung

- 1 HLV (Gefährliche aktive Spannung)-KLEMME, 1 Klemme für Neutralleiter
2 HLV (Gefährliche aktive Spannung)-KLEMME, 2 Klemmen für Tarifsteuereingänge
3 SELV (Sicherheitskleinspannung)-KLEMMEN, 4 Klemmen oder 2 RJ45-Steckverbinder

Wichtig Die Leitungen müssen die Norm IEC 60332-1-2:2004 erfüllen oder über eine Flammbarkheits-Bemessung von UL 2556 VV-1 verfügen.

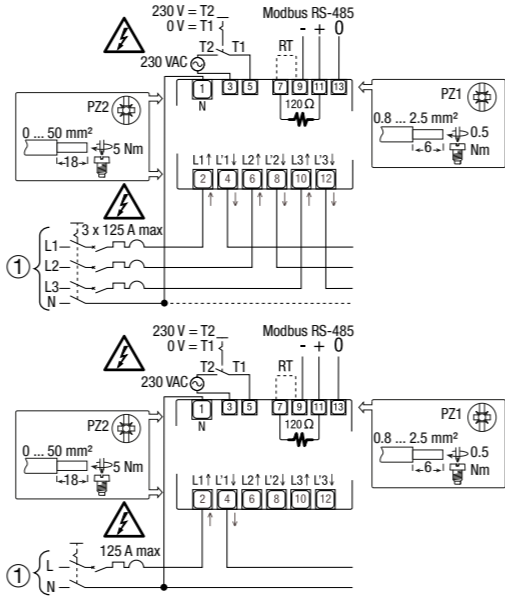

Installation Das einspeisende Schalt- oder Schutzgerät (Nummer 1 im Anschlussplan) muss leicht zu identifizieren bzw. zu bedienen und zudem nahe am Zähler installiert sein...

Inbetriebnahme Empfehlungen Folgende Punkte müssen vor der Inbetriebnahme beachtet werden: Sicherstellen, dass keine gefährliche Spannung an den SELV-Klemmen anliegen...

Wartung Sicherstellen, dass keine Spannung am Energiezähler anliegt. Es darf nur eine Trockenreinigung mit einem Naturfasertuch (bspw. aus Baumwolle) oder einem Tuch aus synthetischem Stoff...


Hilfe bei Problemen Für diesen Energiezähler ist keine Wartung bzw. Reparatur und auch kein Ersetzen von Teilen vorgesehen. Solche Eingriffe sind untersagt.

Fehlerbedingung Bei blinkender Teil-Energie, Teil-Energieregister zurücksetzen (Register für maximale Teilenergie). Wenn auf dem Display die Meldung ERROR N02 oder ERROR N03 angezeigt wird...


Main navigation menu for the meter's display, listing various screens like 'Importierte Wirkenergie', 'Exportierte Wirkenergie', 'Blindleistung', 'Scheinleistung', 'Strom', 'Strom Neutralleiter', 'Leistungsfaktor', and 'Frequenz'. It also includes a 'Diagnosemeldung' section with an error code 'L1 PHASE SEQ Error L3' and instructions to swap phases.

Technical data table containing general characteristics (Dimensions, Weight), functions (Inputs, Outputs, Accuracy), and performance data (Voltage, Current, Power, Frequency, etc.).

6LED09303A

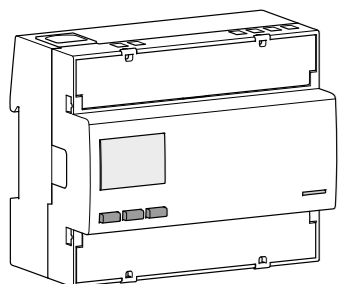


LCD display:

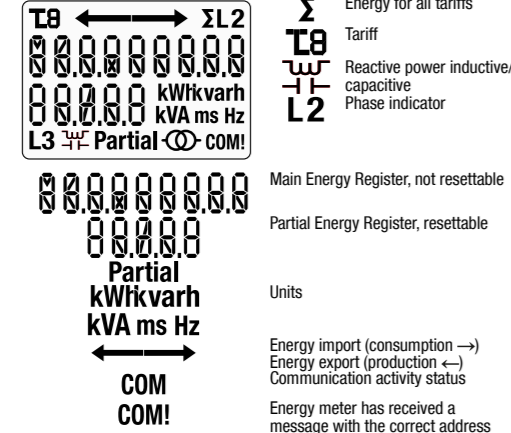

Commands

- OK** button: is used to confirm a modification of a parameter (or of a digit of a numerical parameter) or to answer to a question
- SCROLL** button: is used to scroll Menu pages or to modify the whole value or a digit of a parameter
- ESCAPE** button: is used to escape to main menu from anywhere or to skip back to the previous digit of the value under modification



MID certified

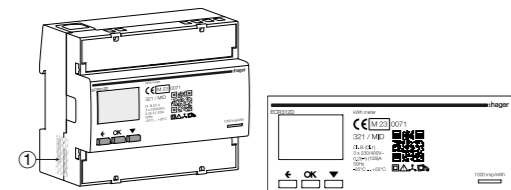

Symbols

- One phase
- Three phases
- Protected by double insulation (Class II)
- Backstop: Reversal preventing device

Dimensions

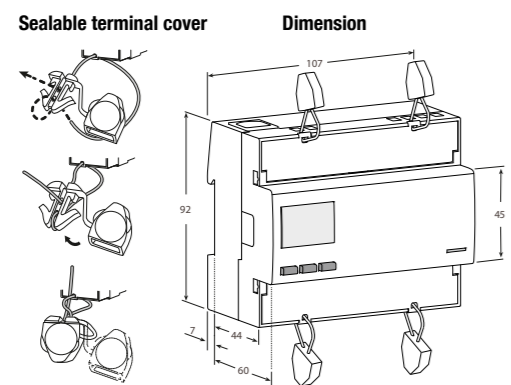


Modbus RTU Communication

Recommendations
Use HTG485H reference cable specially developed as accessory by Hager.

Modbus protocol
The Modbus protocol operates on a master/slave structure:
- Reading (Function 3),
- Writing (Function 6 or 16), broadcast option at address 0.
The communication method is RTU (Remote Terminal Unit) with hexadecimal.

Important
It is essential to connect a resistance of 120 Ohms at the 2 ends of the connection.


Intended use
The Energy Meter is suitable for use on both impedance grounded networks and not grounded networks.

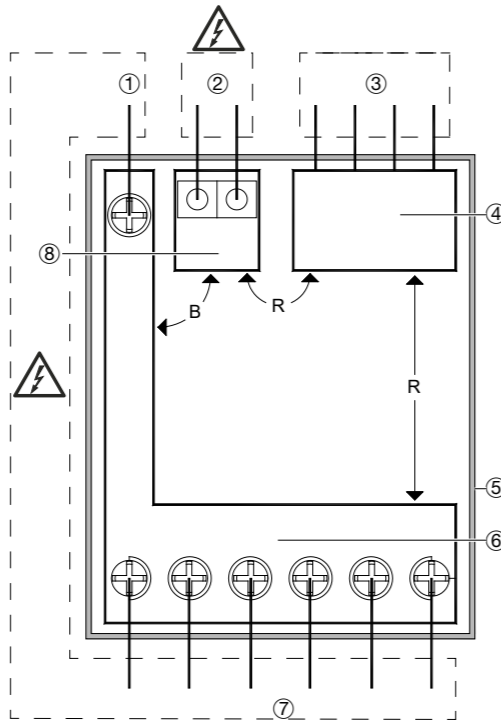

There are no accessible parts
Legend:
B = Basic Insulation
D = Double Insulation
R = Reinforced Insulation
F = Functional Insulation

- HLV TERMINAL, 1 terminal for neutral
- HLV TERMINAL, 2 terminal for tariff Input
- SELV TERMINALS, 4 terminals or 2 RJ45 connectors
- SELV CIRCUIT, (communication) working voltage <25 VAc, < 60 Vdc
- PLASTIC CASE (NOT EARTHED)
- HLV CIRCUIT, (mains) Working Voltage = 300 Vac
- HLV TERMINAL, 6 terminal for mains
- HLV CIRCUIT, (tariff input) working voltage = 300 Vac

Important
Cables must therefore comply with IEC 60332-1-2:2004 or have a flammability rate UL 2556 VW-1.

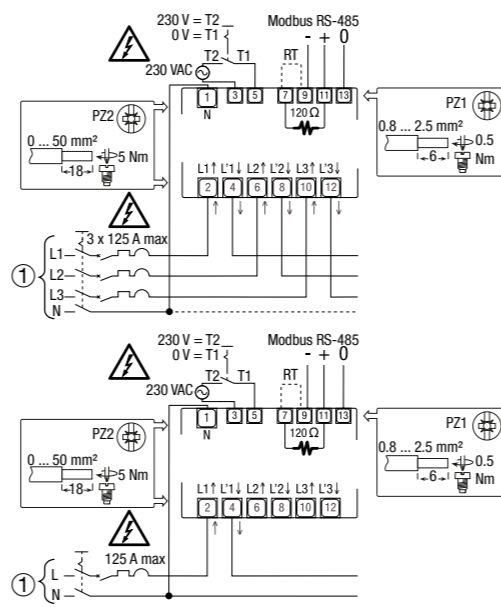

In-installation

The four-pole disconnector (reference 1) in the wiring diagrams must be easy to identify and to operate and must be close to the Meter. They both must be in "OFF" position (open circuits) from the beginning to the end of the installation or of the uninstallation. The Energy Meter, the disconnectors and the overload current protection devices must be easily identifiable. They must be installed in an adequate cabinet (IP51 and V1) and it must be easy to intervene on them if necessary. Inside the cabinet, do not install any other device with a flammability class worse than V1.

Commissioning

Recommendations
Check the following before putting it into service:
• Make sure that no dangerous voltages are connected to the SELV terminals.
• Make sure that a phase has not been connected to the Neutral terminal (this would cause the internal protections to intervene and will damage the Meter).
• Check that the main page appears on the display (see menu description) and not the Phase Sequence Error page.


Maintenance

• Make sure that no voltage is applied to the instrument.
• Only dry cleaning is allowed with a natural fiber cloth (for example cotton or linen) or synthetic fabric that does not leave residual fibers that can remain on the surface of the Energy Meter or that can penetrate into the Energy Meter.

For this Energy meter, no maintenance, repair or replacement of parts is foreseen. Such interventions are to be considered prohibited. In case of malfunction, it must be replaced.

Help in case of problems

Error condition
When partial energy blinks, reset partial energy (maximum partial energy register). When the display shows the message **ERROR NO2** or **ERROR NO3**, the meter has got a malfunction and must be replaced.

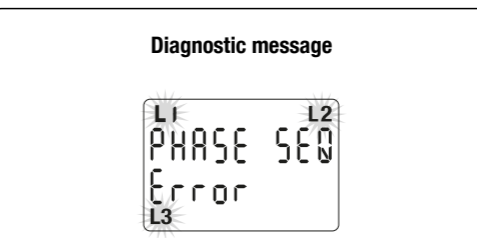

The cabling sequence (L1-L2-L3) is wrong. L1, L2 and L3 icons blink. Invert the voltage wires of 2 phases (phase 1 < > phase 2 or phase 2 < > phase 3). Otherwise, by pressing the "OK" button for at least 5 seconds, the message disappears until the next restart.

Data in compliance with EN 62052-11:2021+A11:2022, EN 62052-31:2016-06, IEC 62052-31, EN 62059-32-1:2012				
General characteristics				
Housing	DIN 43880	DIN	60	
Mounting	EN 60715	DIN rail	35 mm	
Depth		mm	60	
Weight		g	700	
Operating features				
Connection	to single-phase network - number of wires	-	2 (L1)	
	to three-phase network - number of wires	-	4	
Storage of energy values and configuration	Internal flash non volatile memory	-	ET	
Tariff	for active and reactive energy	-	T1 ... T2 230V - T1 ... T8 Modbus	
Approval (EN 62052-31:2016-06 EN 50470-3:2022)				
Reference Voltage (Un)	phase / neutral	VAC	230	
	phase / phase	VAC	400	
Reference Current (In)		A	5	
Minimum Current (Imin)		A	0.25	
Maximum Current (Imax)		A	125	
Starting Current (Ist)		A	0.020	
Transitional Current (It)		A	0.05	
Reference Frequency (fn)		Hz	50	
Number of phases / number of wires			3 / 4	
Certified Measures		kWh	→ kWh ← kWh	
Accuracy				
- Active Energies (accord. to EN 50470-3:2022)		classe	B / 1	
- Active Powers (accord. to IEC 62053-21:2020 and IEC 61557-12:2018)				
- Reactive Energies (accord. to IEC 62053-23:2020)		classe	2	
- Reactive Power (accord. to IEC 62053-21:2020)				
Supply Voltage and Power Consumption				
Operating Supply Voltage range		V	92 ... 276 / 160 ... 480	
Maximum Power Consumption (Voltage circuit)		VA / W	≤2 / 0.6	
Maximum VA burden (Current circuit) @ Imax		VA	≤0.7	
Voltage Input Waveform			AC	
Voltage impedance		MΩ	1	
Current impedance		mΩ	≤20	
Overload capability				
Voltage	continuous	phase / neutral	VAC	276
	temporary (1 s)	phase / neutral	VAC	300
continuous	phase / phase	VAC	480	
	temporary (1 s)	phase / phase	VAC	800
Current	continuous	A	125	
	temporary (10 ms)	A	3750	
Measuring Features				
Voltage range	phase / neutral	VAC	92 ... 276	
	phase / phase	VAC	160 ... 480	
Current range		A	0.25 ... 125	
Frequency range		Hz	45 ... 65	
Measured Quantities		V, A, kWh, kvarh, PF, Hz, kW, kvar		
3 phases Energy calculation			ARN	
Display features				
Display type	LCD with backlight		7.2 +3.2	
Active Energy	7 digits + 2 decimal digits	kWh	0.01 ... 9999999.99	
Reactive Energy	7 digits + 2 decimal digits	kvarh	0.01 ... 9999999.99	
Voltage	3 digits + 1 decimal digit	V	92.0 ... 276.0	
Current	2 digits + 2 decimal digits / 3+1 / 4+0	A	0.00 ... 125.00	
Power factor	1 digit + 3 decimal digits with sign + capac./induc. indic.		-1.000 ... 1.000	
Frequency	2 digits + 2 decimal digits	Hz	45.00 ... 65.00	
Active Power	2 digits + 2 decimal digits	kW	0.00 ... 34.50	
Reactive Power	2 digits + 2 decimal digits	kvar	0.00 ... 34.50	
Apparent Power	2 digits + 2 decimal digits	kVA	0.00 ... 34.50	
Running Tariff	1 digit		T1 ... T2 230V - T1 ... T8 Modbus	
Display refresh period		s	1	
Optical metrological LED				
Front mounted red LED (meter constant)	proportional to active imp/exp Energy	imp/kWh	1000	
Safety				
Utilization category			UC3	
Overvoltage category			3	
Protective class		classe	II	
AC voltage test (EN 50470-3:2022)		kV	4	
Degree of pollution			2	
Operational voltage		V	300	
Impulse voltage test (Uimp)		1/250 μs-kV	6.4	
Housing material flame resistance		UL 94		
Safety-sealing between upper and lower housing part			CE	
Printed circuit board flammability class			V1	
Material Group			IIIa	
IR Connectable Communication Modules				
For communication modules			CE	
Embedded Modbus communication				
Physical interface	RS-485 - 3 wires		-, +, 0	
Internal termination resistor		Ω	120	
Baud rate	adjustable	bps	1200 ... 57600	
Parity	adjustable: Odd, Even, None		CE	
Stop Bit	adjustable		1, 2	
Address	adjustable		1 ... 247	
Isolation class	SELV		CE	
Tariff				
Tariff 1			CE	
Tariff 2		VAC	230 ±20%	
input impedance		kΩ	224	
Environmental conditions				
Storage temperature range		°C	-25 ... +70	
Operating temperature range		°C	-25 ... +55	
Mechanical environment			-	
Electromagnetic environment			E1	
Installation	indoor only		CE	
Altitude (max.)		m	≤2000	
Humidity	yearly average, without condensation		≤75%	
	on 30 days per year, without condensation		≤95%	
IP rating	in built-in condition (front part)		IP51	
	terminal block		IP20	
Emission class compatibility CISPR 32		classe	B	
Durability Certification	according to EN 62059-32-1			